



COMPACT DRIVE CDU

INSTRUCTION MANUAL - English

Valid for the following Models:
CDU40-013 to CDU40-046
Software version: 3.XX

COMPACT DRIVE CDU

INSTRUCTION MANUAL - English

Document number: 01-2556-01

Edition: r2

Date of release: 2005-05-30

© Copyright Emotron AB 2005

Emotron retain the right to change specifications and illustrations in the text, without prior notification. The contents of this document may not be copied without the explicit permission of Emotron AB.

SAFETY INSTRUCTIONS

Instruction manual

Read the instruction manual first!

General safety measures

Electric drives are equipped with hazardous live parts and rotating parts. Therefore, severest personal and physical damages can be caused through non-intended use, because of faulty operation, through imperfect maintenance and because of non-permissible disassembly of protective devices.

- In case of non-permissible removal of the necessary coverings hazardous voltages
- In case of improper handling danger through rotating parts
- After having realized the installation, the full-load operating voltage can exist with stopped drive (n = 0)!

The persons being responsible for the safety of an installation or of an apparatus equipped with compact drives must guarantee that :

- only qualified persons (definition for skilled persons see IEC 364) will be engaged to realize any work, though it should be noted that the documents for the mounting, the commissioning, the operation, the maintenance and the repair of the compact drive are available and that they are to be observed;
- non-qualified persons are not authorized to realize any work;
- in case of commissioning, the key is secured;
- the conditions on the site coincide with all data given on the rating plate, in particular the indicated degree of protection is realized by the driven machine, corresponding details are part of the EN60034-5;
- the eye bolts or shackles are exclusively intended for transporting the equipment and that additional parts or loads must never be attached (only for lifting the compact drives without additional attachments such as base plates, gears);
- transport lockings are removed before the commissioning;
- packed drives with recognizable damages must never be put into operation;
- the informations about the technical data and operating conditions (such as determined in the documents being part of the compact drive), the general safety and mounting regulations and the specific regulations of the installation and of the operation are followed;
- in case of types of construction with the shaft end upwards, there must be taken measures preventing that foreign matters can fall into the ventilation system (types of construction with the shaft end downwards are to be provided, on the parts of the works, with a covering of the ventilation system);
- the unhindered ventilation of the compact drives is ensured (the informations given by part of the manufacturer are to be observed in this connection);

- the connection is realized in released state being protected against restarting;
- before the initial start for the first time, there is to be checked if the drive is running in the required direction of rotation;
- the reasons for every variation in view of the normal operation, in particular the reasons for modified noise, for modified temperatures and for the reaction of protective devices are determined and eliminated by qualified personnel; if there is any doubt, the compact drive is to be switched-off immediately.

The warranty requires the observance of the safety regulations and of the operating instructions as well as the intended use.

These safety instructions don't make claim to be exhaustive. In case of questions and problems, please contact the supplier.

The manufacturer doesn't give any warranty that the connection examples are suitable for every use.

The manufacturer has checked the compact drives and the operating instructions carefully. But no warranty can be given with regard to freedom from faults.

NOTE! Subject to engineering change without prior notice.

Software version

Check always that the software version number on the title page of this instruction manual is the same as the software used in the inverter. This can easily be checked in the Setup menu in window [920] Software, see § 5.10.2, pagina 65 (option HCP installed).

Technically qualified personnel

Installation, commissioning, demounting, making measurements, etc, of or on the frequency inverter may only be carried out by personnel technically qualified for the task.

Installation

The installation must be made by authorised personnel and must be made according to the local standards.

Opening the compact drive



DANGER! ALWAYS SWITCH OFF THE MAINS VOLTAGE BEFORE OPENING THE INVERTER AND WAIT AT LEAST 5 MINUTES TO ALLOW THE BUFFER CAPACITORS TO DISCHARGE.

Always take adequate precautions before opening the frequency inverter. Although the connections for the control signals and the jumpers are isolated from the main voltage. Always take adequate precautions before opening the frequency inverter.

Precautions to be taken with a connected motor

If work must be carried out on a connected motor or on the driven machine, the mains voltage must always first be disconnected from the frequency inverter. Wait at least 5 minutes before starting work.

Earthing

The frequency inverter must always be earthed via the mains safety earth connection, indicated by "PE".

EMC Regulations

In order to comply with the EMC directive it is absolutely necessary to follow the installation instructions.

Mains voltage selection

The frequency inverter is suitable for use with the main voltages listed in § 8.1, pagina 71. Adjustment of the mains voltage is not necessary!

Voltage tests (Megger)

Do not carry out voltage tests (megger) on the motor, before all the motor cables are disconnected from the frequency inverter.

Condensation

If the frequency inverter is moved from a cold (storage) room to a room where it will be installed, condensation can occur. This can result in sensitive components becoming damp. Do not connect the mains voltage until all visible dampnesses have evaporated.

Incorrect connection

The frequency inverter is not protected against incorrect connection of the main voltage, and in particular against connection of the mains voltage to the motor outlets U, V, W. The frequency inverter can be damaged in this way.

Precautions during Autoreset

When the automatic reset is active, the motor will restart automatically provided that the cause of the trip has been removed. If necessary take the appropriate precautions. More information on causes of tripping and recovery can be found in chapter 6. page 66.

Transport

If possible, the compact drives should be stored in closed and dry rooms only. A storing in outdoor roofed areas is permitted for a short time only. Temporary storage in the open requires adequate protection against all harmful environmental influences. Moreover, the compact drives are to be protected against mechanical damages. The compact drives must never be transported or placed on the fan cowls. For the transport, the eye bolts of the compact drives are to be applied using appropriate fixing means.

The eye bolts are intended only for lifting the compact drives without such additional parts as base plates, gears etc.

IT Mains supply

Before connecting the inverter to a IT mains supply, (non-earthed neutral), please contact your supplier.

Mechanical installation

The transmission member (such as coupling, pinion or pulley) should be mounted by means of pull-on devices and / or the part to be mounted is to be warmed up. For this, the shaft ends are fitted with threaded center bores according to DIN 332 part 2.

Transmission members must never be driven onto the shaft by hammer blows because shaft, bearings and other components of the compact drive can be damaged. All the parts which have to be attached to the shaft are to be balanced dynamically. The rotors are balanced with half key.

If possible, the compact drives are to be installed so that they are free from vibration.

Direct coupling with the driven machine requires exact alignment. The shafts of both machines must be in line. By means of suitable shims, the shaft height is to be adapted to the driven machine.

The required minimum diameter of the belt pulley and the correct relation of the belt tension to the belt pulley diameter are to be observed in case of belt drive because an excessive pretension can be the cause for bearing damages and shaft failures.

The dimensions of the belt pulley are to be determined according to the kind of belt, the transmission and the power to be transmitted.

Vent holes are to be kept free and required minimum distances are to be observed so that the cooling will not be reduced. In case of intensive cooling air pollution, countermeasures are to be taken. It is to be taken care that the discharged warmed up cooling air will not be aspirated again.

In case of the open air installation of the compact drives is to be observed that the compact drives are protected against direct atmospheric influences (such as rain, snow and ice, solid freezing of the fan). No operation below -20 °C.

The type of construction permissible for the compact drives is stated on the rating plate. An application to different types of construction is only allowed by permission of the manufacturer and, if necessary, after reconstruction according to the manufacturer's instructions.

Electrical installation

For the electrical installation are to be observed the general guidelines for installation:

- EN61800-5

Erection of power installations up to 1000 V

- EN60204-1

Electrical equipment of machines

- EN50178

Electronic equipment for use in electrical power installations

- The operation of the compact drive is only permissible with correct protective earth-terminal.

All the operations are only to be carried out when the compact drive is in dead state.



DANGER: After having realized the installation, the full-load operating voltage can exist with stopped drive (n = 0)!

The installation has to be carried out according to the valid prescriptions by qualified skilled personnel.

First, the mains conditions (voltage and frequency) are to be compared with the data on the rating plate of the compact drive. The dimensions of the connecting cables are to be adapted to the rated currents of the compact drive.

For checking the sense of rotation of the compact drives, a direction arrow is provided on the housing. Before connecting the driven machine, the sense of rotation of the compact drive is to be checked for preventing possible damages at the driven machine. The direction of rotation can be modified by preselection. Before closing the terminal box, there is to be checked that

- all terminal box connections are tightened
- the inside of the terminal box is clean and free from foreign matters
- unused cable entries are closed and the screw plugs are tightened

Before starting the compact drive is to be checked that all the safety regulations are kept strictly. This is also valid for the operation and for the disconnection of the compact drive. The compact drive is to be connected to the mains according to the EN rules so that it can be separated from the mains by means of corresponding iso-lating means (eg. main switch, contactor).

Without additional measures, the compact drive must never be connected to a mains with residual-current-operated circuit breaker.

Mainly, the existing leakage current is caused through interference suppression mea-sures. There are no additional leakage currents as a result from the capacitive reac-tance between motor phases and shield of the motor cable.

In case of short circuit to earth, a direct component in the fault current can prevent the release of the residual-current-operated circuit breaker. Consequently, there can only be used residual-current-operated circuit breakers being suitable for the frequency converter operation (DC fault current).

Cleaning

To prevent impairing of the effects of cooling air, all the parts of the compact drive have to be cleaned at regular intervals. In most cases it suffices to blow-out the compact drive with compressed air that must be free from water and oil.

Particular attention should be given to the cleaning of vent holes and the spaces bet-ween the ribs.

We recommend to include the compact drives into the usual routine inspections of the driven machine.

Bearings

The antifriction bearings of the compact drives are life-lubricated on the part of the works.

Under normal load and environmental conditions, the quality of grease ensures pro-per operation of the motor for about 10 000 service hours with two-pole design and 20 000 service hours with four-pole design. If not otherwise agreed, the grease of antifriction bearings must never be refilled during this period. The stated service hours are only valid under operation with 1500 r.p.m. or 3000 r.p.m.

After this running time, the bearings should be changed by a service agency.

Guarantee, repair, spare parts

Unless otherwise agreed upon, only our service agencies are licensed to carry out repairs within the guarantee period. Moreover, all the other repairs, possibly being necessary, will be realized there. Informations concerning our Service Organization are available on request. The same applies to the spare parts lists.

TABLE OF CONTENTS

1. GENERAL INFORMATION	9	4.2.5	Reset and Autoreset operation.....	25	
1.1	Introduction	9	4.2.6	Frequency Direction and Rotation.....	26
1.2	Description	9	4.3	Use of the Parameter Sets	26
1.2.1	Users	9	4.4	Use of the Control Panel Memory	27
1.2.2	Motors.....	9	5. FUNCTIONAL DESCRIPTION OF		
1.2.3	Standards	9	SETUP MENU	28	
1.3	Use of the instruction manual.....	10	5.1	Resolution of settings	28
1.4	Delivery and unpacking	10	5.2	Start window [100].....	28
1.5	Type number.....	10	5.2.1	1st Line [110].....	28
1.6	Standards	11	5.2.2	2nd Line [120].....	28
1.6.1	Product standard for EMC	11	5.3	Main set-up [200]	29
1.7	Dismantling and scrapping.....	11	5.3.1	Operation [210].....	29
2. INSTALLING AND OPERATING		5.3.2	V/Hz Curve [211]	29	
MODEL N AND MODEL C	12	5.3.3	Reference control [212]	29	
2.1	Model N.....	12	5.3.4	Run/Stop/Reset control [213].....	30
2.1.1	General	12	5.3.5	Rotation [214]	31
2.1.2	LED indications.....	12	5.3.6	Level/Edge control [215].....	31
2.1.3	Connection example	13	5.3.7	IxR Compensation [216].....	31
2.2	Model C.....	14	5.3.8	Mains [217]	31
2.2.1	General	14	5.3.9	Motor data [220].....	32
2.2.2	LED indications and control keys.....	14	5.3.10	Motor power [221]	32
2.2.3	Connection example	15	5.3.11	Motor voltage [222]	32
3. INSTALLATION AND		5.3.12	Motor frequency [223].....	32	
CONNECTION	16	5.3.13	Motor current [224]	32	
3.1	Control signals connections, default settings	16	5.3.14	Motor Speed [225].....	32
3.2	Control signal connections in accordance with EMC-directives.....	17	5.3.15	Motor cos PHI [226].....	32
3.2.1	Types of control signals	17	5.3.16	Actual pole number [229].....	32
3.2.2	Single-ended or double-ended connection?	17	5.3.17	Limited max frequency [22A]	32
3.2.3	Current control (0-20mA).....	17	5.3.18	Utility [230].....	32
3.2.4	Twisted cables.....	18	5.3.19	Language [231].....	32
3.3	Inputs/outputs configuration with the jumpers.....	18	5.3.20	Keyboard (un)lock [232].....	32
3.4	Stop categories and emergency stop	18	5.3.21	Copy Set [233].....	33
3.5	Definitions.....	19	5.3.22	Select set no. [234]	33
4. OPERATION OF THE FREQUENCY		5.3.23	Default values [235]	33	
INVERTER	20	5.3.24	Copy all settings to Control Panel [236].....	33	
4.1	Operating the control panel.....	20	5.3.25	Load Parameter Sets from Control Panel[237]	33
4.1.1	LCD display	20	5.3.26	Load the active Parameter Set from Control Panel [238].....	34
4.1.2	LED indication	21	5.3.27	Load all settings from Control Panel [239]	34
4.1.3	The Toggle Key	21	5.3.28	Autoreset [240]	34
4.1.4	Control keys	21	5.3.29	Number of Trips [241]	34
4.1.5	Function keys	21	5.3.30	Selection of Autoreset trips	34
4.1.6	Menu structure.....	22	5.3.31	Option: Serial communication [250].....	35
4.1.7	Short description of the setup menu	22	5.3.32	PTC [260]	35
4.1.8	Programming during operation	22	5.3.33	PTC [261]	35
4.1.9	Programming example.....	23	5.3.34	Macros [270].....	35
4.2	Operation of the Run/Stop/Enable/Reset functions	24	5.3.35	Select Macro [271]	35
4.2.1	Default settings of the Run/Stop/Enable/Reset functions.....	24	5.3.36	Pump Control [280]	37
4.2.2	Enable and Stop functions.....	24	5.4	Parameter Sets [300]	38
4.2.3	Run Inputs Level-controlled.....	24	5.4.1	Run/Stop [310]	38
4.2.4	Run Inputs Edge-controlled	25	5.4.2	Acceleration time [311]	38
			5.4.3	Acceleration time for MotPot [312]	38
			5.4.4	Acceleration time to Min. Frequency [313].....	38
			5.4.5	Acceleration ramp type [314].....	38

5.4.6	Deceleration time [315]	39	5.5.21	AnOut 1 Setup [432]	51
5.4.7	Deceleration time for MotPot [316].....	39	5.5.22	AnOut 1 Offset [433].....	51
5.4.8	Deceleration time to Min. Frequency [317]	39	5.5.23	AnOut 1 Gain [434]	52
5.4.9	Deceleration ramp type [318].....	39	5.5.24	AnOut 2 function [435].....	52
5.4.10	Start Mode [319].....	39	5.5.25	AnOut 2 Set-up [436].....	52
5.4.11	Stop Mode [31A]	39	5.5.26	AnOut 2 Offset [437].....	52
5.4.12	Spinstart [31B].....	40	5.5.27	AnOut 2 Gain [438]	52
5.4.13	Frequencies [320].....	40	5.5.28	Digital Outputs [440]	52
5.4.14	Minimum Frequency [321].....	40	5.5.29	DigOut 1 Function [441]	52
5.4.15	Maximum Frequency [322]	40	5.5.30	DigOut 2 Function [442]	53
5.4.16	Min Freq Mode [323].....	40	5.5.31	Relays [450]	53
5.4.17	Frequency Direction [324].....	41	5.5.32	Relay 1 Function [451]	53
5.4.18	Motor Potentiometer [325]	41	5.5.33	Relay 2 Function [452]	53
5.4.19	Preset Frequency 1 [326] to Preset Frequency 7 [32C]	41	5.6	Set/View reference value [500].....	54
5.4.20	Skip Frequency 1 Low [32D]	42	5.7	View operation [600]	54
5.4.21	Skip Frequency 1 High[32E].....	42	5.7.1	Speed [610].....	54
5.4.22	Skip Frequency 2 Low [32F].....	42	5.7.2	Load [620]	54
5.4.23	Skip Frequency 2 High [32G]	42	5.7.3	Electrical power [630].....	54
5.4.24	Jog Frequency [32H].....	42	5.7.4	Current [640].....	54
5.4.25	Frequency priority.....	43	5.7.5	Output Voltage [650]	54
5.4.26	Torque [330].....	43	5.7.6	DC-Link voltage [660]	54
5.4.27	Torque Limit [331]	43	5.7.7	Heat sink temperature [670]	54
5.4.28	Maximum Torque [332]	43	5.7.8	FI status [680].....	55
5.4.29	Controllers [340].....	43	5.7.9	Digital input status [690].....	55
5.4.30	Flux optimization [341].....	43	5.7.10	Analogue input status [6A0].....	55
5.4.31	Sound Characteristic [342]	43	5.7.11	Run time [6B0].....	55
5.4.32	PID Controller [343].....	44	5.7.12	Reset Run time [6B1]	56
5.4.33	PID P Gain [344]	44	5.7.13	Mains time [6C0].....	56
5.4.34	PID I Time [345]	44	5.7.14	Energy [6D0].....	56
5.4.35	PID D Time [346].....	44	5.7.15	Reset Energy [6D1]	56
5.4.36	Limits/protections [350]	44	5.7.16	Process Speed [6E0]	56
5.4.37	Low Voltage Override [351].....	44	5.7.17	Set Process Unit [6E1].....	56
5.4.38	Rotor locked[352]	45	5.7.18	Set Process Scale [6E2]	57
5.4.39	Motor lost [353]	45	5.7.19	Warning [6F0].....	57
5.4.40	Motor I2t Type [354].....	45	5.8	View trip log [700].....	58
5.4.41	Motor I2t Current [355]	46	5.8.1	Trip 1 [710] to trip 10 [7A0].....	58
5.5	I/O [400].....	47	5.8.2	Reset trip log [7B0]	58
5.5.1	Analogue Inputs [410].....	47	5.9	Monitor [800]	58
5.5.2	AnIn1 Function [411].....	47	5.9.1	Alarm functions [810].....	58
5.5.3	AnIn 1 Set-up [412].....	47	5.9.2	Alarm Select[811]	58
5.5.4	AnIn 1 Offset [413]	48	5.9.3	Alarm Trip [812]	59
5.5.5	AnIn 1 Gain [414].....	48	5.9.4	Ramp Alarm [813].....	59
5.5.6	AnIn2 Function [415].....	48	5.9.5	Alarm start delay [814].....	59
5.5.7	AnIn 2 Set-up [416].....	48	5.9.6	Alarm response delay [815]	59
5.5.8	AnIn 2 Offset [417]	49	5.9.7	Auto set function[816].....	59
5.5.9	AnIn 2 Gain [418].....	49	5.9.8	Max Alarm level (Overload) [817]	59
5.5.10	Digital Inputs [420]	49	5.9.9	Max Pre-alarm level (Overload) [818].....	60
5.5.11	DigIn 1 [421]	49	5.9.10	Min Alarm level (Underload) [819].....	60
5.5.12	DigIn 2 [422]	50	5.9.11	Min Pre-alarm level (Underload) [81A]	60
5.5.13	DigIn 3 [423]	50	5.9.12	Comparators [820].....	62
5.5.14	DigIn 4 [424]	50	5.9.13	Analogue Comparator 1 value [821]	62
5.5.15	DigIn 5 [425]	50	5.9.14	Analogue Comparator 1 constant [822].....	62
5.5.16	DigIn 6 [426]	50	5.9.15	Analogue Comparator 2 value [823]	62
5.5.17	DigIn 7 [427]	51	5.9.16	Analogue Comparator 2 constant [824].....	63
5.5.18	DigIn 8 [428]	51	5.9.17	Digital Comparator 1 [825]	63
5.5.19	Analogue Outputs [430]	51	5.9.18	Digital Comparator 2 [826]	63
5.5.20	AnOut 1 function [431].....	51	5.9.19	Logic Output Y [830].....	63
			5.9.20	Y Comp 1 [831]	64

5.9.21	Y Operator 1 [832]	64
5.9.22	Y Comp 2 [833]	64
5.9.23	Y Operator 2 [834]	64
5.9.24	Y Comp 3 [835]	64
5.9.25	Logic function Z [840].....	64
5.9.26	Z Comp 1 [841]	65
5.9.27	Z Operator 1 [842]	65
5.9.28	Z Comp 2 [843]	65
5.9.29	Z Operator 2 [844]	65
5.9.30	Z Comp 3 [845]	65
5.10	View system data [900]	65
5.10.1	Type [910]	65
5.10.2	Software [920]	65

6. FAULT INDICATION, DIAGNOSES AND MAINTENANCE 66

6.1	Trips, warnings and limits.....	66
6.2	Trip conditions, causes and remedy	67
6.2.1	Technically qualified personnel.....	67
6.2.2	Opening the frequency inverter.....	67
6.2.3	Precautions to be taken with a connected motor... ..	67
6.2.4	Autoreset Trip	67
6.3	Maintenance	69

7. OPTIONS 70

7.1	Handheld Control Panel (HCP)	70
7.2	I/O Board	70
7.3	Serial communication, fieldbus	70

8. TECHNICAL DATA 71

8.1	General electrical specifications.....	71
8.2	Electrical specifications related to type	72
8.3	Environmental conditions.....	72
8.4	Fuses, cable cross-sections and glands.....	72

9. SETUP MENU LIST 73

10. PARAMETER SET LIST 75

11. INDEX 76

REPRESENTATION 79

LIST OF TABLES

Tabel 1	Standards	11
Tabel 2	LED indication	12
Tabel 3	Locked functions.....	14
Tabel 4	The functions of the LED´s.....	14
Tabel 5	Control keys.....	14
Tabel 7	Jumper settings	18
Tabel 8	Definitions.....	19
Tabel 9	LED indication	21
Tabel 10	Control keys.....	21
Tabel 11	Function keys	21
Tabel 12	Parameter Set	26
Tabel 13	Parameter Set functions.....	27
Tabel 14	Resolutions of settings	28
Tabel 15	Macro Loc/Rem Ana	35
Tabel 16	Macro Loc/Rem Comm.....	36
Tabel 17	Macro PID	36
Tabel 18	Macro Preset Frequency.....	37
Tabel 19	Macro MotPot	37
Tabel 20	Macro Pump/Fan	37
Tabel 21	Preset.....	41
Tabel 22	Frequency priority.....	43
Tabel 23	Set/view reference value.....	54
Tabel 24	FI status	55
Tabel 25	Truth table for the logical operators	64
Tabel 26	Trips, warnings and limits.....	66
Tabel 27	Trip condition.....	68
Tabel 28	General electrical specifications.....	71
Tabel 29	Electrical specifications related to type 400V....	72
Tabel 30	Environmental conditions.....	72

LIST OF DRAWINGS

Fig. 1	Type number	10	Fig. 65	Analogue input status	55
Fig. 2	Model N	12	Fig. 66	Trip 3	58
Fig. 3	Model N with option HCP	12	Fig. 67	Alarm functions.....	61
Fig. 4	LED indication.....	12	Fig. 68	Analogue Comparator	62
Fig. 5	Connection example Model N.....	13	Fig. 69	Digital comparator	63
Fig. 6	Model C	14	Fig. 70	Example Type.....	65
Fig. 7	Model C with option HCP.....	14	Fig. 71	Example software version	65
Fig. 8	LED indication with control keys.....	14	Fig. 72	Autoreset trip	67
Fig. 9	Connection example Model C.....	15	Fig. 73	HCP	70
Fig. 10	Electro Magnetic (EM) screening of control signal cables.....	17	Fig. 74	Connection of a serial link.	70
Fig. 11	Location of connectors and jumpers.	18			
Fig. 12	Control Panel.	20			
Fig. 13	The Display.....	20			
Fig. 14	Example upper level menu (Main Menu).....	20			
Fig. 15	Example mid level menu (Submenu tens).....	20			
Fig. 16	Example lower level menu (Submenu units)	20			
Fig. 17	LED indications	21			
Fig. 18	Toggle memory	21			
Fig. 19	Menu structure.	22			
Fig. 20	Programming example	23			
Fig. 21	Default setting Run/Reset commands.	24			
Fig. 22	Functionality of the Stop and Enable input	24			
Fig. 23	Wiring example Run/Stop/Enable/Reset inputs. ..	24			
Fig. 24	Input and output status for level control.	25			
Fig. 25	Input and output status for edge control.....	25			
Fig. 26	Selecting the Parameter Sets.....	26			
Fig. 27	Copy: - Complete Set-up.....	27			
Fig. 28	Load: - Complete Set-up - All Parameter Sets - Active Parameter Set.....	27			
Fig. 29	Display functions.	28			
Fig. 30	V/Hz curves.....	29			
Fig. 31	Reference Control = Rem/DigIn 2.....	29			
Fig. 32	Reference Control =Comm/DigIn 2.....	30			
Fig. 33	Run/stp Control = Rem/DigIn 2.	30			
Fig. 34	Run/Stp Control =Comm/DigIn 2.....	30			
Fig. 35	IxR Comp at Linear V/Hz curve.....	31			
Fig. 36	IxR Comp at Square V/Hz curve	31			
Fig. 37	Local / Remote Ana macro	36			
Fig. 38	Local/Remote Comm macro.....	36			
Fig. 39	PID Macro.....	36			
Fig. 40	Preset Frequency.....	37			
Fig. 41	MotPot macro	37			
Fig. 42	Acceleration time and maximum frequency.	38			
Fig. 43	Acceleration and deceleration times.	38			
Fig. 44	S-curve acceleration ramp.	39			
Fig. 45	S-curve deceleration ramp.....	39			
Fig. 46	Min Frq Mode = Scale.	40			
Fig. 47	Min Frq Mode = Limit.	40			
Fig. 48	Min Frq Mode = Stop.....	41			
Fig. 49	Skip Frequency.	42			
Fig. 50	Jog command.....	42			
Fig. 51	Flux Optimizing	43			
Fig. 52	Closed loop PID control.	44			
Fig. 53	Low Voltage Override.....	45			
Fig. 54	I2t function.....	46			
Fig. 55	Normal full-scale configuration.	47			
Fig. 56	2-10V/4-20mA (Live Zero).	47			
Fig. 57	Function of the AnIn Offset setting.....	48			
Fig. 58	Function of the AnIn Gain setting.	48			
Fig. 59	Inverted reference	48			
Fig. 60	MotPot function.	50			
Fig. 61	AnOut 4-20mA.	51			
Fig. 62	AnOut Gain setting.....	52			
Fig. 63	Drive status.....	55			
Fig. 64	Digital input status example.	55			

1. GENERAL INFORMATION

1.1 Introduction

The frequency inverter is intended for controlling pump and fan loads with quadratic characteristics and many other applications which require low dynamic performance. The inverter is equipped with a sophisticated vector modulator which uses a modern DSP (Digital Signals Processor). The modulation principle is based on the so-called V/Hz method. Various features and option cards make the inverter flexible to operate in many different applications.

Read this instruction manual carefully before starting installation, connection or working with the frequency inverter.

The following indications can appear in this manual. Always read these first before continuing:

NOTE! Additional information as an aid to avoiding problems.

CAUTION



Failure to follow these instructions can result in malfunction or damage to the frequency inverter.

WARNING



Failure to follow these instructions can result in serious injury to the user in addition to serious damage to the frequency inverter.

DANGER



The life of the user is in danger.

1.2 Description

This instruction manual describes the installation and use of the frequency inverters with the following type codes:

CDU40-013 to CDU40-046

1.2.1 Users

This instruction manual is intended for:

- installation engineers
- maintenance engineers
- operators
- designers
- service engineers

1.2.2 Motors

The frequency inverter is suitable for use with standard 3-phase asynchronous motors. In certain conditions it is possible that other types of motors may be used. Contact your supplier for details.

1.2.3 Standards

For the applicable standards, see § 1.6, pagina 11.



CAUTION! In order to comply fully with the standards stated in the Manufacturer's Declaration, the installation instructions detailed in this instruction manual must be strictly followed.

1.3 Use of the instruction manual

Within this instruction manual the word “inverter” is used to indicate the complete frequency inverter as a single unit.

Check that the software version number on the first page of this manual complies with the software version in the frequency inverter. See § 5.10.2, pagina 65.

- Hoofdstuk 3. pagina 16 describes the installation of the inverter with regard to the EMC Directives. Used together with the Setup Menu List and the Quick Setup Card this chapter makes setting up of the frequency inverter quick and easy.
- Hoofdstuk 4. pagina 20 explains the operation of the frequency inverter.
- Hoofdstuk 5. pagina 28 is the main “data base” for all the functions. They appear in this chapter in the same order as they appear in the Setup Menu.

With help of the Index and the Contents it is easy to track individual functions and to find out how to use and set them.

- Hoofdstuk 6. pagina 66 gives information about troubleshooting, fault finding and diagnoses.
- Hoofdstuk 7. pagina 70 gives information about the use of optional cards and functions. For some options, reference is made to the separate instruction manual for that option.
- Hoofdstuk 8. pagina 71 lists all technical data concerning the complete power range.
- Hoofdstuk 9. pagina 73 and chapter 10. page 75 are lists to fill in the customer settings for all parameters. The Quick Setup Card can be put in a cabinet door, so that it is always easy to access in case of emergency.

1.4 Delivery and unpacking

Check for any visible signs of damage. Inform your supplier immediately of any damage found. Do not install the inverter if damage is found.

The inverters are delivered with a template for positioning the fixing holes on a flat surface. Check that all items are present and that the type number is correct. See § 1.5.

If the inverter is temporarily stored before being connected, see § 8.3, pagina 72. If the inverter is moved from a cold storage room to the room where it is to be installed, condensation can form on it. Allow the inverter to become fully acclimatised and wait until any visible condensation has evaporated before connecting the mains voltage.

1.5 Type number

Fig. 1 gives an example of the type code numbering used on all inverters.

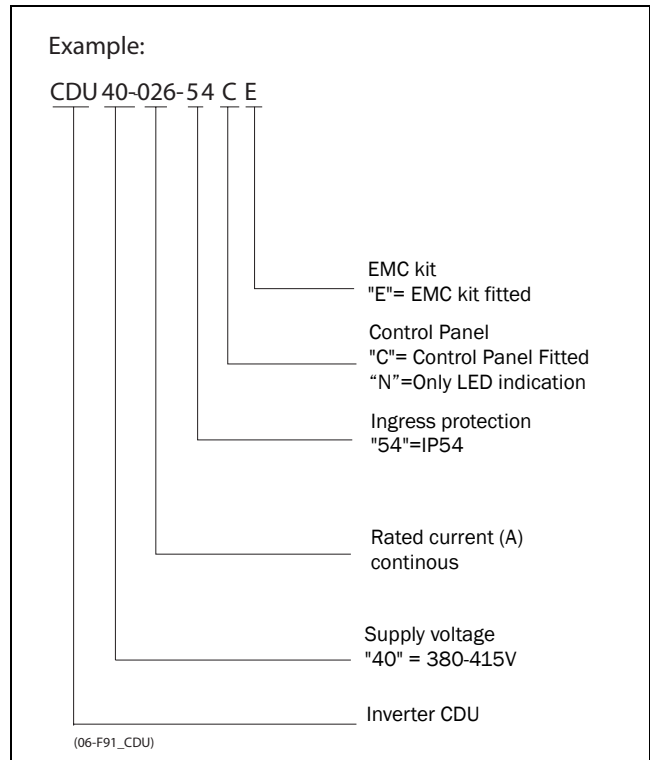


Fig. 1 Type number

1.6 Standards

The inverters described in this instruction manual comply with the standards as listed in Tabel 1: Machine Directive, EMC Directive and the Low Voltage Directive. See the declarations of conformity and manufacturers certificate. Contact your supplier for more information.

1.6.1 Product standard for EMC

The product standard EN 61800-3 defines the **First Environment** as environment that includes domestic premises. It also includes establishments directly connected without intermediate transformers to a low voltage power supply network that supplies buildings used for domestic purposes.

Second Environment includes all other establishments. The CDU frequency inverter complies with the product standard EN 61800-3 including amendment A11 (Any kind of metal screened cable may be used). The standard CDU frequency inverter is designed to meet the requirements for the Second Environment



WARNING! This is a product of the restricted sales distribution class according to EN 61800-3. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

Tabel 1 Standards

Standard	Description
EN60204-1	Safety of machinery - Electrical equipment of machines Part 1: General requirements. Machine Directive: Manufacturer's certificate acc. to Appendix IIB
EN61800-3 A11 2nd Environment	Adjustable frequency electrical power drive systems Part 3: EMC product standard including specific test methods. EMC Directive: Declaration of Conformity and CE-marking
EN50178	Electronic equipment for use in power installations. Low Voltage Directive: Declaration of Conformity and CE-marking

1.7 Dismantling and scrapping

The enclosures of the inverters are made of recyclable material as aluminium, iron and plastic. The inverter contains a number of components demanding special treatment, for example electrolytic capacitors. The circuit boards contain small amounts of tin and lead. Any local or national regulations in force for disposal and recycling of these materials must be complied with.

2. INSTALLING AND OPERATING MODEL N AND MODEL C



WARNING! Always switch off the mains voltage before opening the inverter and wait at least 5 minutes to allow the DC-link capacitors to discharge.

2.1 Model N

2.1.1 General

This model has to be operated by means of remote control signals and commands. Only a 3 LED indication is on the inverter. Model N can be used in combination with the Hand held control panel (option HCP). See fig 2 and 3.

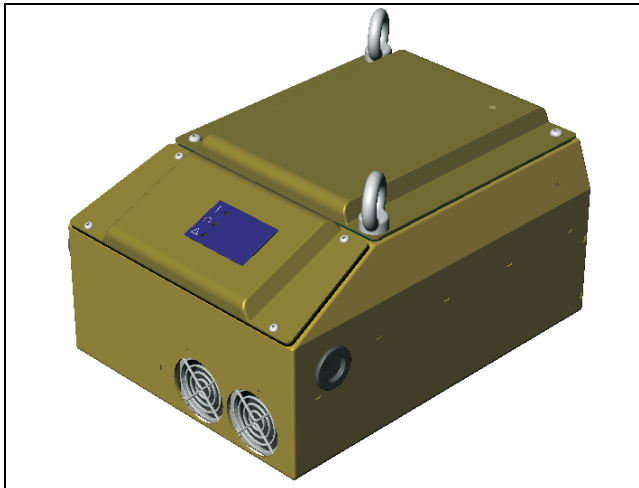


Fig. 2 Model N

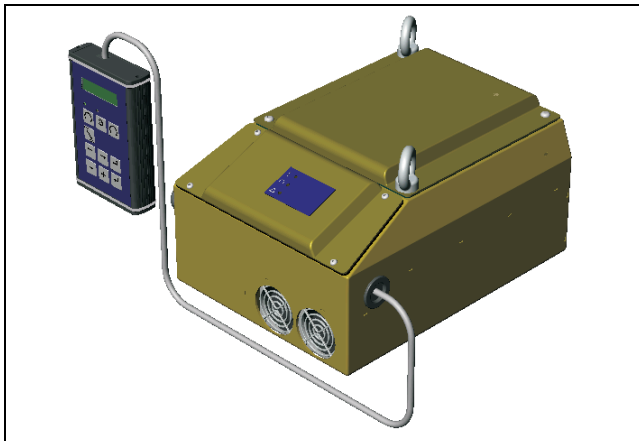


Fig. 3 Model N with option HCP

2.1.2 LED indications

On the lid on the front of the inverter there is a 3 LED indication. See fig 4.

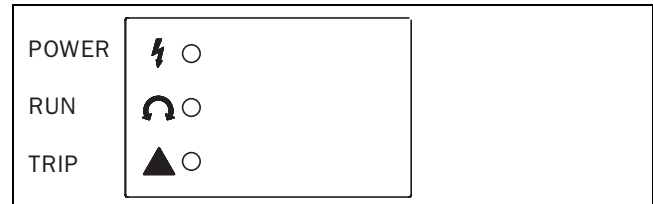


Fig. 4 LED indication

Tabel 2 LED indication

LED	Function		
	ON	BLINKING	OFF
POWER (green)	Power on	-----	Power off
TRIP (red)	Inverter tripped	Warning/Limit	No trip
RUN (green)	Motor shaft rotates	Motor shaft acc/dec	Motor stopped

2.1.3 Connection example

The remote control terminals are behind the lid on the front of the inverter. The example shows the minimum wiring for operation.

NOTE! This example shows the settings of the terminals based on the factory defaults. To change the functions, the handheld control panel option is needed (see chapter 4, page 20) It is possible that due to special customer requirements the factory defaults differ from the Set up Menu list (chapter 9, page 73). If so, please contact the supplier.

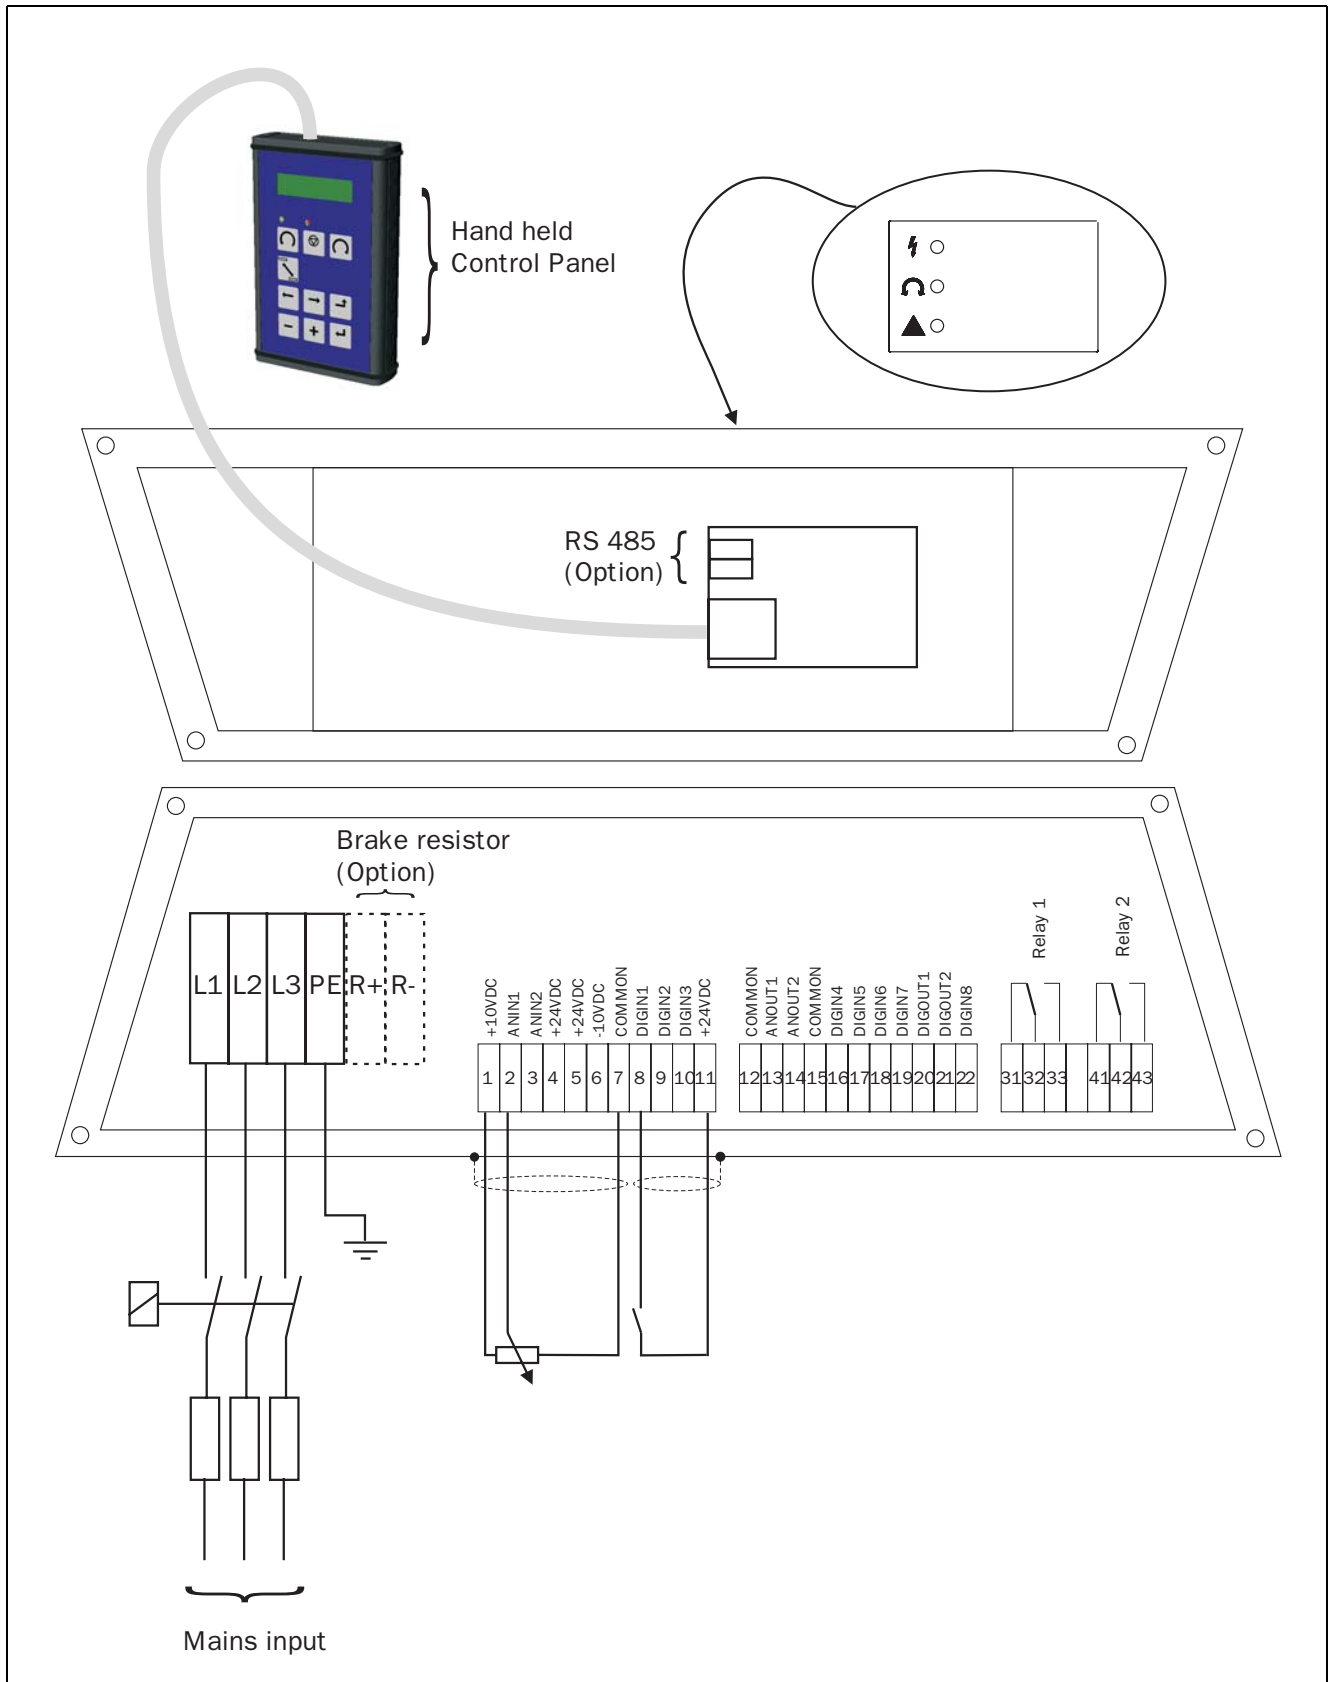


Fig. 5 Connection example Model N

2.2 Model C

2.2.1 General

This model must be operated by means of the control panel on the front of the inverter. There are 4 control keys and a 3 LED indication on the inverter. Model C can be used in combination with the Hand held control panel (option HCP). However some functions are set and can be changed even with the Hand held control panel connected. See fig 6 and 7.



Fig. 6 Model C

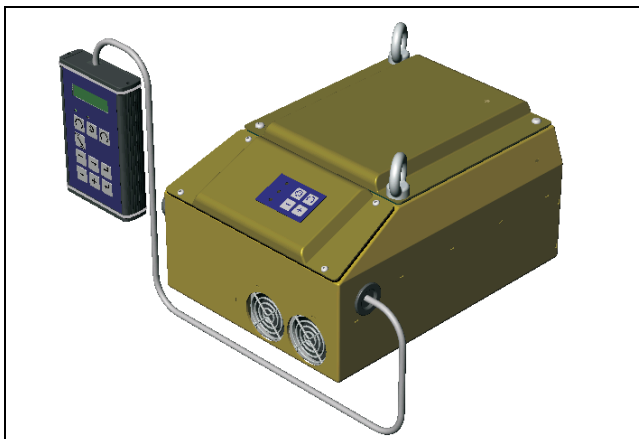


Fig. 7 Model C with option HCP

Table 3 shows the locked functions in the Set up menu (see chapter 9, page 73). This means that these functions cannot be changed, even with the Handheld option connected.

Table 3 Locked functions

MENU	Functions	Setting
212	Ref Control	Remote
213	Run/Stop Control	Remote
421	DigIn 1	Run
422	DigIn 2	Motpot Up
423	DigIn 3	OFF
424	DigIn 4	Motpot Down
425	DigIn 5	Stop

2.2.2 LED indications and control keys

On the lid on the front of the inverter there is a 3 LED indication and 4 control keys. See fig 8.

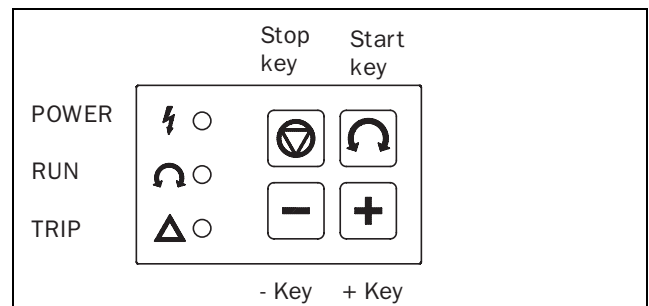


Fig. 8 LED indication with control keys

Table 4 The functions of the LED's

LED	Function		
	ON	BLINKING	OFF
POWER (green)	Power on	-----	Power off
TRIP (red)	Inverter tripped	Warning/Limit	No trip
RUN (green)	Motor shaft rotates	Motor shaft acc/dec	Motor stopped

Table 5 Control keys

START KEY	Press to start the motor
STOP KEY	Press to stop the motor
+ KEY	Press to increase the speed
- KEY	Press to decrease the speed

2.2.3 Connection example

The remote control terminals are behind the lid on the front of the inverter. The example shows the minimum wiring for operation.

NOTE! This example shows the settings of the terminals based on the factory defaults. To change the functions, the handheld control panel option is needed (see chapter 4, page 20) It is possible that due to special customer requirements the factory defaults differ from the Set up Menu list (chapter 9, page 73). If so, please contact the supplier.

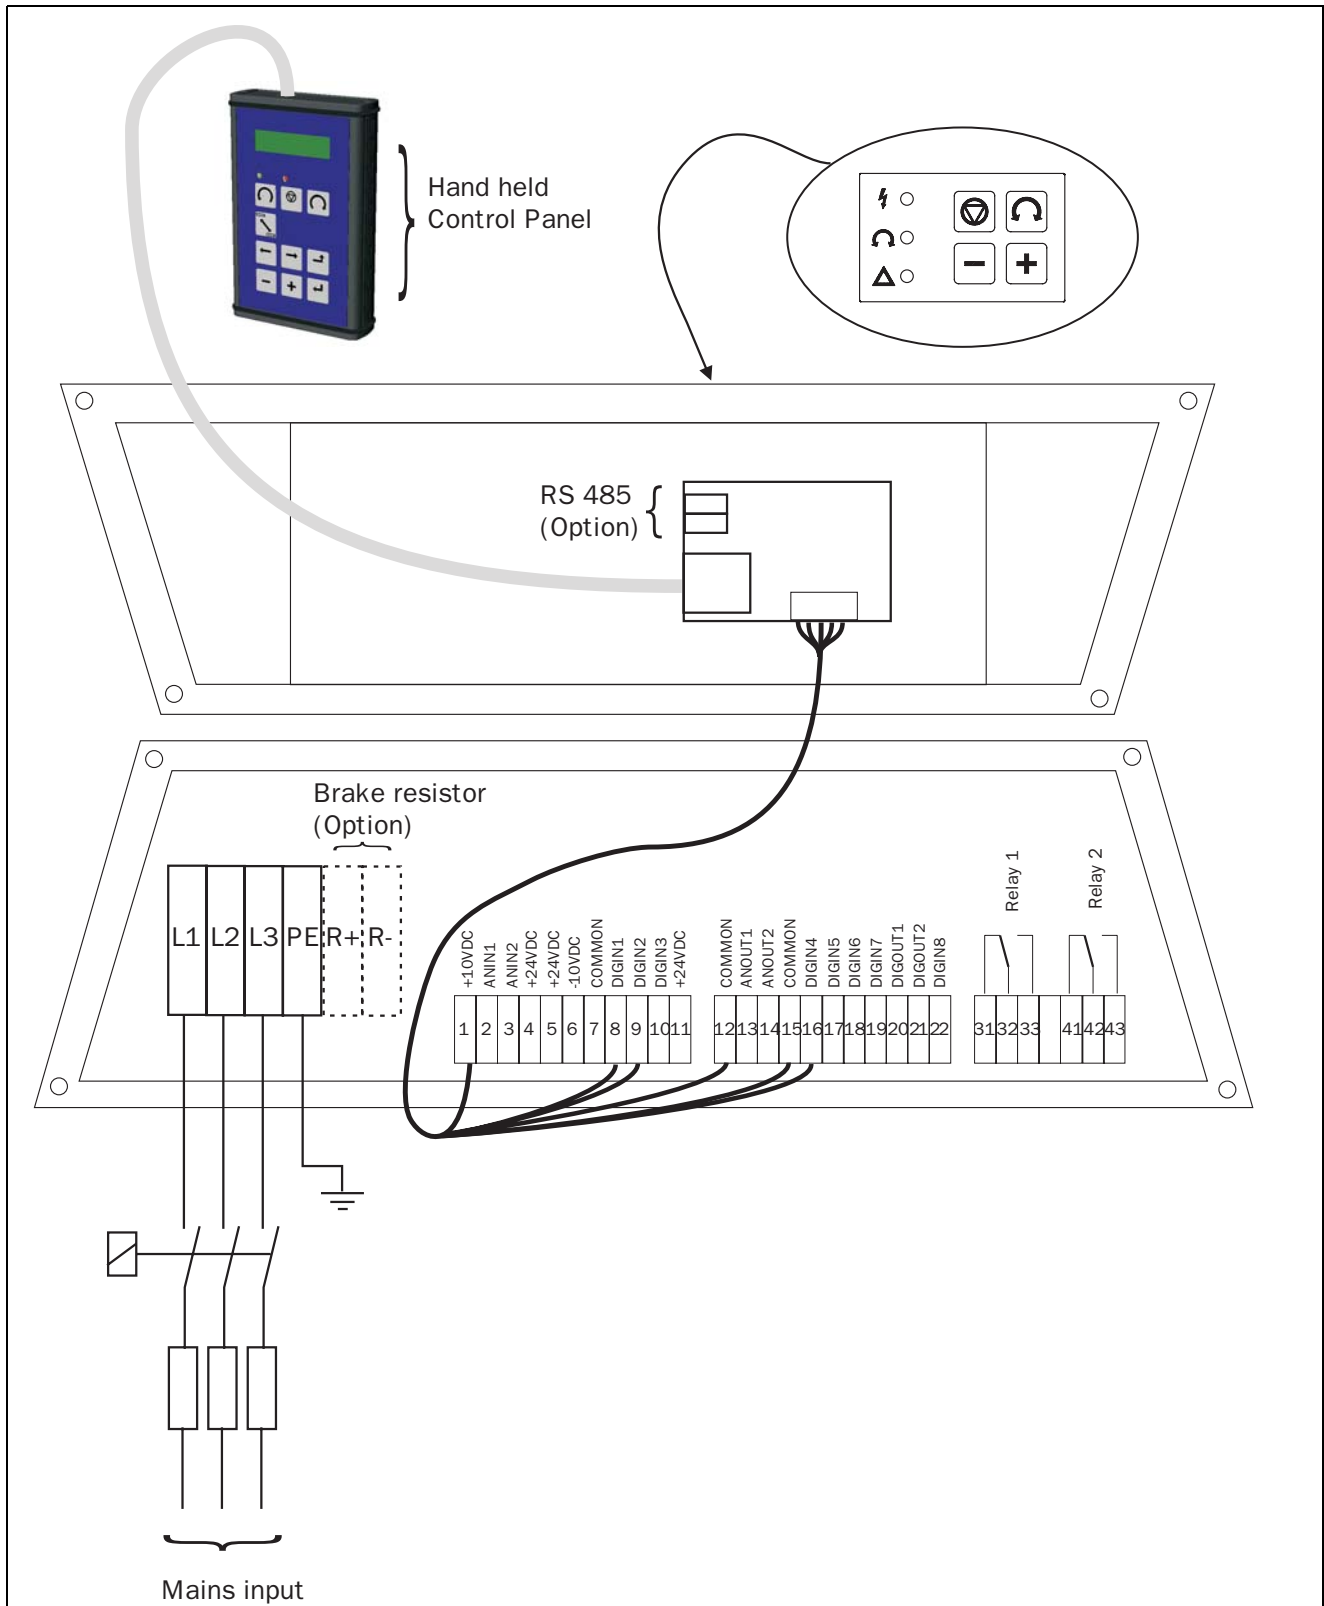


Fig. 9 Connection example Model C

3. INSTALLATION AND CONNECTION

3.1 Control signals connections, default settings

The connections for the control signals are accessible after opening the front panel.

The Standard control signal connections are suitable for stranded flexible wire up to 1.5 mm² and for solid wire up to 2.5 mm².

NOTE! The function of the inputs and outputs described in Tabel 6 are the default settings. Please refer to chapter 5. page 28 for the other functions of each in and output.

NOTE! The maximum total combined current for outputs 4, 5, 11, 20 and 21 is 100mA.

Table 6 Control signals connections, default settings

Terminal	Name:	Function (Default):	Signal:	Type:
1	+10V	+10VDC Supply voltage	+10VDC, max 10mA	output
2	AnIn 1	Frequency reference, positive signal	0 -10VDC or 0/4 - 20mA	analogue input
3	AnIn 2	Off positive signal	0 -10VDC or 0/4 - 20mA	analogue input
4	+24V	+24VDC Supply voltage	+24 VDC, 100 mA, see note	analogue input
5	+24V			
6	-10V	-10VDC Supply voltage	-10VDC, max 10mA	output
7	Common	Signal ground	0V	output
8	DigIn 1	Run; rotation according to window [324] (default: right)	0-8/24VDC	digital input
9	DigIn 2	Off	0-8/24VDC	digital input
10	DigIn 3	Off	0-8/24VDC	digital input
11	+24V	+24VDC Supply voltage	+24VDC, 100 mA, see note	output
12	Common	Signal ground	0V	output
13	AnOut 1	0 - 200% f_{MOT}	0 \pm 10VDC or 0/4 - +20mA	analogue output
14	AnOut 2	0 - 200% I_{MOT}	0 \pm 10VDC or 0/4 - +20mA	analogue output
15	Common	Signal ground	0V	output
16	DigIn 4	RESET	0-8/24VDC	digital input
17	DigIn 5	Off	0-8/24VDC	digital input
18	DigIn 6	Off	0-8/24VDC	digital input
19	DigIn 7	Off	0-8/24VDC	digital input
20	DigOut 1	Run, active if motor runs	24VDC, 100mA, see note	digital output
21	DigOut 2	NOTRIP, no Trip active	24VDC, 100mA, see note	digital output
22	DigIn 8	Off	0-8/24VDC	digital input
Terminal				
31	N/C 1	Relay 1 output Trip, active when the inverter is in a TRIP condition	potential free change over 2A/250VAC/AC1	relay output
32	COM 1			
33	N/O 1			
Terminal				
41	N/C 2	Relay 2 Output Ready, active when the inverter is ready to start	potential free change over 2A/250VAC/AC1	relay output
42	COM 2			
43	N/O 2			

3.2 Control signal connections in accordance with EMC-directives



CAUTION! In order to comply with the EMC directive (see § 1.6, pagina 11) it is absolutely necessary that the installation instructions, as described in this manual, are followed correctly. For further detailed information about EMC Directives and frequency inverters please refer to the installation instructions “EMC Directive and frequency inverters”. Please contact your supplier.

The screening of control signal cables is necessary to comply with the immunity levels given in the EMC Directive.

3.2.1 Types of control signals

Always make a distinction between the different types of signals. Because the different types of signals can adversely affect each other, use a separate cable for each type. This is often more practical because, for example, the cable from a pressure sensor may be connected directly to the frequency inverter.

We can distinguish the following types of control signals:

- Analogue: Voltage or current signals, (0-10V, 0/4-20mA) which change slowly or only occasionally in value. In general, these are control or measurement signals.
- Digital: Voltage or current signals (0-10V, 0-24V, 0/4-20mA) which can have only two values (high or low) and only occasionally change in value.
- Data: Usually voltage signals (0-5V, 0-10V) which change rapidly and at a high frequency, generally data signals such as RS232, RS485, Profibus, etc.
- Relay: Relay contacts (0-250VAC) can switch highly inductive loads (auxiliary relay, lamp, valve, brake, etc.).

Example:

The relay output from a frequency inverter which controls an auxiliary relay can, at the moment of switching, form a source of interference (emission) for a measurement signal from, for example, a pressure sensor.

3.2.2 Single-ended or double-ended connection?

In principle, the same measures as applied to power supply cables must be applied to all control signal cables, in accordance with EMC-Directives.

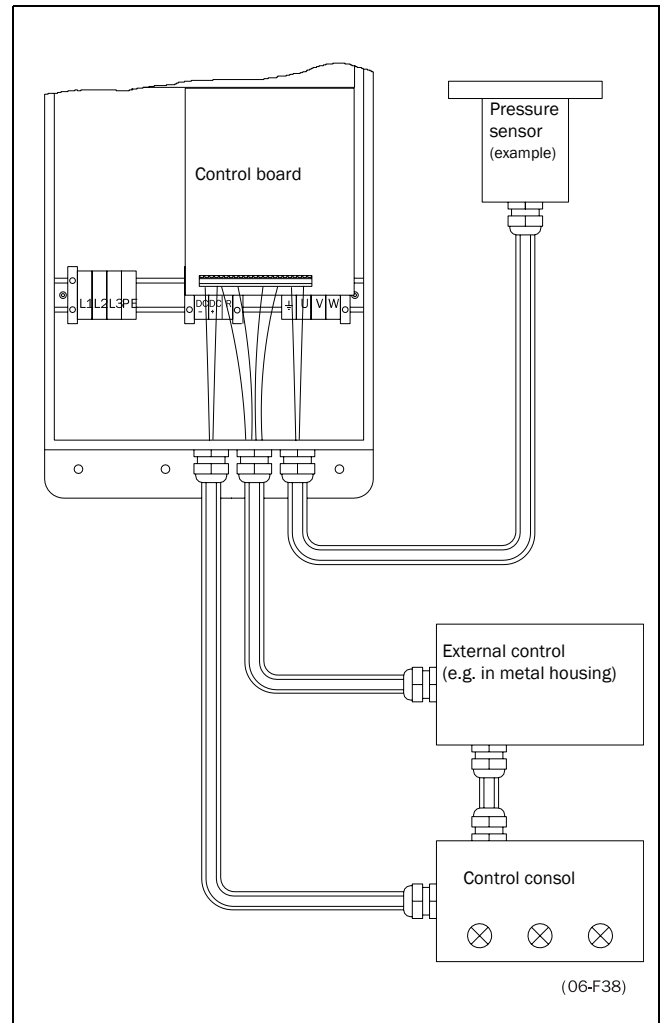


Fig. 10 Electro Magnetic (EM) screening of control signal cables.

In practice it is not always possible to screen control signal cables in a consistent manner.

If long control cables are used, the wavelength ($\frac{1}{4}\lambda$) of the noise signal can be shorter than the cable length. If the screening is connected at one end only, the noise frequency can be coupled to the signal wires.

For all signal cables as mentioned in § 3.2.1 the best results are obtained if the screening is connected to both ends. See Fig. 10.

NOTE! Each installation must be examined carefully before applying the proper EMC measurements.

3.2.3 Current control (0-20mA)

A current signal like 0-20mA is less sensitive to disturbances than a 0-10V signal, because it has a low impedance (250Ω) compared with a voltage signal ($20k\Omega$). It is therefore strongly advised to use current controlled signals if the cables are longer than a few meters.















3.2.4 Twisted cables

Analogue and digital signals are less sensitive to interference if the cables carrying them are “twisted”. This is certainly to be recommended if no screening can be used as described in § 3.2.2, pagina 17. By twisting the wires the exposed areas are minimised. This means that in the current circuit for any possible High Frequency (HF) interference fields, no voltage can be induced. For a PLC it is therefore important that the return wire remains in proximity to the signal wire. It is important that the pair of wires is fully twisted over 360°.

3.3 Inputs/outputs configuration with the jumpers

The jumpers S1 to S4 are used to set the input and output configuration for the 2 analogue inputs AnIn1 and AnIn2 and the 2 analogue outputs AnOut1 and AnOut2 as described in Tabel 7. See Fig. 11 for location of the Jumpers (S5 and S6 for future use).

Tabel 7 Jumper settings

Input/Output	Type	Jumper
AnOut1	0-10V (default)	S1 
	0-20mA	S1 
AnOut2	0 -10V(default)	S2 
	0-20mA	S2 
AnIn1	0 -10V (default)	S3 
	0-20mA	S3 
AnIn2	0 -10V (default)	S4 
	0-20mA	S4 
PTC	PTC (default)	S5  S6 
	No function	S5  S6 
	No function	S5  S6 

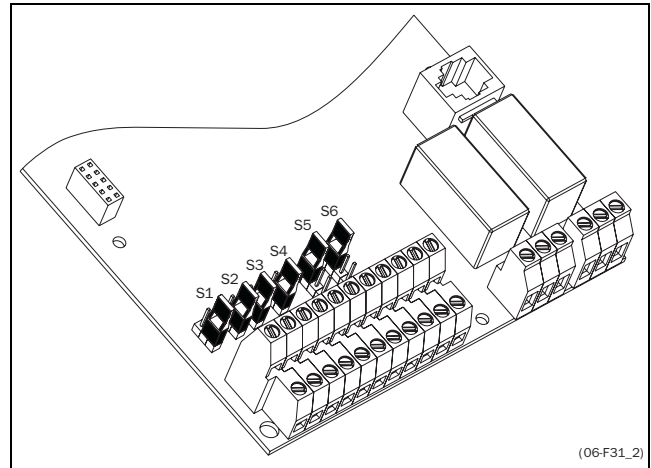


Fig. 11 Location of connectors and jumpers.

3.4 Stop categories and emergency stop

The following information is important if emergency circuits are used or needed in the installation where a frequency inverter is used. EN 60204-1 defines 3 stop categories:

- **Category 0: Uncontrolled STOP:**
Stopping by switching off the supply voltage. A mechanical stop must be activated. This STOP may not be realised with the help of a frequency inverter or its inputs or output signals.
- **Category 1: Controlled STOP:**
Stopping until the motor has come to rest, after which the power supply is switched off. This STOP may not be realised with the help of a frequency inverter or its input or output signals.
- **Category 2: Controlled STOP:**
Stopping while the supply voltage is still present. This STOP can be implemented with every STOP command of the frequency inverter.



WARNING! EN 60204-1 specifies that every machine must be provided with a category 0 stop. If the application prevents this from being implemented, this must be explicitly stated. In addition, every machine must be provided with an Emergency Stop function. This emergency stop must ensure that the voltage at the machine contacts, which could be dangerous, is removed as quickly as possible, without resulting in any other dangers. In such an Emergency Stop situation, a category 0 or 1 stop may be used. The choice will be decided on the basis of the possible risks to the machine.

3.5 Definitions

In this manual the following definitions for current, torque and frequency are used.

Tabel 8 Definitions

Name	Description	Quantity
I_{IN}	Nominal input current of inverter	A, RMS
I_{NOM}	Nominal output current of inverter	A, RMS
I_{MOT}	Nominal motor current	A, RMS
P_{NOM}	Nominal power of inverter	kW
P_{MOT}	Motor power	kW
T_{NOM}	Nominal torque of motor	Nm
T_{MOT}	Motor torque	Nm
f_{OUT}	Output frequency of inverter	Hz
f_{MOT}	Nominal frequency of motor	Hz
n_{MOT}	Nominal speed of motor	rpm
I_{CL}	120% I_{NOM} , 60s	A, RMS
I_{TRIP}	Peak motor current 280% I_{NOM}	A
Speed	Actual motor speed	rpm
Torque	Actual motor torque	Nm

4. OPERATION OF THE FREQUENCY INVERTER

When the mains voltage is applied, all settings will be loaded from a non-volatile memory (E²PROM). After charging of the DC-link capacitors and the initialisation of the inverter, the LCD-display will show the Start Window [100]. (See also § 5.2, pagina 28). Depending on the size of the inverter this will take a few seconds.

The default Start Window will appear as follows:

100	0Hz
Stp	0.0A

4.1 Operating the control panel

Fig. 12 shows the Control Panel (CP). The Control Panel displays the status of the inverter and is used to program all the settings. It is also possible to control the motor directly from the Control Panel.

NOTE! The inverter can run without the CP connected. However the programming must be such, that all control signals are programmed for external use.

The inverter can be ordered without the CP. Instead of the CP there will be a 3 LED indication on the Blank Control Panel. See also § 4.1.2, pagina 21.

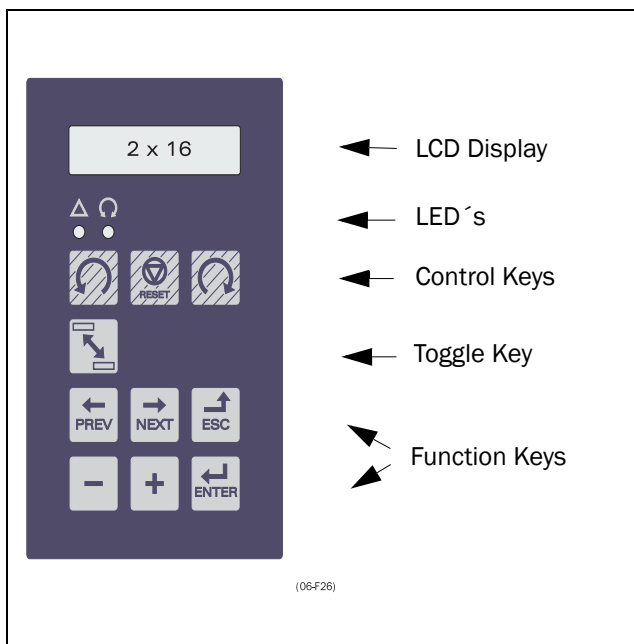


Fig. 12 Control Panel.

4.1.1 LCD display

The LCD display consists of a 2 row 16-character display with backlight. The display is divided in four areas. The different areas in the start window are described below:

A	B
322	Max Freq
C	D
Stp	A: 50 Hz

Fig. 13 The Display

Area A: Shows the actual window number (3 positions).

Area B: Shows the heading of the active window.

Area C: Shows the status of the inverter (3 positions).

The following status indications are possible:

- Acc** : Acceleration
- Dec** : Deceleration
- I²t** : Active I²t protection (see § 5.2)
- Run** : Motor runs
- Trp** : Tripped
- Stp** : Motor is stopped
- VL** : Voltage limit
- FL** : Frequency limit
- CL** : Current limit
- TL** : Torque limit
- OT** : Overtemperature warning
- OVG** : Overvoltage G warning (Generator)
- OVD** : Overvoltage D warning (Deceleration)
- OVL** : Overvoltage L warning (Line)
- LV** : Low Voltage warning

Area D: Shows the setting or selection in the active window. This area is empty at the 1st level (hundreds) and 2nd level (tens) menu.

300 PARAM SETS
Stp

Fig. 14 Example upper level menu (Main Menu)

320 Frequencies
Stp

Fig. 15 Example mid level menu (Submenu tens)

321 Min Freq
Stp A 0Hz

Fig. 16 Example lower level menu (Submenu units)

4.1.2 LED indication

The green and the red LEDs on the Control Panel have the following functions:

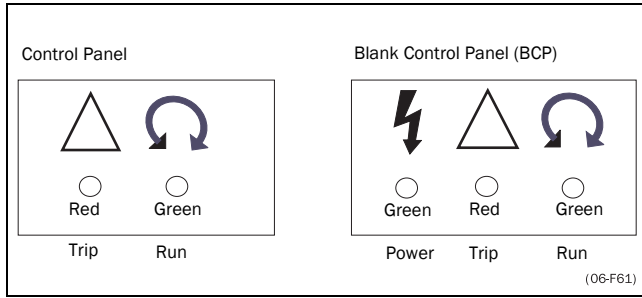


Fig. 17 LED indications

Tabel 9 LED indication

LED	Function		
	ON	BLINKING	OFF
POWER (green)	Power on	-----	Power off
TRIP (red)	Inverter tripped	Warning/Limit	No trip
RUN (green)	Motor shaft rotates	Motor shaft acc/dec	Motor stopped

NOTE! If the CP is built in, the backlight of the LCD display has the same function as the Power LED in Tabel 9 (Blank panel LEDs).

4.1.3 The Toggle Key

With the Toggle key up to the last four selected windows can be quickly accessed. The default window is "100" for one toggle window. Select a toggle window by pressing the toggle key when you are in the selected window. The next toggle window will be displayed automatically. The toggle memory will be erased at power-down. If a trip occurs, the trip message (window [710]) is automatically added to the toggle list.

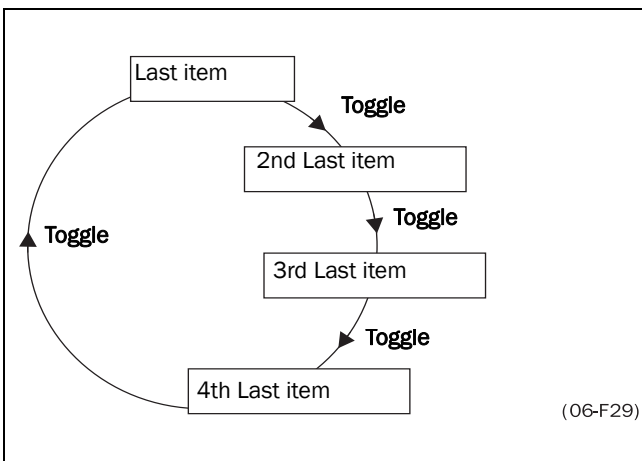


Fig. 18 Toggle memory

4.1.4 Control keys

The control keys give Run, Stop or Reset commands directly from the Control Panel. As default the keys are disabled. With function Run/Stop Ctrl [213], the keys can be activated. If the Enable function is programmed on one of digital inputs (see § 5.5.11, pagina 49) this input must be active to allow Run/Stop commands from the Control Panel.

Tabel 10 Control keys

	RUN L:	gives a start with rotation left
	STOP/RESET:	to stop the motor or reset the inverter after a trip
	RUN R:	gives a start with rotation right

NOTE! It is not possible to activate the Run/Stop/Reset commands from the keyboard and remotely from the terminal strip (terminal 1-22) simultaneously.

4.1.5 Function keys

The function keys operates the Setup Menu to program and read-out all the settings in the menu.

Tabel 11 Function keys

	ENTER key:	- to step to a lower menu level - to confirm a changed setting
	ESCAPE key:	- to step to a higher menu level - to ignore a changed setting, without confirming
	PREVIOUS key:	- to step to a previous menu window within the same level
	NEXT key:	- to step to a next menu window within the same level
	- key:	- to decrease a value - to change a selection
	+ key:	- to increase a value - to change a selection

4.1.6 Menu structure

The Menu consists of 3 levels.

- Main Menu: This is the upper level (counts in hundreds)
- Submenu 1: This is the mid level (counts in tens)
- Submenu 2: This is the lower level (counts in units)

The Main Menu contains the following main functions:

100	Startup Window
200	Main Setup
300	Parameter Sets
400	I/O
500	Set/View Reference Value
600	View Operation
700	View Trip Log
800	Monitor
900	View System Data

This structure is consequently independent of the number of windows per level.

So e.g.: a menu can have only one selectable window (window Set/View Reference Value [500]), or it can have 17 selectable windows (window Frequencies [320]).

NOTE! If within one level there are more than 10 windows the numbering continues in alphabetic order.

Example 1:

Submenu Frequencies [320]
counts from 32I to 32H.

Example 2:

Main menu View Operation [600]
counts from 610 to 6F0.

Fig. 19 shows that within every level the Enter and the Escape keys are used to step up or step down from each level and each menu window within a level can be selected with the Previous and Next keys.

4.1.7 Short description of the setup menu

The main menu contains the following main functions:

100 STARTUP WINDOW

Displayed at power-up. It displays the actual frequency and current as default. Programmable for many other read-outs

200 MAIN SETUP

Main settings to get the inverter operable. Most important are the motor data. Further utility and settings for the options.

300 PARAMETER SETS

4 sets of parameters like Acc/Dec times, frequency setting, torque limitation, PID control settings etc. Each Parameter Set can be selected externally via a digital input. Parameter sets can be changed during operation and stored in the Control Panel.

400 I/O

All settings for inputs and outputs are made here.

500 SET/VIEW REFERENCE VALUE

Setting or viewing the reference value. If reference value setting is programmed for operation via the Control Panel the reference is set in this window (Motor Potentiometer).

600 VIEW OPERATION

Viewing all the operational data like frequency, load, power, current etc.

700 VIEW TRIP LOG

Viewing the last 10 trips in the trip memory.

800 MONITOR

Alarm functions at over - and underload condition, comparator functions.

900 VIEW SYSTEM DATA

Electronic type label for viewing the software version and inverter type.

4.1.8 Programming during operation

Many functions can be changed during operation, without stopping the inverter. These functions are indicated with an asterisk (*) in the Setup Menu List (chapter 9, page 73) and in chapter 5, page 28.

NOTE! If a function is changed during operation of the inverter the message "Stop First!" is displayed, to indicate that this function can only be changed when the motor is stopped.

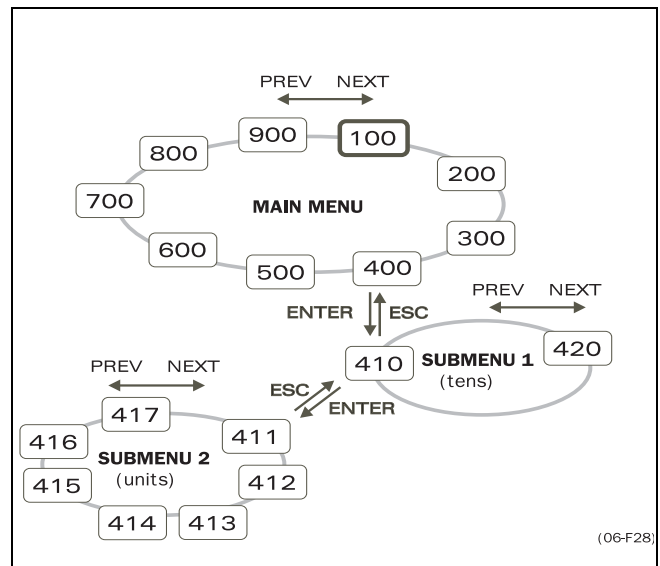


Fig. 19 Menu structure.

4.1.9 Programming example

This example shows how to program a change of the Acc. Time set from 2.0 s to 4.0 s.

The blinking cursor indicates that a change has taken place but is not saved yet. If at this moment, the power fails, the change will not be saved.

Use the ESC, PREV, NEXT or the TOGGLE key to proceed and to go to other menus.

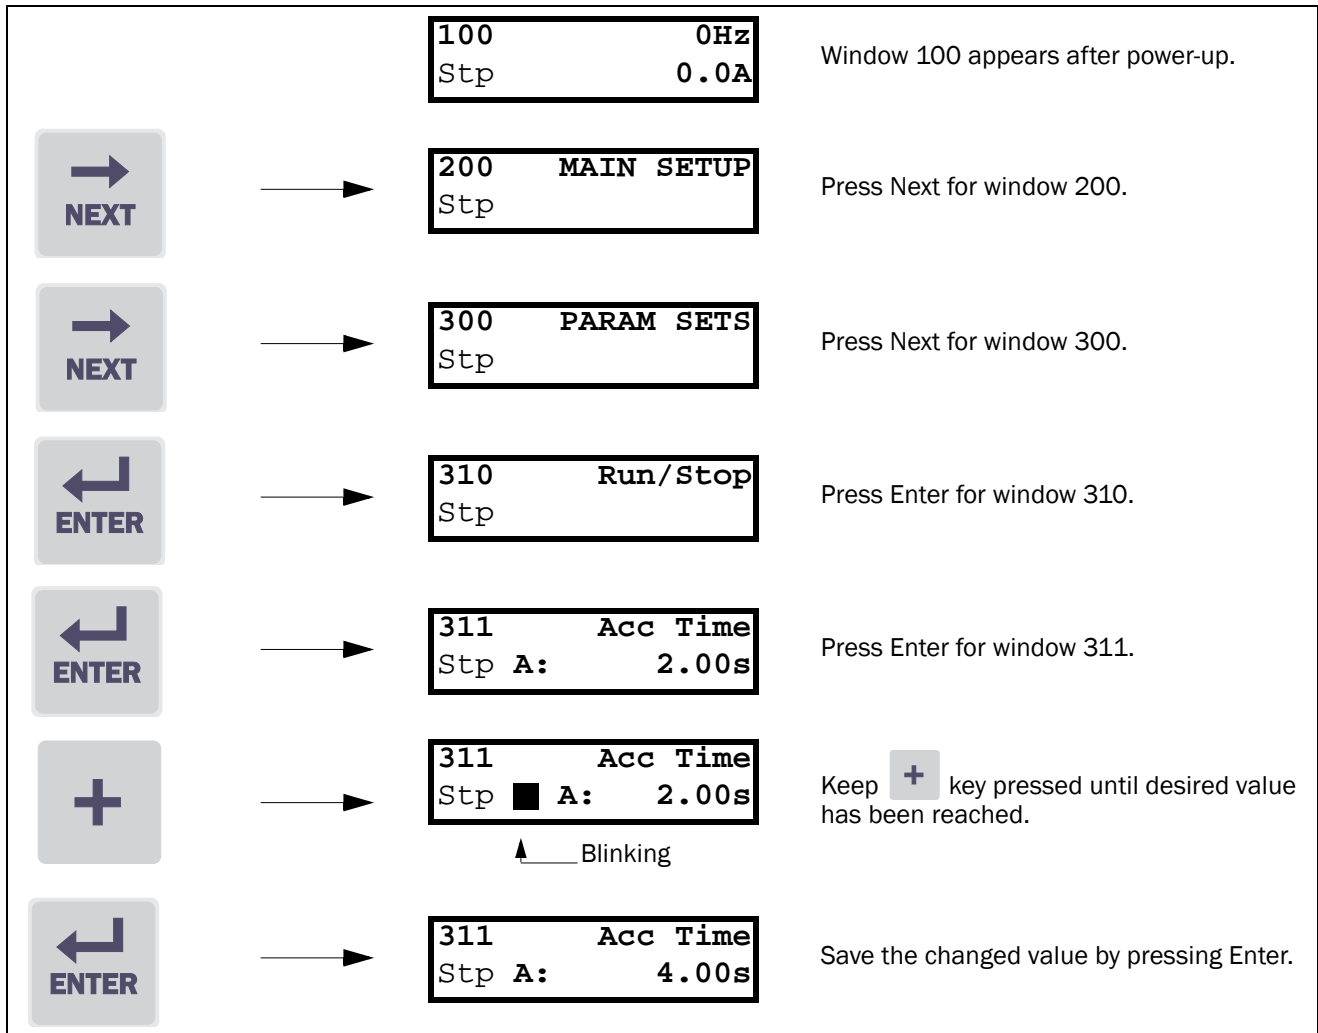


Fig. 20 Programming example

4.2 Operation of the Run/Stop/Enable/Reset functions

As default all the run/stop related commands are programmed for remote operation via the inputs on the terminal strip (terminal 1-22) on the control board. With the function Run/Stp Ctrl [213] this can be selected for keyboard or serial communication control, see § 5.3.4, pagina 30.

NOTE! The examples in this paragraph do not cover all possibilities. Only the most relevant combinations are given. Starting point is always the default setting (factory) of the inverter.

4.2.1 Default settings of the Run/Stop/Enable/Reset functions.

The default settings are shown in Fig. 21. In this example the inverter is started and stopped with DigIn 1 and a reset after trip can be given with DigIn 4.

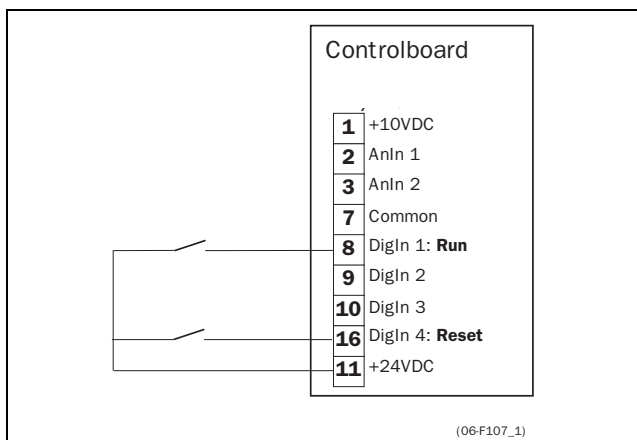


Fig. 21 Default setting Run/Reset commands.

The inputs are default set for level-control (see § 5.3.6, pagina 31). The input DigIn 1 is programmed for the Run command (see § 5.5.11, pagina 49). The rotation is determined by the rotation set according to the active Parameter Set.

4.2.2 Enable and Stop functions.

Both functions can be used separately or simultaneously. The choice of which function is to be used depends on the application and the control mode of the inputs (Level/Edge [215], see § 5.3.6, pagina 31).

NOTE! In the Edge mode, at least one digital input must be programmed to “stop”, because the Run commands are then only able to start the inverter.

STOP FUNCTIONS:

Enable

Input must be active (HI) to allow any Run signal. If the input is made LOW, the output of the inverter is immediately disabled and the motor will coast.



CAUTION! If the Enable function is not programmed to a Digital input, it is considered to be active internally.

Stop

If the input is made active (LO) then the inverter will stop according to the selected stop mode set in window [31A] (see § 5.4.11, pagina 39).

Fig. 22 shows the function of the Enable and the Stop input and the Stop Mode=Decel[31A].

To run the input must be HI.

NOTE! The Stop Mode=Coast [31A] will give the same behaviour as the Enable input.

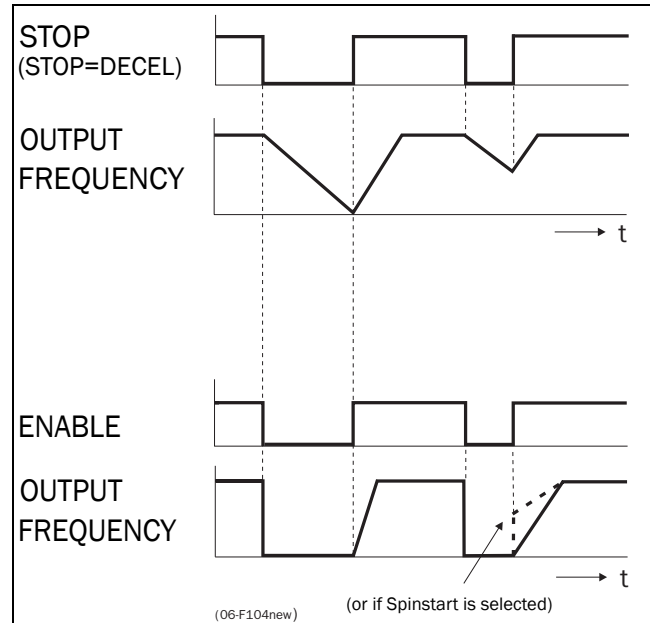


Fig. 22 Functionality of the Stop and Enable input

4.2.3 Run Inputs Level-controlled.

The inputs are set as default for level-control (see function Level Edge [215], § 5.3.6, pagina 31). This means that an input is activated by making the input continuously “High”. This way of operation is commonly used if, for example, PLCs are used to operate the inverter.



CAUTION! Level controlled inputs DO NOT comply with the Machine Directive (see § 1.6, pagina 11), if the inputs are directly used to start and stop the machine.

The examples given in this and the following paragraph have the input selecting as shown in Fig. 23.

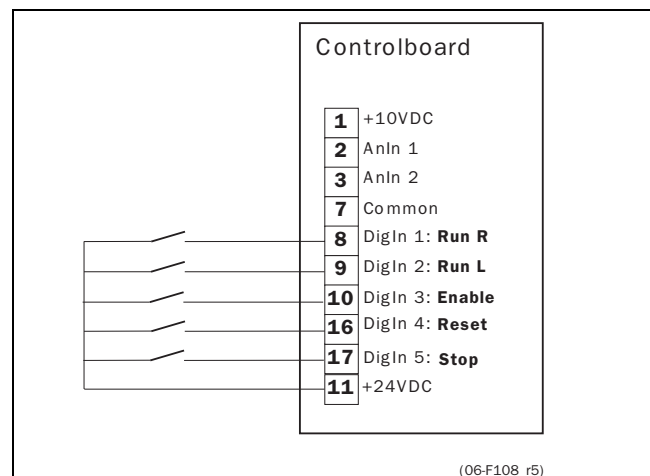


Fig. 23 Wiring example Run/Stop/Enable/Reset inputs.

The Enable input must be continuously active in order to accept any run-right or run-left command. If both RunR and RunL inputs are active, then the inverter stops according to the selected Stop Mode. Fig. 24 gives an example of a possible sequence.

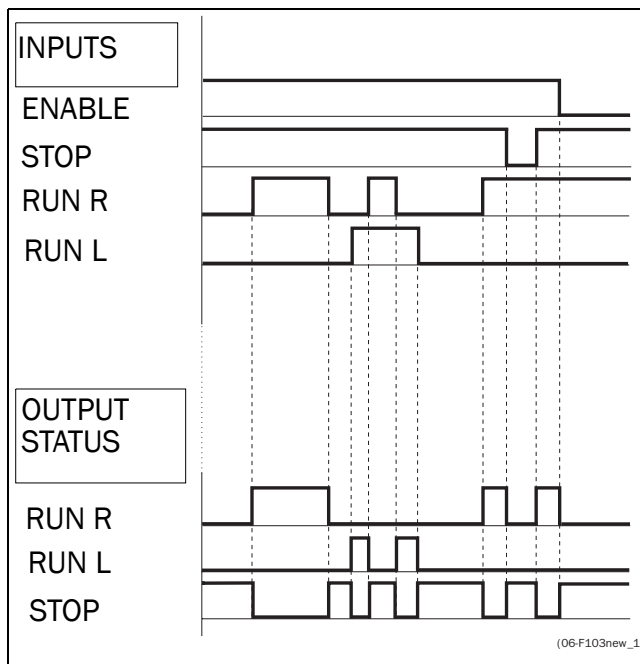


Fig. 24 Input and output status for level control.

4.2.4 Run Inputs Edge-controlled

Window 215 Level/Edge must be set to Edge to activate edge control (§ 5.3.6, pagina 31) This means that an input is activated by a “low” to “high” transition. Now the inputs can be wired as a so-called “3-wire” operation. 3-wire operation requires 4-wires for two directions.

NOTE! Edge controlled inputs comply with the Machine Directive (see § 1.6, pagina 11), if the inputs are directly used to start and stop the machine.

See Fig. 23. The Enable and Stop input must be active continuously in order to accept any run-right or run-left command. The last edge (RunR or RunL) is valid. Fig. 25 gives an example of a possible sequence.

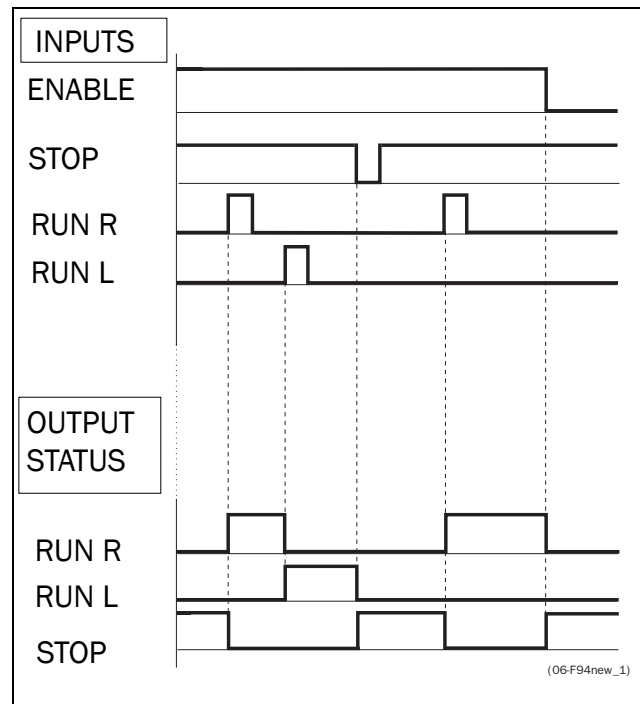


Fig. 25 Input and output status for edge control.

4.2.5 Reset and Autoreset operation.

If the inverter is in the Stop Mode due to a trip condition, the inverter can be reset by a pulse (“low” to “high” transition) on the Reset input, default on DigIn 4. Depending on the selected control method a restart takes place (see function Level/Edge [215] § 5.3.6, pagina 31):

- **Level-control.**
If the Run inputs remain in their position the inverter will start immediately after the Reset command is given.
- **Edge-control.**
After the Reset command is given a new Run command must be applied to start the inverter again.

Autoreset is enabled if the Reset input is continuously active. In function Autoreset [240] (see § 5.3.28, pagina 34) the Autoreset functions are programmed.

NOTE! If the control commands are programmed for Keyboard control, Autoreset is not possible.

4.2.6 Frequency Direction and Rotation.

The Frequency Direction can be controlled by:

- RunR/RunL commands on the Control Panel.
- RunR/RunL commands on the terminal strip (terminal 1-22).
- Via the serial interface options.
- The Parameter Sets

The function Rotation [214] (§ 5.3.5, pagina 31) and Direction [324] (§ 5.4.17, pagina 41) set the limitations and priorities to the Frequency Direction of the inverter.

- **Overall limitation with function Rotation [214].**

This function limits the overall Frequency Direction to either Left or Right direction or allows both directions. This limit is prior to all other selections. E.g.: if the rotation is limited to Right, a Run-Left command will be ignored.

- **Selection per Parameter Set with function Direction [324].**

This function sets the Frequency Direction for the external RUN command (set to a Digital Input) in each Parameter Set. The RunL and RunR commands will always overrule this setting.

4.3 Use of the Parameter Sets

With the 4 Parameter Sets various control possibilities can be made with respect to quickly changing the inverter's behaviour. It is possible to adapt the inverter online to altered machine behaviour. The way the Parameter Sets are implemented and controlled gives an enormous flexibility to the overall possibilities with regard to settings like Frequency, Max Torque, Acc/Dec times, PID control, etc. This is based on the fact that at any desired moment any one of the four Parameter Sets can be activated during Run or Stop, via the digital inputs. Because each Parameter Set contains more than 30 different functions (parameters), a great many different configurations and combinations can be made. Fig. 26 shows the way the Parameter Sets are activated via the digital inputs DigIn 3 and DigIn 4.

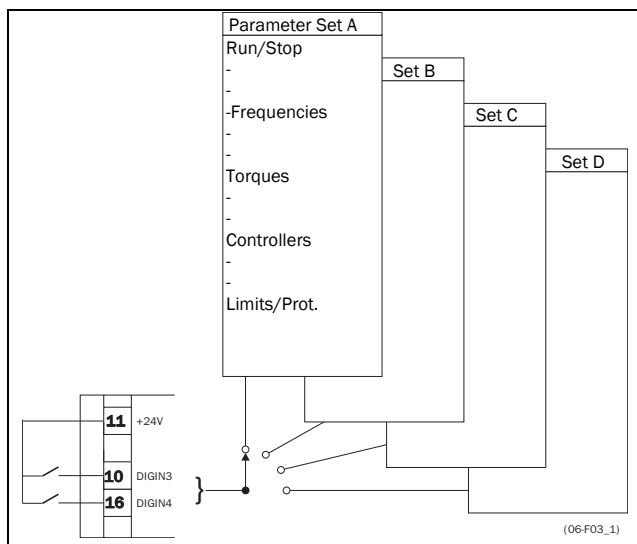


Fig. 26 Selecting the Parameter Sets.

The Parameter Set selection is done with function Select Set [234] (See § 5.3.22, pagina 33). Here the Parameter Sets can be selected via the Control Panel, DigIn 3+4, via DigIn 3 only or via serial communication. With function Copy Set [233] (see § 5.3.21, pagina 33) it is easy to copy the complete contents of a single Parameter Set to another Parameter Set. If the Parameter Sets are selected via DigIn 3 and DigIn 4 they are activated according to Tabel 12.

Tabel 12 Parameter Set

Parameter Set	DigIn 3	DigIn 4
A	0	0
B	1	0
C	0	1
D	1	1

NOTE! The selection via the digital inputs is immediately activated. The new Parameter Settings will be activated on-line, also during Run.

NOTE! The default Parameter Set is Parameter Set A.

With these settings a lot of possibilities are available. Some ideas are given here:

- **Multi frequency selection.**
Within a single Parameter Set the 7 preset frequency are selectable via the digital inputs. In combination with the Parameter Sets, 28 preset frequencies can be selected using all 4 digital inputs DigIn1 and 2 for selecting preset frequency within one Parameter Set and DigIn 3 and DigIn 4 for selecting the Parameter Sets.
- **Bottling machine with 3 different products.**
Use 3 Parameter Sets for 3 different Jog frequencies, when the machine needs to be set up. The 4th Parameter Set can be used for “normal” analogue frequency control when the machine is running in full production.
- **Product changing on winding machines.**
If a machine has to change between 2 or 3 different products e.g. winding machine with different gauges of thread. For each gauge of thread it is important that acceleration, deceleration times, Max Frequency and Max Torque are adapted to each thread gauge. For each thread size a different Parameter Set can be used.

Tabel 13 shows the functions (parameters) that can be set in each Parameter Set. The number behind each function is the window number.

Tabel 13 Parameter Set functions

Run/Stop[310]	
Acceleration time	[311]
Acc MotPot	[312]
Acc time> Min Freq	[313]
Acc ramp type	[314]
Deceleration time	[315]
Dec MotPot	[316]
Dec time < Min Freq	[317]
Dec ramp type	[318]
Start Mode	[319]
Stop Mode	[31A]
Spinstart	[31B]
Frequency [320]	
Minimum Frequency	[321]
Maximum Frequency	[322]
Minimum Frequency Mode	[323]
Direction	[324]
Mot Pot function	[325]
Preset Frequency 1	[326]
Preset Frequency 2	[327]
Preset Frequency 3	[328]
Preset Frequency 4	[329]
Preset Frequency 5	[32A]
Preset Frequency 6	[32B]
Preset Frequency 7	[32C]
Skip Frequency 1 Low	[32D]
Skip Frequency 1 High	[32E]
Skip Frequency 2 Low	[32F]
Skip Frequency 2 High	[32G]
Jog Frequency	[32H]
Torque [330]	
Torque Limit	[331]
Maximum Torque	[332]
Controllers [340]	
Flux Optimization	[341]
Sound Char	[342]
PID Controller	[343]
PID P Gain	[344]
PID I Time	[345]
PID D Time	[346]
Limits/Protections [350]	
Low Volt Override	[351]
Rotor locked	[352]
Motor lost	[353]
Motor I ² t Type	[354]
Motor I ² t Current	[355]

4.4 Use of the Control Panel Memory

The Control Panel (CP) has two memory banks called Mem1 and Mem2. Normally all the settings, which are made or changed, will be stored at power down in an Eeprom on the controlboard of the inverter.

The memory banks in the CP are used to copy the settings of an individual inverter via the CP to other inverters.

The CP must be disconnected from the original inverter (source) and then be connected to the target inverter.

The memory banks can also be used as an temporary “storage” for a specific inverter setup.

The settings can be copied in two different levels:

- **All Settings**

The copy and load commands copy or load all settings within the entire Setup Menu, so also Motor Data, Utilities etc. This is done with the functions Copy To CP [236] and CP>Settings [239]. See § 5.3.24, pagina 33 and § 5.3.27, pagina 34.

- **Parameter Sets Only**

With the function CP>All Sets [237] only the contents of submenu Parameter Sets [300] are loaded. With the function CP>Act Set [238] only the contents of the active Parameter Set is loaded. See § 5.3.26, pagina 34 and § 5.4, pagina 38.

Fig. 27 and Fig. 28 show the options for copying and locating the settings to and from the memories.

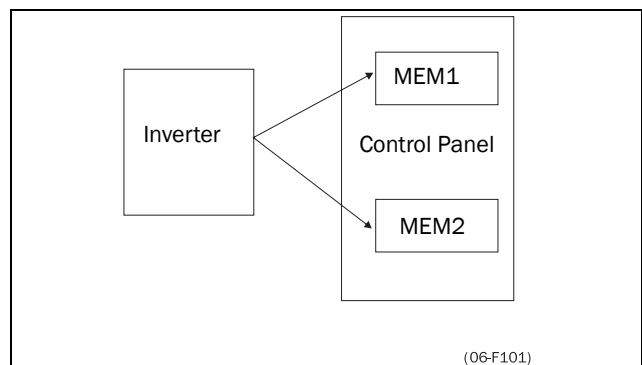


Fig. 27 Copy: - Complete Set-up

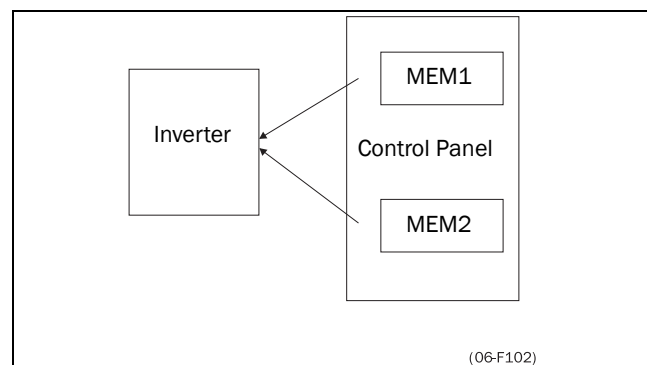


Fig. 28 Load: - Complete Set-up
- All Parameter Sets
- Active Parameter Set

5. FUNCTIONAL DESCRIPTION OF SETUP MENU

NOTE! Functions with an asterisk * are also changeable during Run Mode.

5.1 Resolution of settings

The resolution for all range settings as described in this chapter are 3 significant digits. Exceptions are stated. Table 15 shows the resolutions for 3 and 4 significant digits.

Table 14 Resolutions of settings

3 Digit	Resolution
0.01-9.99	0.01
10.0-99.9	0.1
100-999	1
1000-9990	10
10000-99900	100

5.2 Start window [100]

This window is displayed at every power-up and is normally displayed during operation. As default it displays the actual frequency and torque.

100	0Hz
Stp	0.0A

Other read-outs are programmable with the function 1st Line [110] and 2nd Line [120].

The display function sets the content of the Start window [100].

In Fig. 29 it is shown that the display value 1st line [110] is on the upper row and display value 2nd line [120] is on the lower row.

100	(1st Line)
Stp	(2nd Line)

Fig. 29 Display functions.

5.2.1 1st Line [110]

Sets the content of the first line in the Start Window [100].

110 1st Line Stp Frequency *	
Default:	Frequency
Selection:	Frequency, Load, EI Power, Current, Output Voltage, DC Voltage, Temperature, FI Status, Process Speed
Frequency	See window 610 § 5.7.1, pagina 54
Load	See window 620 § 5.7.2, pagina 54
EI Power	See window 630 § 5.7.3, pagina 54
Current	See window 640 § 5.7.4, pagina 54
Output Voltage	See window 650 § 5.7.5, pagina 54
DC Voltage	See window 660 § 5.7.6, pagina 54
Temperature	See window 670 § 5.7.7, pagina 54
FI Status	See window 680 § 5.7.8, pagina 55
Process Speed	See window 6E0 § 5.7.16, pagina 56

5.2.2 2nd Line [120]

Same function as 1st Line [110].

120 2nd Line Stp Current *	
Default:	Current
Selection:	Frequency, Load, EI Power, Current, Output Voltage, DC Voltage, Temperature, FI Status, Process Speed

5.3 Main set-up [200]

Main menu with the most important settings to get the inverter operational, e.g. motor data, drive data, utilities and options.

5.3.1 Operation [210]

Submenu to set the V/Hz mode, Reference Control, Run/Stop Control.

5.3.2 V/Hz Curve [211]

Setting of the V/Hz curve. Fig. 30 shows the difference between to 2 selections.

211 V/Hz curve Stp Linear *	
Default:	Linear
Selection:	Linear, Square
Linear	The V/Hz ratio is constant over the whole frequency range, giving the nominal magnetic field to the motor. The inverter is able to give nominal field over the full frequency range 0 to 50Hz. The 50Hz is automatically set by the motor data (see § 5.3.10, pagina 32). This curve is suitable for all applications.
Square	The square curve lowers the V/Hz ratio in the lower load area and thus the magnetic field in the motor. This reduces the motor losses and the extra modulation noise of the motor. This curve is suitable for applications with a quadratic load curve. In general these are centrifugal pumps and fans.

NOTE! Be sure the application is designed to be used at a low V/Hz ratio. If not the inverter can trip on Overload or Overcurrent trips due to low voltage on the motor. (See chapter 6. page 66).

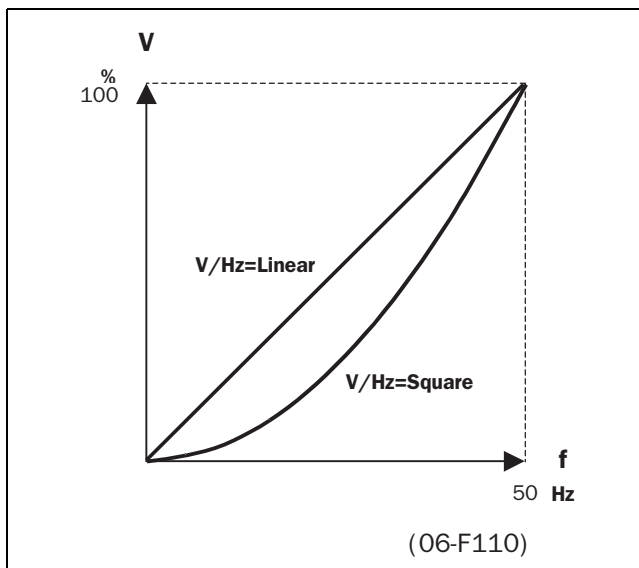


Fig. 30 V/Hz curves

5.3.3 Reference control [212]

Selection of the source of the reference signal.

212 Ref Control Stp Remote	
Default:	Remote
Selection:	Remote, Keyboard, Comm, Rem/DigIn 2, Comm/DigIn 2, Comm/RemDI2, Option
Remote	The reference signal comes from the analogue inputs of the terminal strip (terminal 1-22) (see § 5.5.2, pagina 47).
Keyboard	Reference is set with the + and - keys on the Control Panel. Can only be done in window Set/View Ref [500], (see § 5.6, pagina 54). Now the + and - keys will set the reference value.
Comm	The reference is set via the serial communication (RS 485, Fieldbus, see § 5.3.31, pagina 35)
Rem/DigIn 2	The reference signal is selectable using DigIn 2. See Fig. 31. DigIn2=High:Ref via Keys DigIn2=Low:Ref via Remote
Comm/DigIn 2	The reference signal is selectable with DigIn 2. See Fig. 32 DigIn2=High:Ref via Keys DigIn2=Low:Ref via Communication
Comm/Rem DI2	The reference signal is selectable with DigIn 2. DigIn2=High:Ref via Remote DigIn2=Low:Ref via Communication
Option	The reference signal is set via the option connector, depending on the option used (only visible if option is connected). See chapter 7. page 70.

NOTE! If the reference is switched from Remote to Control Panel, the reference value is also taken over by the new reference.

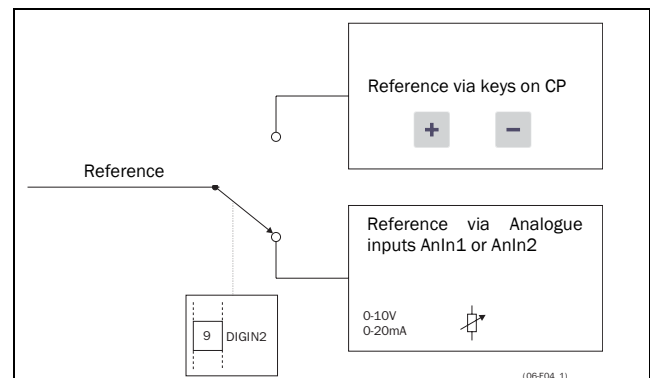


Fig. 31 Reference Control = Rem/DigIn 2.

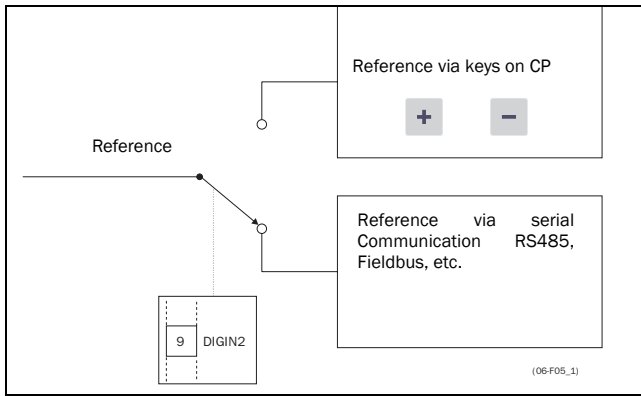


Fig. 32 Reference Control =Comm/DigIn 2.

NOTE! The programmable input DigIn 2 will not be programmable from the I/O menu [400] when “Rem/DigIn 2” Or “Comm/DigIn 2” has been selected. (See § 5.5, pagina 47).

NOTE! The functions “Rem/DigIn 2” and “Comm/DigIn 2” can be used to make a local/remote control. See also § 5.3.4, pagina 30 and § 5.5.2, pagina 47.

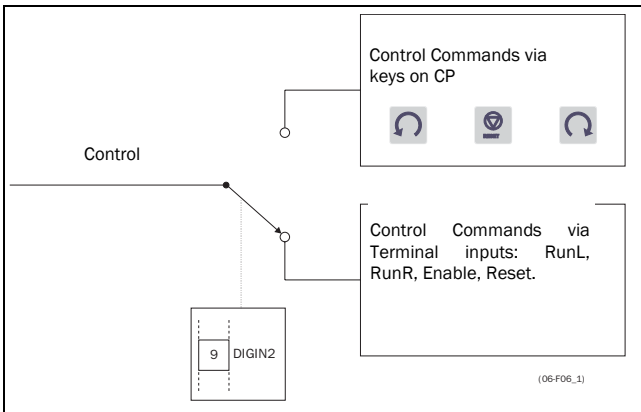


Fig. 33 Run/stp Control = Rem/DigIn 2.

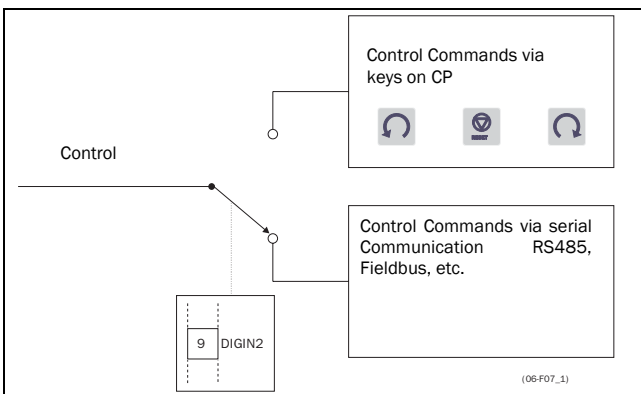


Fig. 34 Run/Stp Control =Comm/DigIn 2.

5.3.4 Run/Stop/Reset control [213]

Selection of the source for run, stop and reset commands. See § 4.2, pagina 24 for the functional description.

213 Run/Stp Ctrl Stp Remote	
Default:	Remote
Selection	Remote, Keyboard, Comm, Rem/DigIn 2, Comm/DigIn 2, Comm/RemDI2, Option
Remote	The commands come from the inputs of the terminal strip (terminal 1-22)
Keyboard	The commands come from the command keys of the Control Panel. See § 4.1.4, pagina 21.
Comm	The commands come from the serial communication (RS 485, Fieldbus, see § 5.3.31, pagina 35).
Rem/DigIn 2	With DigIn2 the commands are selectable between remote and the keyboard. See Fig. 33. DigIn2=High:Control via Keys DigIn2=Low:Control via Remote
Comm/DigIn 2	With DigIn2 the commands are selectable between comm and the keyboard. See Fig. 34. DigIn2=High: Control via Keys DigIn2=Low: Control via serial communication
Comm/Rem DI2	With DigIn2 the commands are selectable between comm and remote. DigIn2=High: Control via Remote DigIn2=Low: Control via serial communication
Option	The commands are set via the option connector, depending on the option used (only visible if option is connected). See chapter 7. page 70.

NOTE! The programmable input DigIn 2 will not be programmable from the I/O menu [400] when “Rem/DigIn 2” or “Comm/DigIn 2” has been selected. (see § 5.5.11, pagina 49).

NOTE! The functions “Rem/DigIn 2” and “Comm/DigIn 2” can be used to make a local/remote control (see § 5.3.3, pagina 29).

5.3.5 Rotation [214]

Sets the general rotation for the motor. See also § 4.2.6, pagina 26.

214 Rotation	
Stp	R+L
Default:	R + L
Selection:	R+L, R, L
R+L	Both frequency directions allowed.
R	Frequency direction is limited to right direction (clockwise). The input and key RunL are disabled.
L	Frequency direction is limited to left direction (counter-clockwise). The input and key RunR are disabled.

NOTE! If the functions "R" or "L" are selected the window **Direction [324]** invisible.

5.3.6 Level/Edge control [215]

Sets the way of input control for the inputs RunR and RunL. See also § 4.2, pagina 24 for the functional description.

215 Level/Edge	
Stp	Level
Default:	Level
Selection:	Level, Edge
Level	The inputs are activated or deactivated by a continuous high or low signal.
Edge	The inputs are activated or deactivated by a "low" to "high" transition.

5.3.7 IxR Compensation [216]

Compensates the voltage drop over the stator resistance of the motor by increasing the output voltage at constant frequency. IxR Compensation is most important at low frequencies and is used to obtain a higher starting torque. The maximum voltage increase is 25% of the nominal output voltage. See Fig. 35.

The IxR Compensation can be used in combination with Linear V/Hz curve as well as with Square V/Hz curves although the combination with Square V/Hz curves has little use. See Fig. 36.

216 IxR Comp	
Stp	0.0% *
Default:	0.0%
Range:	0-25% x U _{NOM}
Resolution	0.1%

NOTE! A too high level of IxR Compensation could cause saturation of the windings in the motor. This can cause a "Power Fault" trip. The effect of IxR Compensation is stronger with higher power motors.

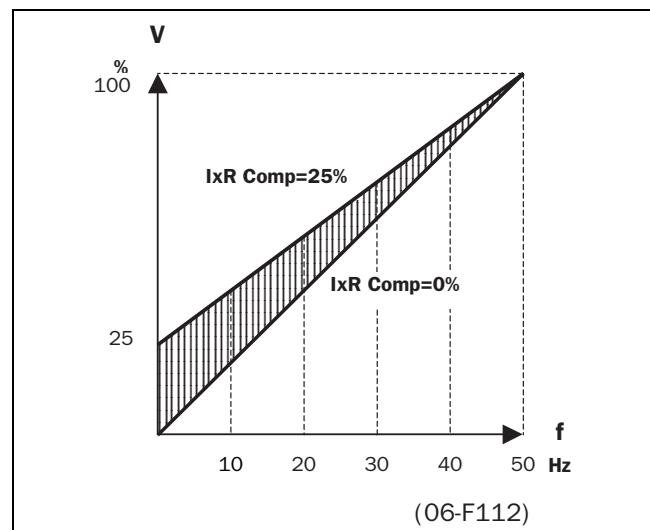


Fig. 35 IxR Comp at Linear V/Hz curve

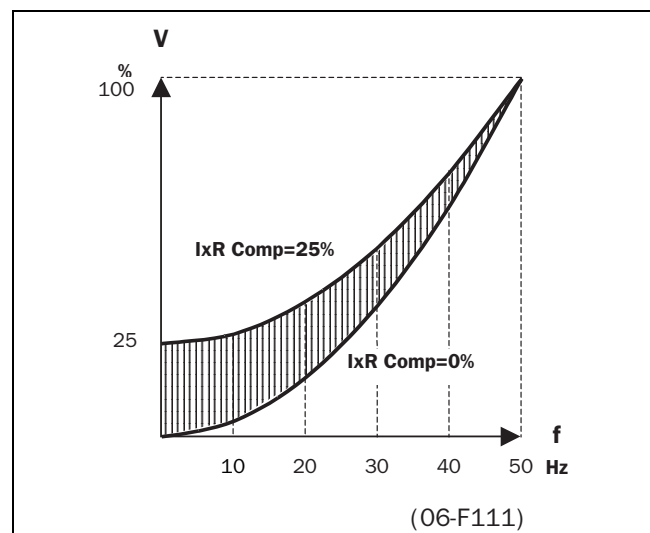


Fig. 36 IxR Comp at Square V/Hz curve

5.3.8 Mains [217]

Shows the set mains voltage input for the inverter.

217 Mains	
Stp	400V

5.3.9 Motor data [220]

The submenus are read-only menus that shows the set motor data.

5.3.10 Motor power [221]

Setting of the nominal motor power

221 Motor Power Stp (P _{NOM}) kW
--

P_{nom} is the nominal inverter power.

5.3.11 Motor voltage [222]

Setting of the nominal motor voltage.

222 Motor Volts Stp U _{NOM} VAC
--

5.3.12 Motor frequency [223]

Setting of the nominal motor frequency.

223 Motor Freq Stp 50Hz

5.3.13 Motor current [224]

Setting of the nominal motor current.

224 Motor Curr Stp (I _{NOM}) A
--

I_{nom} is the nominal inverter current.

5.3.14 Motor Speed [225]

Setting of the nominal Motor Speed.

225 Motor Speed Stp (n _{MOT}) rpm

5.3.15 Motor cos PHI [226]

Setting of the nominal Motor cosphi (power factor).

226 Motor Cosphi Stp

5.3.16 Actual pole number [229]

Setting of actual pole numbers of the motor.

229 Poles Stp

5.3.17 Limited max frequency [22A]

Setting of the limit for the Max Frequency [322] (see § 5.4.15, pagina 40).

22A Lim max Freq Stp 50Hz

5.3.18 Utility [230]

Submenu to set common inverter settings like display language, locking Control Panel, loading defaults, copying and selecting Parameter Sets, copying settings between inverters.

5.3.19 Language [231]

Selection of the language of the LCD Display. The language selection is not affected by the Load Default command (see § 5.3.23, pagina 33)

231 Language Stp English	
Default:	English
Selection:	English, Deutsch, Svenska, Nederlands, Français, Español.

5.3.20 Keyboard (un)lock [232]

If the keyboard is not locked (default) than the selection "Lock Code ?" will appear. If the keyboard is already locked, then the selection "Unlock Code ?" will appear. The keyboard can be locked with a password to prevent unauthorised personnel from changing parameters. When the keyboard is locked, parameters can be viewed but not changed. The reference value can be changed, the inverter can be started, stopped and reversed if these functions are set to be controlled from the keyboard. The code = 291.

232 Lock Code? Stp 0 *	
Default:	0
Range:	0 - 9999

NOTE! The message "CP locked!" will appear for as long as the "+" or "-" keys are pressed if an attempt to change a parameter is made while the system is locked. The value in 232 will revert to "0" after "Enter" is pressed.

5.3.21 Copy Set [233]

Copies the content of a Parameter Set into another Parameter Set. A Parameter Set consists of all parameters in the submenu Parameter Sets [300], see § 4.3, pagina 26.

233 Copy Set Stp A>B	
Default:	A>B
Selection:	A>B, A>C, A>D, B>A, B>C, B>D, C>A, C>B, C>D, D>A, D>B, D>C

5.3.22 Select set no. [234]

Select a Parameter Set. A Parameter Set consists of all parameters in the submenu Parameter Sets [300]. Every function in the submenu Parameter Sets has an indication A, B, C or D depending on the active Parameter Set. Parameter Sets can be selected from the keyboard or via the programmable digital inputs 3 and/or 4. Parameter Sets can be changed during run, see § 4.3, pagina 26 for further explanation.

234 Select Set Stp A *	
Default:	A
Selection:	A, B, C, D, DigIn 3, DigIn 3+4, Comm
A, B, C, D	Fixed selection of one of the 4 Parameter Sets A, B, C or D
DigIn 3	Selection of Parameter Set A or B with input DigIn 3. See § 4.3, pagina 26 for the selection table.
DigIn 3+4	Selection of Parameter Set A, B, C or D with input DigIn 3 and DigIn 4. See § 4.3, pagina 26 for the selection table.
Comm	Selection of the Parameter Set via serial communication. (RS 485, fieldbus, see § 5.3.31, pagina 35)

The active set can be viewed with function 680 FI status. (See § 5.7.8, pagina 55).

NOTE! The programmable input DigIn 3 or DigIn 4 will not be programmable from the I/O menu when DigIn 3 or DigIn 4 has been selected.

NOTE! A filter (50ms) will prevent contact bounces etc. from activating the wrong set when DigIn 3 or DigIn 4 is selected.

5.3.23 Default values [235]

Load default values on 3 different levels (factory settings).

235 Load Default Stp A	
Default:	A
Selection:	A, B, C, D, All, Factory
A, B, C, D	Only the selected Parameter Set will be reverted to its default settings.
All	All 4 Parameter Sets (the complete menu 300) will be reverted to the default settings.
Factory	All 4 Parameter Sets and the menu's 100, 200 (except 220 and 231), 300, 400 and 800 will be reverted to the default settings.

NOTE! Trip log hour counter and other VIEW ONLY windows are not regarded as settings and will be unaffected.

NOTE! The message "Sure?" when selecting "Factory" must be confirmed by "Yes".

5.3.24 Copy all settings to Control Panel [236]

All the settings (the complete Setup Menu) are copied into the Control Panel. Two separate memory banks Mem1 to Mem2 are available in the CP. In one Control Panel 2 complete sets of inverter settings can be stored, to be loaded into other inverters. (See also § 4.4, pagina 27).

236 Copy to CP Stp CP MEMORY 1 *	
Default:	CP MEMORY 1
Selection:	CP MEMORY 1 - CP MEMORY 2

5.3.25 Load Parameter Sets from Control Panel [237]

All 4 Parameter Sets sets from the Control Panel are loaded. Parameter Sets from the source inverter are copied to all Parameter Sets in the target inverter, i.e. A to A, B to B, C to C and D to D. (See § 4.4, pagina 27).

237 CP>All Sets Stp CP MEMORY 1 *	
Default:	CP MEMORY 1
Selection:	CP MEMORY 1 - CP MEMORY 2

5.3.26 Load the active Parameter Set from Control Panel [238]

Only the active Parameter Set is loaded from the Control Panel.

Example:

If the active Parameter Set in the target inverter is “B”, then Parameter Set “B” from the selected memory bank will be loaded.

238 CP>Act Set Stp CP MEMORY 1	
Default:	CP MEMORY 1
Selection:	CP MEMORY 1-CP MEMORY 2

5.3.27 Load all settings from Control Panel [239]

All the settings from the Control Panel are loaded. The complete setup (including Motor Data) of the source inverter is copied to the target inverter. (See § 4.4, pagina 27).

239 CP>Settings Stp CP MEMORY 1	
Default:	CP MEMORY 1
Selection:	CP MEMORY 1-CP MEMORY 2

5.3.28 Autoreset [240]

The Autoreset must be enabled first by making the Autoreset input continuously high. See § 4.2.5, pagina 25. With function Number of trips [241] the Autoreset is activated. Select from window [242] to [24E] the relevant Trip condition for the Autoreset.

5.3.29 Number of Trips [241]

Any number set above 0 activates the Autoreset. This means that after a trip, the inverter will restart automatically according to the number of attempts selected. No restart attempts will take place unless all conditions are normal.

If the Autoreset counter (not visible) contains more trips than the selected number of attempts, the Autoreset cycle will be interrupted. No Autoreset will then take place. The Autoreset counter is subtracted by one every 10 minutes.

If the maximum number of Trips has been reached, the trip message hour counter is marked with an “A”. See also § 5.8, pagina 58 and § 6.2, pagina 67. If the Autoreset is full then the inverter must be reset by a normal Reset.

Example:

- Autoreset = 5
- Within 10 minutes 6 trips occur
- At the 6th Trip there is no Autoreset, because the Autoreset Trip Log contains 5 trips already.
- To reset, apply a normal reset: input High to Low and High again to maintain the Autoreset function. The counter is reset.

241 No of Trips Stp 0	
Default:	0 (no Autoreset)
Range:	0 - 10 attempts

NOTE! An Autoreset is delayed by the remaining ramp time.

5.3.30 Selection of Autoreset trips

The windows [242] to [24E] select for each individual trip the Autoreset function. As default no trips are selected. Selection is On or Off.

Window	Default
242 Overtemp	Off
243 Overcurrent	Off
244 Overvolt D	Off
245 Overvolt G	Off
246 Overvolt L	Off
247 Motor Temp	Off
248 Ext Trip	Off
249 Motor Lost	Off
24A Alarm	Off
24B Locked Rotor	Off
24C Power Fault	Off
24D Undervoltage	Off
24E Comm Error	Off

5.3.31 Option: Serial communication [250]

Settings of the optional serial input. See the Serial Communication instruction manual for further information.

	251 Baudrate Stp 38400 *
Default:	9600
Range:	9600 fixed

	252 Address Stp 1 *
Default:	1
Range:	1-247
Set this value to 1 in fieldbus mode. In RS232 mode, any value in the range 1-247 can be used.	

	253 Interrupt Stp Trip *
Default:	Trip
Selection:	Trip, Warning, Off
Trip	If there is no communication for longer than 15 seconds the inverter trips on "Comm Error", see chapter 6. page 66.
Warning	If there is no communication for longer than 15 seconds the inverter will give a warning. See chapter 6. page 66.
Off	No interrupt safe guard active.

5.3.32 PTC [260]

5.3.33 PTC [261]

Shows the status of the PTC input.

	261 PTC Stp On *
Default:	On (fixed setting)

5.3.34 Macros [270]

Macro's pre set a selected number of windows, so only small adjustment are needed to set up the inverter for a particular application. The Macro's will mainly pre set Input and Output selections. After selecting a Macro all Windows still can be changed.

NOTE! When a macro is selected, only the used parameters are changed. Previous settings, manually or via macro's, are not changed. The description of the macro's in this user manual is based on the default settings of the inverter.

5.3.35 Select Macro [271]

When the selecting a Macro, the message "Sure?" must be confirmed by "Yes" to activate the selected Macro.

	271 Select macro Stp Loc/Rem Ana *
Default:	Loc/Rem/Ana
Selection:	Loc/Rem Ana, Loc/Rem Comm, PID, Preset, MotPot, Pump/Fan

Loc/Rem Ana

Local/Remote control with analogue signal:

- DigIn 2 selects between:
 - Run/Stop control via the Control Panel
 - Remote Run/Stop control.
- DigIn 3 selects between:
 - Analogue Input 1 (4-20mA)
 - Analogue input 2 (0-10V)

By operating DigIn2 and 3 simultaneously, a switch-over is made between:

Local (both HI) Run/Stop/Reset via Control Panel
Reference via AnIn2 (0-10V for potentiometer)

or

Remote (both LO) Run/Stop/Reset via User Interface
Reference via AnIn1 (4-20mA)

The following settings are made:

Table 15 Macro Loc/Rem Ana

Window	Selection/Range
212 Ref Control	Remote
213 Run/Stop Control	Rem/DigIn 2
411 AnIn 1 Funct	Frequency
412 AnIn 1 Setup	2-10V/4-20mA
415 AnIn 2 Funct	Frequency
416 AnIn 2 Setup	0-10V/0-20mA
423 DigIn 3	AnIn Select

NOTE! Jumper S3 must be set for "current". See Fig. 37 for a connection example.

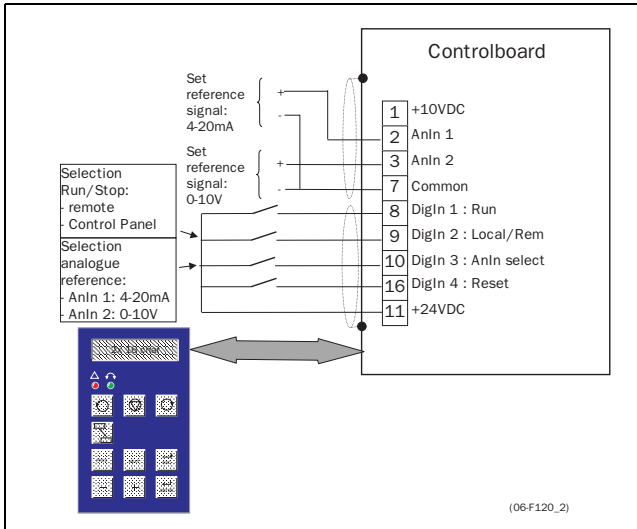


Fig. 37 Local / Remote Ana macro

Loc/Rem Comm

Local/Remote control with serial communication.:

NOTE! A serial communication option must be connected and set:

- DigIn 2 selects between:
 - Run/Stop control with reference (+,- keys) both via the Control Panel
 - Remote Run/Stop control with remote analogue reference via the serial option.

The following settings are made:

Tabel 16 Macro Loc/Rem Comm

Window	Selection/Range
212 Ref Control	Comm/DigIn 2
213 Run/Stop Control	Comm/DigIn 2
411 AnIn1 Funct	Off
415 AnIn2 Funct	Frequency
416 AnIn2 Setup	0-10V/0-20mA

See Fig. 38 for a connection example.

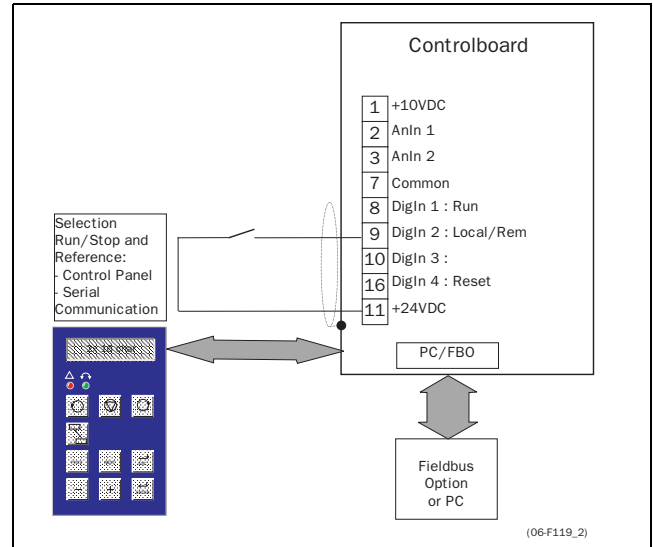


Fig. 38 Local/Remote Comm macro

PID

Setup for PID operation:

- Analogue reference is on AnIn 1(0-10V)
- Feedback reference is on AnIn 2 (0-10V)
- Run /Stop control is remote.

The following settings are made:

Tabel 17 Macro PID

Window	Selection/Range
212 Ref Control	Remote
213 Run/Stop Control	Remote
343 PID Control	On
411 AnIn 1 Funct	PID control
412 AnIn1 Setup	0-10V/0-20mA
416 AnIn2 Setup	0-10V/0-20mA

See Fig. 39 for a connection example.

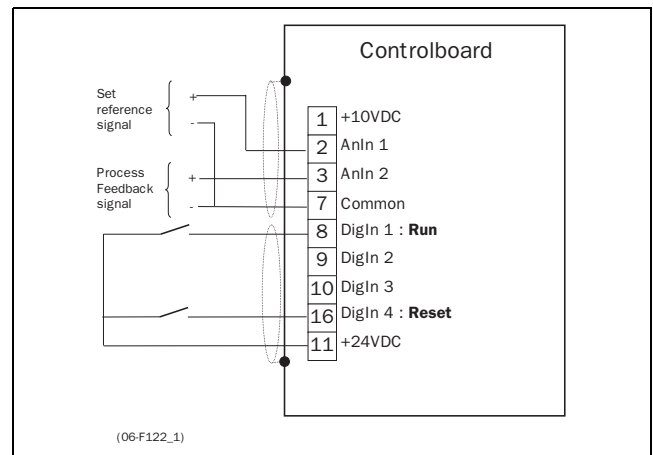


Fig. 39 PID Macro

Preset Frequency

Selecting 3 preset frequencies with digital inputs DigIn 2 and DigIn 3.:

- DigIn 2 and 3 selects the preset frequencies according to the truth table:

DigIn 3	DigIn 2	Preset
LO	LO	No preset
LO	HI	Preset 1
HI	LO	Preset 2
HI	HI	Preset 3

The following settings are made:

Tabel 18 Macro Preset Frequency

Window	Selection/Range
212 Ref Control	Remote
213 Run/Stop Control	Remote
411 AnIn 1 Funct	Off
422 DigIn 2	Pres Ref 1
423 DigIn 3	Pres Ref 2

See Fig. 40 for a connection example.

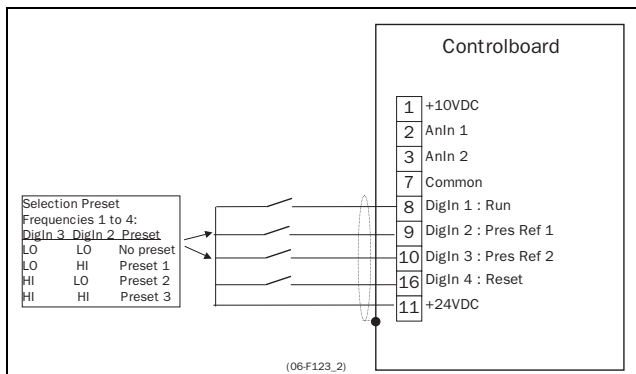


Fig. 40 Preset Frequency

MotPot

Local/Remote control with the Motor Potentiometer function:

- DigIn 2 selects between:
 - Run/Stop control with Analogue reference (+, - keys) both via the Control Panel.
 - Remote Run/Stop control with remote reference MotPot function on DigIn 5 and DigIn 6.

The following settings are made:

Tabel 19 Macro MotPot

Window	Selection/Range
212 Ref Control	Rem/DigIn 2
213 Run/Stop Control	Rem/DigIn 2
425 DigIn 5	MotPot Up
426 DigIn 6	MotPot Down

See Fig. 41 for a connection example.

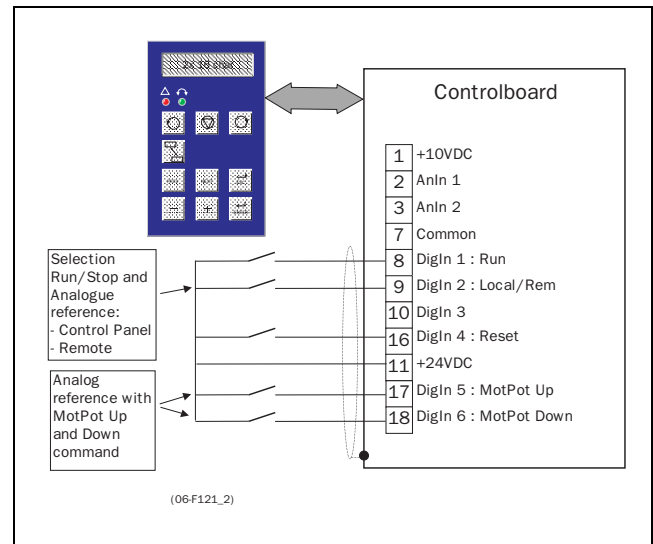


Fig. 41 MotPot macro

Pump/Fan

Applying this macro will set the most important Pump control functions according to the table below:

Tabel 20 Macro Pump/Fan

Window	Selection/Range
212 Ref Control	Remote
213 Run/Stop Control	Remote
214 Rotation	R
281 Pump control	On
343 PID Control	On (for all four parameter sets)
411 AnIn 1 Function	Frequency If the window 343 is On, "PID Control" is displayed
412 AnIn 1 Setup	0-10V/0-20mA
416 AnIn 2 Setup	0-10V/0-20mA

See the Pump Option instruction manual for more information about using the Macro function.

5.3.36 Pump Control [280]

Settings for the Pump Control option. See and the Pump Control instruction manual.

5.4 Parameter Sets [300]

The parameters in this main menu are regarded as a Parameter Set. These parameters are mainly of the type which are often adjusted to obtain optimum machine performance. Up to four sets (A, B, C and D) can be stored. They can be selected (also during run) via the keyboard, the terminals (DigIn 3 and 4) or via the serial communications. The name of the active set is indicated by a letter in front of each parameter value. It can also be read in the FI Status [6A0] (see § 5.7.8, pagina 55). See for further explanation § 4.3, pagina 26.

5.4.1 Run/Stop [310]

Submenu with the all the functions regarding acceleration, deceleration, starting, stopping, etc.

5.4.2 Acceleration time [311]

The acceleration time is defined as the time it takes to go from 0rpm to nominal motor frequency.

NOTE! If the Acc Time is too short, the motor is accelerated according to the Torque Limit. The actual Acceleration Time may be higher than set.

311 Acc Time	
Stp A: 2.00s *	
Default:	2.00s
Range:	0.50 - 3600s

Fig. 42 shows the relationship between nominal motor frequency/Max Frequency and the Acceleration Time. The same is valid for the Deceleration Time.

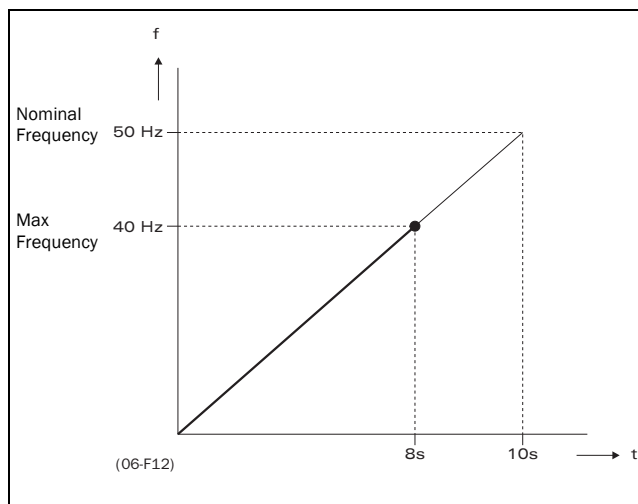


Fig. 42 Acceleration time and maximum frequency.

Fig. 43 shows the settings of the Acceleration and Deceleration Times with respect to the nominal motor frequency.

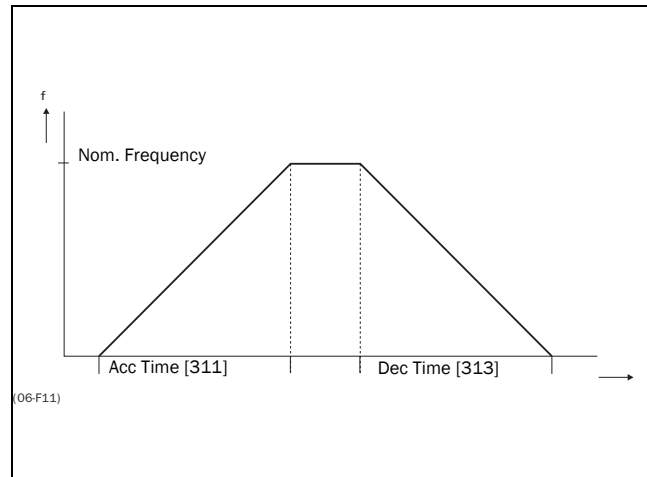


Fig. 43 Acceleration and deceleration times.

5.4.3 Acceleration time for MotPot [312]

If the MotPot function is selected, this is the acceleration time for the MotPot Up command. See § 5.5.11, pagina 49.

312 Acc MotPot	
Stp 16.00s *	
Default:	16.00
Range:	0.50-3600s

5.4.4 Acceleration time to Min. Frequency [313]

If a Minimum frequency is programmed this is acceleration time from 0Hz to the Minimum Frequency at a Run command.

313 Acc>Min Freq	
Stp 2.00s *	
Default:	2.00s
Range:	0.50-3600s

5.4.5 Acceleration ramp type [314]

Sets the type of all the acceleration ramps. See Fig. 44.

314 Acc Rmp Type	
Stp A: Linear *	
Default:	Linear
Selection:	Linear, S-Curve
Linear	Linear acceleration ramp
S-Curve	S-shape acceleration ramp

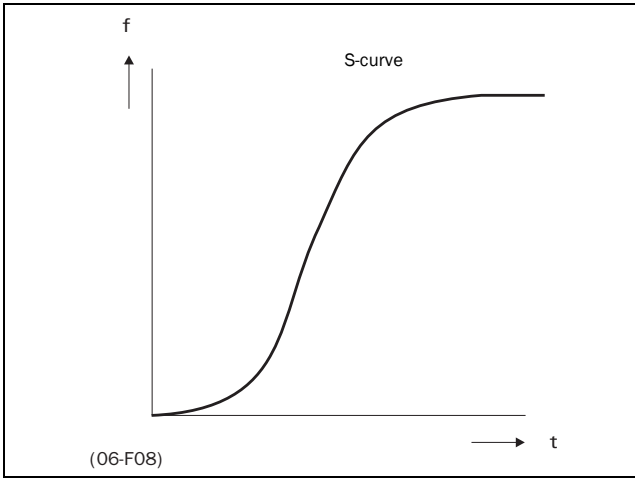


Fig. 44 S-curve acceleration ramp.

5.4.6 Deceleration time [315]

The deceleration time is defined as the time it takes to go from nominal motor frequency to 0Hz.

315 Dec Time Stp A: 2.00s *	
Default:	2.00s
Range:	0.50 - 3600s

NOTE! If the Dec Time is too short and the generator energy cannot be dissipated in a brake resistor, the motor is decelerated according to the overvoltage limit. The actual deceleration time may be higher than set.

5.4.7 Deceleration time for MotPot [316]

If the MotPot function is selected, this is the deceleration time for the MotPot Down command. See § 5.5.11, pagina 49.

316 Dec MotPot Stp 16.00s *	
Default:	16.00s
Range:	0.50-3600s

5.4.8 Deceleration time to Min. Frequency [317]

If a Minimum frequency is programmed this is deceleration time from the Minimum Frequency to 0Hz at a Stop command.

317 Dec<Min Freq Stp 2.00s *	
Default:	2.00s (10.0s for size 4 and up)
Range:	0.50-3600s

5.4.9 Deceleration ramp type [318]

Sets the type of all the acceleration ramps Fig. 45.

318 Dec Rmp Type Stp A: Linear *	
Default:	Linear
Selection:	Linear, S-Curve
Linear	Linear deceleration ramp
S-Curve	S-shape deceleration ramp

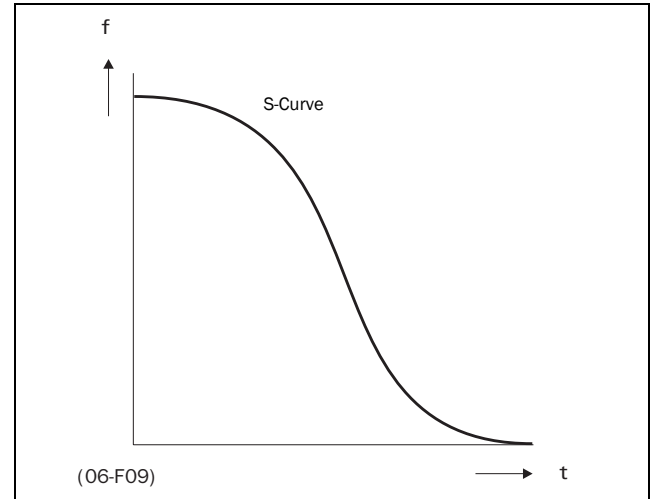


Fig. 45 S-curve deceleration ramp.

5.4.10 Start Mode [319]

Sets the way of starting the motor when a run command is given.

319 Start Mode Stp A: Fast *	
Default:	Fast
Selection:	Fast (fixed setting)
Fast	The motor flux increases gradually. The motor starts rotating immediately after the Run command is given.

5.4.11 Stop Mode [31A]

Sets the way of stopping the motor when a STOP command is given.

31A Stop Mode Stp A: Decel *	
Default:	Decel
Selection:	Decel, Coast
Decel	The motor decelerates to 0Hz according to the set deceleration time.
Coast	The motor freewheels naturally to 0Hz.

5.4.12 Spinstart [31B]

The Spinstart will start a motor which is already running, without tripping or generating high current peaks. With the Spinstart=On the actual rotation of the motor is delayed depending on motor size, running conditions of the motor before the Spinstart, inertia of the application etc.

31B Spinstart Stp A: Off *	
Default:	Off
Selection:	Off, On
Off	No Spinstart. If the motor is already running the inverter can trip or will start with high current.
On	Spinstart will allow to start a running motor without tripping or high inrush currents.

5.4.13 Frequencies [320]

Submenu with all settings regarding to frequencies, as Min/Max frequencies, Jog frequencies, Preset frequencies, Skip frequencies.

5.4.14 Minimum Frequency [321]

Sets the Minimum Frequency. See the function Min Frq Mode § 5.4.16, pagina 40 for the behaviour at Minimum Frequency. The Minimum Frequency will operate as an absolute lower limit.

321 Min Freq Stp A: 0Hz *	
Default:	0 Hz
Range:	0 - Max Frequency

NOTE! The Jog function and the Preset Frequencies ignore the Minimum Frequency setting. See also § 5.4.25, pagina 43, § 5.5.11, pagina 49 and § 5.4.19, pagina 41.

5.4.15 Maximum Frequency [322]

Sets the maximum frequency at 10V/20mA, unless a user defined characteristic of the analogue input is programmed (see § 5.5.4, pagina 48, § 5.5.5, pagina 48, § 5.5.8, pagina 49 and § 5.5.9, pagina 49). The nominal motor frequency is determined by the parameter Motor frequency [225] (see § 5.3.14, pagina 32). The Maximum Frequency will operate as an absolute maximum limit.

322 Max Freq Stp A: $f_{MOT}Hz$ *	
Default:	f_{MOT}
Range:	Min Freq - $2x f_{MOT}$

NOTE! It is not possible to set the Max frequency lower than the Minimum frequency.

Note! It is not possible to set the Max Frequency higher than the Limit Max Frequency [22A].

5.4.16 Min Freq Mode [323]

To select the behaviour of the inverter at minimum frequency.

323 Min Frq Mode Stp A: Scale *	
Default:	Scale
Range:	Scale, Limit, Stop
Scale	Minimum Frequency = Zero reference. See Fig. 46.
Limit	Minimum Frequency = Zero reference, but with a dead band according to Fig. 47.
Stop	The inverter will ramp to zero frequency when the frequency reference is lower than the minimum frequency. If the reference signal comes back it will ramp up again. See Fig. 48.

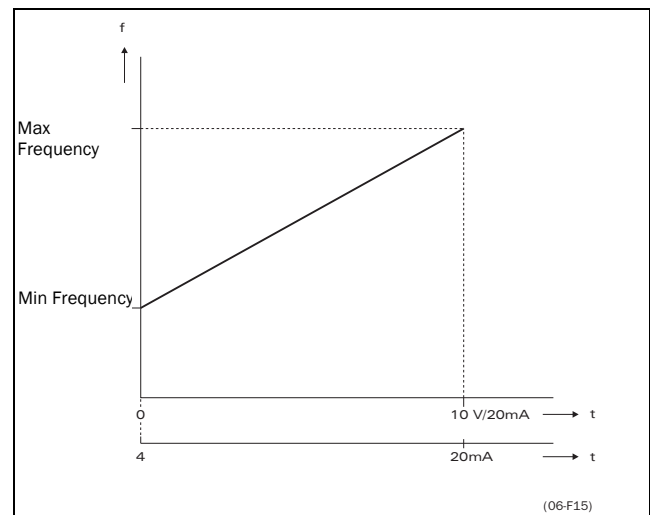


Fig. 46 Min Frq Mode = Scale.

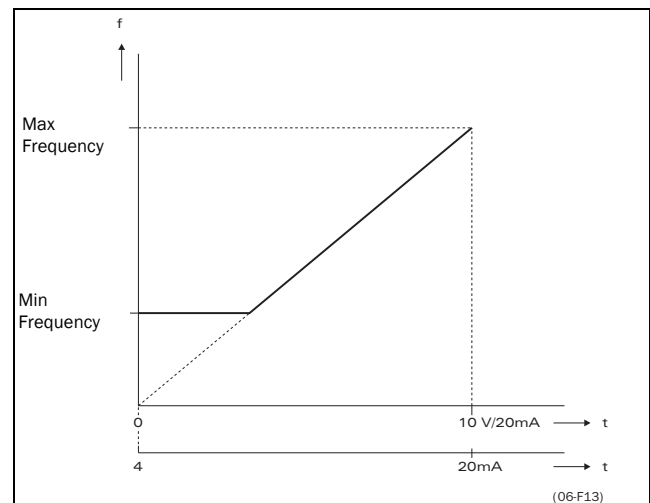


Fig. 47 Min Frq Mode = Limit.

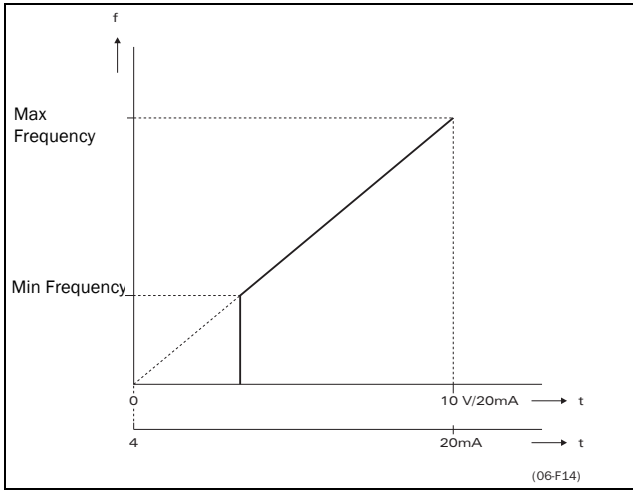


Fig. 48 Min Frq Mode = Stop.

5.4.17 Frequency Direction [324]

Sets the rotation for the active Parameter Set. See § 4.2.6, pagina 26.

324 Direction Stp A: R	
Default:	R
Range:	R, L
R	Direction is set to right direction (clockwise).
L	Direction is set to left direction (counterclockwise).

NOTE! This window is only visible if Rotation=R+L (see § 5.3.5, pagina 31).

This function is only useful when a RUN command is set to one of the Digital inputs. The RunL and RunR commands will always overrule this setting.

5.4.18 Motor Potentiometer [325]

Sets the properties of the Motor Potentiometer function. See the parameter DigIn1 [421] § 5.5.11, pagina 49 for the selection of the Motor Potentiometer function.

325 Motorpot Stp A: Non Vola *	
Default:	Non Vola
Selection:	Non Vola, Volatile
Non vola	Non Volatile. After a stop, trip or power down of the inverter the active output frequency at the moment of the stop will be memorized. After a new start command the output frequency will resume to this saved value.
Volatile	After a stop, trip or power down, the inverter will start always from zero frequency (or minimum frequency, if selected).

5.4.19 Preset Frequency 1 [326] to Preset Frequency 7 [32C]

Preset Frequencies are activated by the digital inputs, see § 5.5.11, pagina 49 - § 5.5.14, pagina 50. The digital inputs must be set to the function Pres. Ref 1, Pres. Ref 2 or Pres. Ref 4.

Depending on the number of digital inputs used up to 7 preset frequencies can be activated per Parameter Set. Using all the Parameter Sets, up to 28 preset frequencies are possible. (see § 4.3, pagina 26).

326 Preset Frq 1 Stp A: 10Hz *	
Default:	10Hz
Range:	0 - Max Frequency

The same settings are valid for the windows:

- [327 Preset Frq 2], with default 20Hz
- [328 Preset Frq 3], with default 30Hz
- [329 Preset Frq 4], with default 35Hz
- [32A Preset Frq 5], with default 40Hz
- [32B Preset Frq 6], with default 45Hz
- [32C Preset Frq 7], with default 50Hz

The selection of the presets is according to Tabel 21.

Tabel 21 Preset

Preset Ref 4	Preset Ref 2	Preset Ref 1	Output Frequency
0	0	0	Analogue reference as programmed
0	0	1 ¹⁾	Preset Frq 1
0	1 ¹⁾	0	Preset Frq 2
0	1	1	Preset Frq 3
1 ¹⁾	0	0	Preset Frq 4
1	0	1	Preset Frq 5
1	1	0	Preset Frq 6
1	1	1	Preset Frq 7

¹⁾= selected if only one Preset Ref is active

1 = active input

0 = non active input

Preset Frequencies have priority over the analogue inputs.

NOTE! If only preset Ref 4 is active, then the Preset Frq 4 can be selected. If Preset Ref 2 and 4 are active, then the Preset Frequencies 2, 4 and 6 can be selected.

5.4.20 Skip Frequency 1 Low [32D]

Within the range Skip Freq high to low the output frequency cannot be constant to avoid mechanical resonance in the drive system.

When Skip Frequency Low \leq Ref Frequency \leq Skip Frequency High, then Output Frequency=Skip Frequency HI during dec and Output Frequency=Skip Frequency LO during acc. Fig. 49 shows the function of Skip Frequency Hi and Low.

Between Skip Frequency HI and LO, the frequency changes with the set acceleration and deceleration times.

32D Skipfrq 1 LO Stp A: 0.0Hz *	
Default:	0.0 Hz
Range:	0 - f_{MAX}

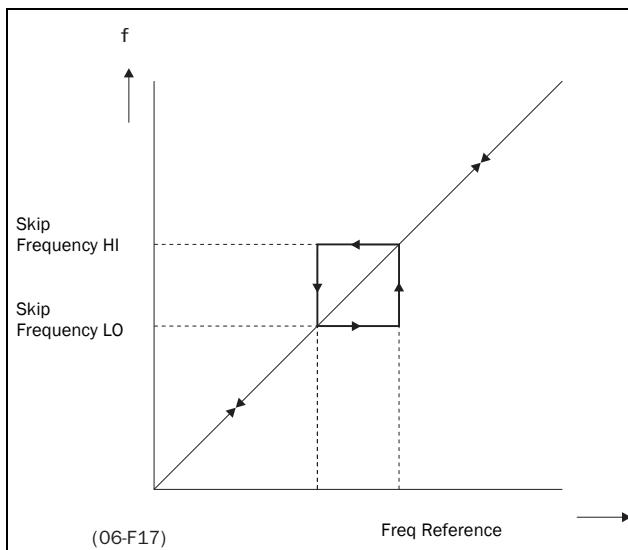


Fig. 49 Skip Frequency.

NOTE! The 2 Skip Frequency ranges may be overlapped.

5.4.21 Skip Frequency 1 High [32E]

See § 5.4.20, pagina 42.

32E Skipfrq 1 HI Stp A: 0.0Hz *	
Default:	0.0 Hz
Range:	0 - f_{MAX}

5.4.22 Skip Frequency 2 Low [32F]

See § 5.4.20, pagina 42.

32F Skipfrq 2 LO Stp A: 0.0Hz *	
Default:	0.0 Hz
Range:	0 - f_{MAX}

5.4.23 Skip Frequency 2 High [32G]

See § 5.4.20, pagina 42.

32G Skipfrq 2 HI Stp A: 0.0Hz *	
Default:	0.0 Hz
Range:	0 - f_{MAX}

5.4.24 Jog Frequency [32H]

The Jog Frequency command is activated by one of the digital inputs, see § 5.5.11, pagina 49 - § 5.5.14, pagina 50. The digital input must be set to the function Jog.

The Jog command will automatically give a run command as long as the Jog command is active. The rotation is determined by the polarity of the set Jog Frequency.

Example:

If Jog Frequency = -10, this will give Run Left command at 10 Hz regardless of RunL or RunR commands. Fig. 50 shows the function of the Jog command.

32H Jogfrequency Stp A: 2.0Hz *	
Default:	2.0 Hz
Range:	0 - $\pm 2 \times f_{MOT}$

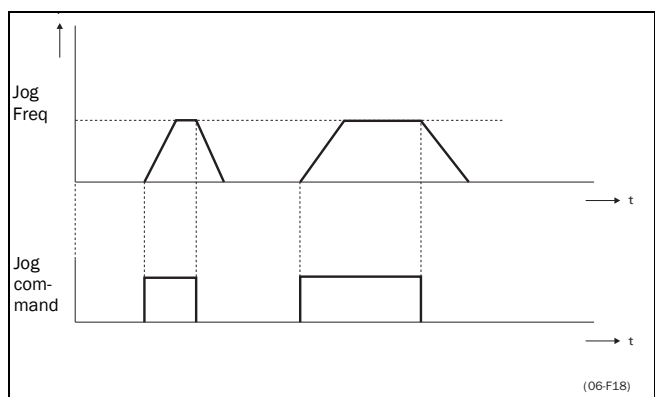


Fig. 50 Jog command.

5.4.25 Frequency priority

The active frequency reference signal can be programmed coming from several sources and functions. The table below shows the priority of the different functions with regards to the frequency reference.

Tabel 22 Frequency priority

Jog Mode	Preset Frequency	Motor Pot	Ref. Signal
Option cards			
On	On/Off	On/Off	Jog Frequency
Off	On	On/Off	Preset Frequency
Off	Off	On	Motor pot Commands
Off	Off	Off	AnIn1, AnIn2

5.4.26 Torque [330]

Submenu with all settings regarding to torque.

5.4.27 Torque Limit [331]

Enables the Torque limit control loop.

331 Torque Limit Stp A: Off *	
Default:	Off, (window 332 invisible)
Range:	Off, on

5.4.28 Maximum Torque [332]

Sets the maximum torque. This Maximum Torque operates as an upper torque limit. A Frequency Reference is always necessary to run the motor.

$$T_{MOT}(Nm) = \frac{P_{MOT}(w) \times 60}{n_{MOT}(rpm) \times 2\pi}$$

332 Max Torque Stp A: 120% *	
Default:	120%
Range:	0 - 200%

NOTE! 100% Torque means: $I_{NOM} = I_{MOT}$. Maximum depends on setting of Motor Current and inverter max current (see § 5.3.13, pagina 32), but absolute maximum adjustment is 200%

5.4.29 Controllers [340]

Submenu with all the setting regarding to the internal PI and external PID controller and the Flux optimization function and the Sound Characteristic.

5.4.30 Flux optimization [341]

Flux Optimization reduces the energy consumption and the motor noise, at low or no load conditions.

341 Flux Optimiz Stp A: Off *	
Default:	Off
Selection:	Off, On

The Flux Optimization automatically decreases the V/Hz ratio, depending on the actual load of the motor. Fig. 51 shows the area within the Flux Optimization is active.

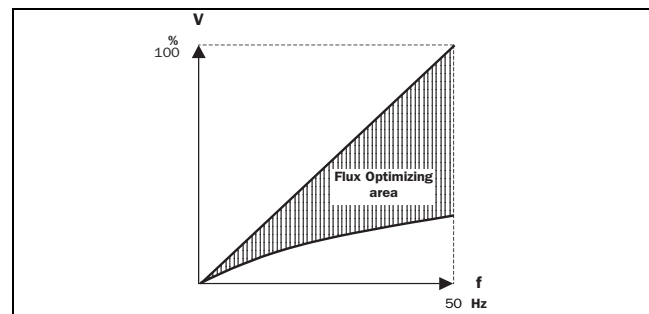


Fig. 51 Flux Optimizing

NOTE! The Flux Optimizing is NOT active when [211] V/Hz Curve=Square, see § 5.3.2, pagina 29.

5.4.31 Sound Characteristic [342]

Sets the sound characteristic of the inverter output stage by changing the switching frequency and/or pattern.

342 Sound Char Stp A: F *	
Default:	F
Selection:	E, F, G, H
E	Switching frequency 1,5Khz
F	Switching frequency 3 KHz
G	Switching frequency 6 KHz
H	Switching frequency 6 KHz, random modulation. (± 750 Hz)

NOTE! At switching frequencies > 1,5KHz derating may become necessary.

5.4.32 PID Controller [343]

The PID controller is used to control an external process via a feedback signal. The reference value can be set via analogue input AnIn1, at the Control Panel [500], or via serial communication. The feedback signal should be connected to analogue input AnIn2, which is locked to the setting “PID control” when the PID Controller is selected to “On” (or “Invert”).

343 PID Control Stp A: Off *	
Default:	Off
Selection:	Off, On, Invert
Off	PID control deactivated.
On	The frequency increases when the feedback value decreases. PID settings according to windows [345] to [348] (see § 5.4.32, pagina 44 to § 5.4.35, pagina 44).
Invert	The frequency decreases when the feedback value decreases. PID settings according to windows [345] to [348] (see § 5.4.32, pagina 44 to § 5.4.35, pagina 44).

NOTE! If the PID Control = On or Invert, the input AnIn2 is automatically set as feedback input. The reference value is according to setting of window [212]. Other function settings for AnIn1 and AnIn2 will be neglected.

5.4.33 PID P Gain [344]

Setting the P Gain for the PID controller. See also § 5.4.32, pagina 44.

344 PID P Gain Stp A: 1.0 *	
Default:	1.0
Selection:	0.0 - 30.0

NOTE! This window is not visible if the PID Controller = Off

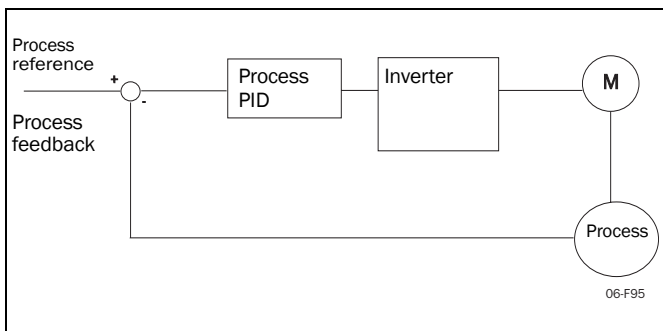


Fig. 52 Closed loop PID control.

5.4.34 PID I Time [345]

Setting the integration time for the PID controller. See § 5.4.32, pagina 44.

345 PID I Time Stp A: 1.00s *	
Default:	1.00 s
Selection:	0.01 - 300 s

NOTE! This window is not visible if the PID Controller = Off.

5.4.35 PID D Time [346]

Setting the differentiation time for the PID controller. See also § 5.4.32, pagina 44.

346 PID D Time Stp A: 0.00s *	
Default:	0.00 s
Selection:	0.00 - 30 s

NOTE! This window is not visible if the PID Controller = Off.

5.4.36 Limits/protections [350]

Submenu with all the settings regarding protection functions and limiting values for the inverter and the motor.

5.4.37 Low Voltage Override [351]

If a dip on the mains supply occurs, the inverter will automatically ramp down the frequency until the voltage rises again. The rotating energy in the motor/load will keep the DC-link voltage level at the override level, as long as it can or until the motor stops. This is dependent on the inertia of the motor/load combination and the load of the motor at the time the dip occurs, Fig. 53.

351 Low Volt OR Stp A: Off *	
Default:	Off
Selection:	Off, On
Off	Normal operation, at a voltage dip the low voltage trip will protect.
On	At mains dip, inverter ramps down until voltage rises.

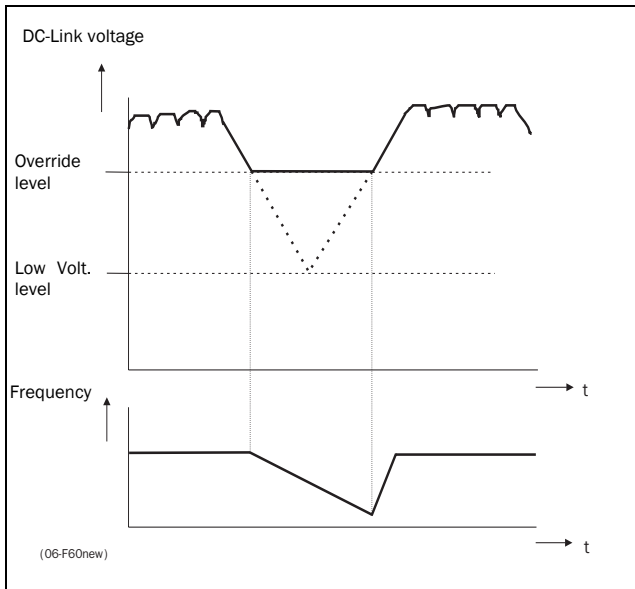


Fig. 53 Low Voltage Override.

NOTE! During the Low voltage override the LED trip/limits blinks.

5.4.38 Rotor locked[352]

Detects a locked rotor. This is when the Torque Limit has been active at very low frequency for more than 5 seconds.

352 Rotor locked Stp A: Off *	
Default:	Off
Selection:	Off, On
Off	No detection
On	Inverter will trip when locked rotor is detected. Trip message "Locked Rotor". See also chapter 6. page 66.

5.4.39 Motor lost [353]

Detects a disconnected motor, or phase loss at the motor (1, 2 or 3 phases) after 5 seconds.

353 Motor lost Stp A: Off *	
Default:	Off
Selection:	Off, Resume, Trip
Off	Function switched off to be used if no motor or very small motor connected.
Resume	Operation is resumed when the motor is reconnected.
Trip	Inverter will trip when the motor is disconnected. Trip message "Motor Lost". See also chapter 6. page 66.

5.4.40 Motor I²t Type [354]

Select the behaviour of the I²t protection. The I²t trip time is calculated with the formula:

$$t = 60 \times 0.44 / ((I_{out} / I_{12t[355]})^2 - 1) s.$$

354 Mot I²t Type Stp Trip *	
Default:	Trip
Selection:	Off, Trip, Limit
Off	I ² t motor protection is not active. The I ² t protection of the inverter remains always active, even if the motor I ² t is set to Off. The inverter I ² t protection has a fixed I ² t current level of 110% I _{NOM} .
Trip	When the I ² t time is exceeded, the inverter will trip on "Overload". See also chapter 6. page 66.
Limit	When the I ² t time is exceeded, the inverter lowers the Current Limit level (CL) to the same value as the I ² t current level in window [355].

Fig. 54 gives an example if the rated motor current is 50% and 100% of the nominal inverter current. If the limit is at maximum the inverter will trip at "I²t", see chapter 6. page 66.

NOTE! During the limit the LED trip/limits is blinking.

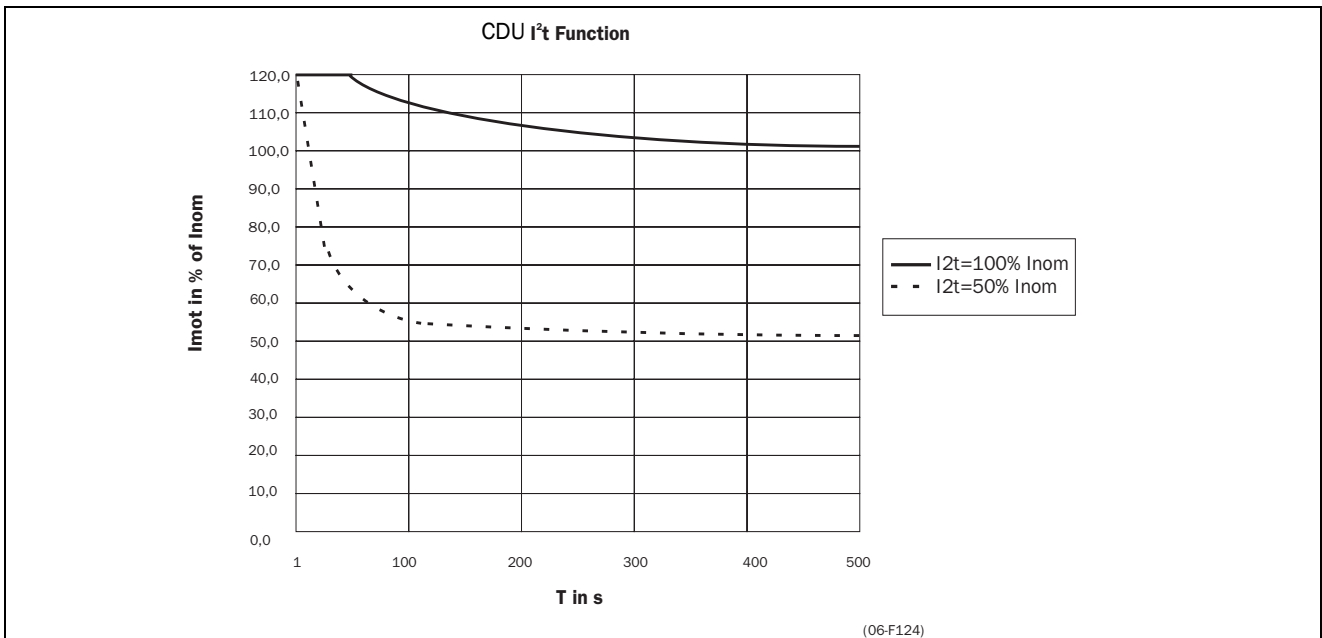


Fig. 54 I²t function

5.4.41 Motor I²t Current [355]

Sets the current limit for the motor I²t calculation. This level is independent from the torque limit. A smaller motor can still use the overcurrent capacity (torque) of a bigger inverter, at a lower I²t level.

355 Mot I²t I	
Stp (I _{NOM}) A *	
Default:	I _{NOM}
Range:	1.1 x I _{NOM} of the inverter

NOTE! This window is not visible when Motor I²T Type = Off (see § 5.4.40, pagina 45)

5.5 I/O [400]

Main menu with all the settings of the standard inputs and outputs of the inverter.

5.5.1 Analogue Inputs [410]

Submenu with all settings regarding the analogue inputs.

5.5.2 AnIn1 Function [411]

Setting the function for Analogue input 1.

411 AnIn 1 Funct Stp Frequency	
Default:	Frequency
Selection:	Off, Frequency, Torque
Off	Input is not active
Frequency	Reference value is set for Frequency Control. $100\% = F_{MAX}$
Torque	The input acts as an upper torque limit. The Maximum Torque is set in window Max Torque [332], see § 5.4.27, página 43. $100\% = T_{MAX}$

NOTE! PID Controller = on the message "PID Controller" is displayed here. If the reference signal comes from an option card, then the message "Option" is displayed here. Depends on reference selection.

NOTE! The windows 412, 413, and 414 are not visible if AnIn1 Func=Off.

Special functions:

- **Adding AnIn1 and AnIn2.**
If AnIn1 and AnIn2 are both set the values of the inputs are added.
- **Local /Remote control.**
If a digital input (see § 5.5.11, página 49) is set to the function "AnIn Select", This digital input can be used to switch between AnIn1 and AnIn2.

NOTE! If a digital input e.g. DigIn3=AnIn Select, then the analogue inputs are not added.

Example:

- AnIn 1 is set for speed control and 0-10V (local potentiometer).
- AnIn 2 is set for speed control and 4-20mA (remote control system)
- DigIn 3 = AnIn Select

Now with DigIn 3 the reference signal can be switched between AnIn 1 (potentiometer local) and AnIn 2 (current control remote).

NOTE! See also function Reference Control [212] § 5.3.3, página 29 for other possibilities with Local/Remote control of the reference signal.

5.5.3 AnIn 1 Set-up [412]

Preset scaling and offset of the input configuration. The input is unipolar.

412 AnIn 1 Setup Stp 0-10V/0-20mA	
Default:	0-10V/0-20mA
Selection:	0-10V/0-20mA, 2-10V/4-20mA, User defined
0-10V/0-20mA	Normal full scale configuration of the input. See Fig. 55.
2 - 10V/4 - 20mA	The input has a fixed offset=20% and Gain=1.25 (Live Zero). See Fig. 56.
User defined	The input can be set to a user defined offset and scaling. Now the functions AnIn 1 Offset [413] and AnIn 1 Gain [414] will appear to set the user defined configuration of the input. (Windows [417] and [418] for AnIn 2). Output=(Input - Offset) x Gain

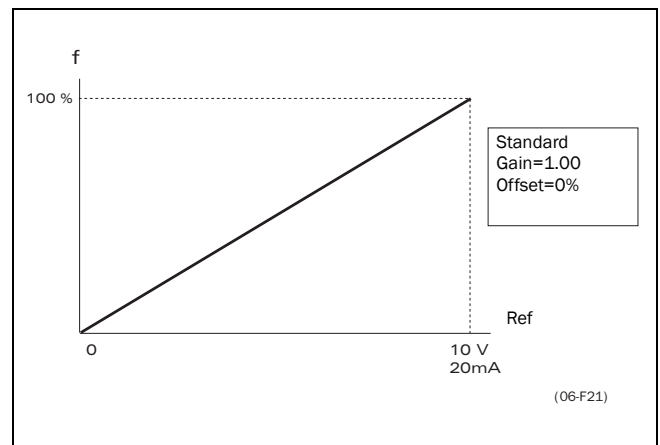


Fig. 55 Normal full-scale configuration.

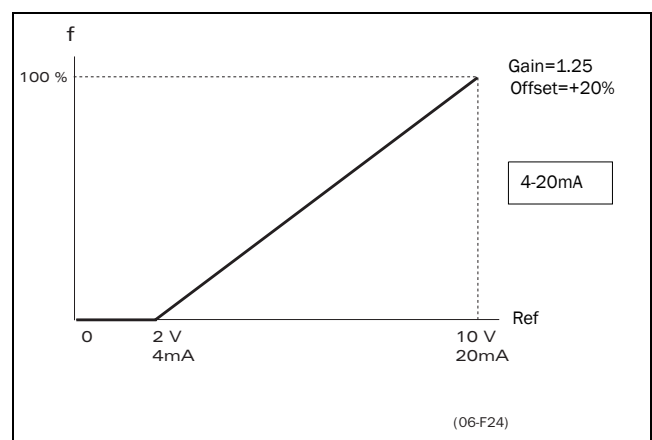


Fig. 56 2-10V/4-20mA (Live Zero).

5.5.4 AnIn 1 Offset [413]

413 AnIn 1 Offst Stp 0% *	
Default:	0%
Range:	-100% to +100%

Adds or subtracts an offset to the value of AnIn1. See Fig. 57.

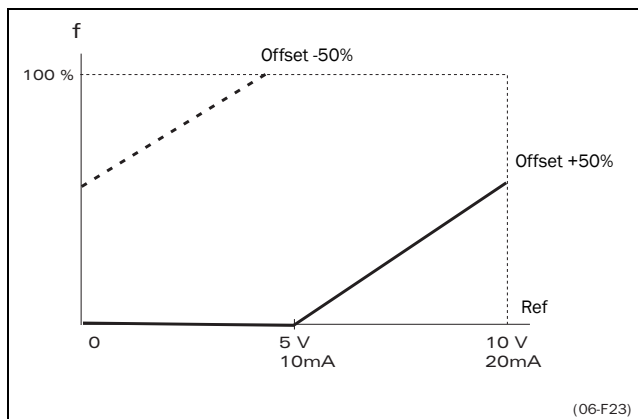


Fig. 57 Function of the AnIn Offset setting.

NOTE! This window is only visible if the function AnIn 1 Setup = User Defined [412].

See also; AnIn 2 [416]
§ 5.5.6, pagina 48
and Rotation = R+L
§ 5.3.5, pagina 31.

5.5.5 AnIn 1 Gain [414]

414 AnIn 1 Gain Stp 1.00 *	
Default:	1.00
Range:	-8.00 to +8.00

Multiplies AnIn1 with the Gain, see Fig. 58.

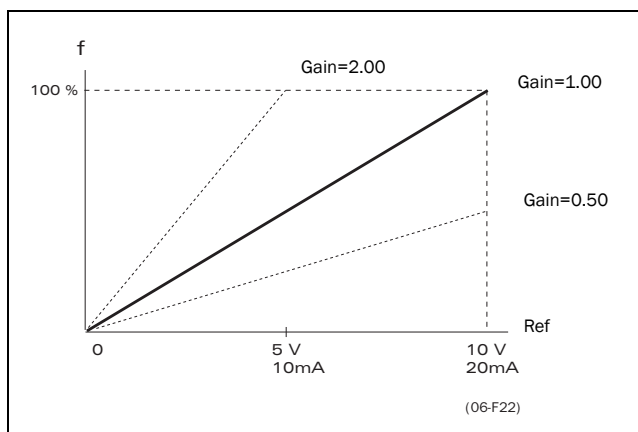


Fig. 58 Function of the AnIn Gain setting.

NOTE! This window is only visible if the function AnIn1 Setup = User Defined [412], see § 5.5.3, pagina 47 and § 5.5.6, pagina 48.

Special function: Inverted reference signal

If the Offset is 100% and the Gain is -1.00 the input will act as inverted reference input, see Fig. 59.

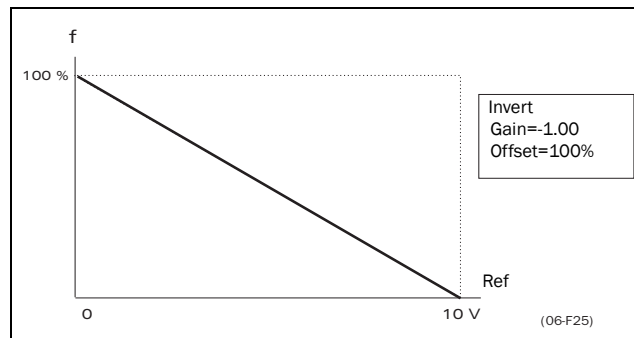


Fig. 59 Inverted reference

5.5.6 AnIn2 Function [415]

Setting the function for Analogue Input 2.

Same function as AnIn 1 Func [411] see § 5.5.2, pagina 47.

415 AnIn 2 Funct Stp Off	
Default:	Off
Selection:	Off, Frequency, Torque
Off	See § 5.5.2, pagina 47
Frequency	See § 5.5.2, pagina 47
Torque	See § 5.5.2, pagina 47

5.5.7 AnIn 2 Set-up [416]

Same functions as AnIn 1 Setup [412] see § 5.5.3, pagina 47.

416 AnIn 2 Setup Stp 0-10V/0-20mA	
Default:	0-10V/0-20mA
Selection:	0-10V/0-20mA, 2-10V, 4-20mA, user defined

5.5.8 AnIn 2 Offset [417]

Same function as AnIn 1 Offset [413] see § 5.5.4, pagina 48.

417 AnIn 2 Offst Stp 0% *	
Default:	0%
Range:	-100% to +100%

5.5.9 AnIn 2 Gain [418]

Same functions as AnIn 1 Gain [414] see § 5.5.5, pagina 48.

418 AnIn 2 Gain Stp 1.00 *	
Default:	1.00
Range:	-8.00 to +8.00

5.5.10 Digital Inputs [420]

Submenu with all the settings regarding the digital inputs.

5.5.11 DigIn 1 [421]

To select the function of the digital input.

On the standard controlboard there are 8 digital inputs. If the same function is programmed for more than one input that function will be activated according to 'OR' logic.

421 DigIn 1 Stp Run	
Default:	Run
Selection:	Off, Ext trip, Stop, Enable, RunR, RunL, Run, Reset, AnIn Select, Pres Ref1, Pres Ref2, Pres Ref4, MotPot Up, MotPot Down, Deact MotPot, Jog, Drive1 feedb, Drive2 feedb, Mains Off
Off	The input is not active.
Ext. Trip	NOTE! The External Trip is active low. Be aware that if there is nothing connected to the input, the inverter will trip at "External trip" immediately.
Stop	Stop command according to the selected Stop mode in window [31A] § 5.4.11, pagina 39, see § 4.2, pagina 24. NOTE! The Stop command is active low.
Enable	Enable command. General start condition to run the inverter. If made low during running the output of the inverter is cut off immediately, causing the motor to coast to zero speed, see § 4.2, pagina 24 for detailed information. NOTE! If none of the DigIns are programmed to "Enable", the internal Enable signal is active.

RunR	Run Right command. The output of the inverter will be a clockwise rotary field, see § 4.2, pagina 24.
RunL	Run Left command. The output of the inverter will be a counter-clockwise rotary field, see § 4.2, pagina 24.
Run	Run command. The direction of the rotary field is determined by the setting of window Rotation [214] (see § 5.3.4, pagina 30) and window Direction [324] (see § 5.4.17, pagina 41), see § 4.2, pagina 24 for more information.
Reset	Reset command. To reset a Trip condition and to enable the Autoreset function. See § 4.2, pagina 24.
AnIn Select	Selects AnIn2 or 1 if they have the same function. Can be used for local/Remote control. See § 5.5.2, pagina 47. Low: AnIn1 active High: AnIn2 active.
Preset Ref 1	To select the Preset Frequency Reference. See § 5.4.19, pagina 41.
Preset Ref 2	To select the Preset Frequency Reference. See § 5.4.19, pagina 41.
Preset Ref 4	To select the Preset Frequency Reference. See § 5.4.19, pagina 41.
MotPot Up	Increases the internal reference value acc. to the set acceleration time with a min. of 16 s. Has the same function as a "real" motor potentiometer see Fig. 60.
MotPot Down	Decreases the internal reference value according to the set deceleration time with a minimum of 16s. See MotPot Up
Deact MotPot	Deactivate the MotorPot function, analog reference value active.
Jog	To activate the Jog function. Gives a Run command with the set Jog Freq. and Direction, § 5.4.24, pagina 42.
Drive 1 feedb	Feedback input Drive 1 for Pump control.
Drive 2 feedb	Feedback input Drive 2 for Pump control.
Mains Off	Active when mains contactor is off.



Fig. 60 MotPot function.

The MotPot function is as default volatile, this means that the reference value is 0rpm after a power down or after stop or trip, see § 5.4.18, pagina 41.

The Motpot command has priority over the analogue inputs. If an analogue reference is active and at the same time the Motpot UP/DOWN is activated, the reference will increase/decrease from that point on. The analogue reference is not in use when the Motpot function is active.

5.5.12 DigIn 2 [422]

Same function as DigIn 1 [421]. See § 5.5.11, pagina 49.

422 DigIn 2 Stp Off	
Default:	Off
Selection:	Off, Ext trip, Stop, Enable, RunR, RunL, Run, Reset, AnIn Select, Pres Ref1, Pres Ref2, Pres Ref4, MotPot Up, MotPot Down, Deact MotPot, Jog, Drive1 feedb, Drive2 feedb, Mains Off

NOTE! If either the function Reference Control [212] (§ 5.3.3, pagina 29) or Run/Stop Control [213] (§ 5.3.4, pagina 30) are set to Rem/DigIn2 or Comm/DigIn2, the digital input cannot be programmed. The following message is displayed: "Local/Rem".

5.5.13 DigIn 3 [423]

Same function as DigIn 1 [421]. See § 5.5.11, pagina 49.

423 DigIn 3 Stp Off	
Default:	Off
Selection:	Off, Ext trip, Stop, Enable, RunR, RunL, Run, Reset, AnIn Select, Pres Ref1, Pres Ref2, Pres Ref4, MotPot Up, MotPot Down, Deact MotPot, Jog, Drive1 feedb, Drive2 feedb, Mains Off

NOTE! If the function Select set no [234] (§ 5.3.22, pagina 33) is set to DigIn 3 or DigIn 3+4 the digital input cannot be programmed. The message "PS Selected" is displayed.

5.5.14 DigIn 4 [424]

Same function as DigIn 1 [421]. See § 5.5.11, pagina 49.

424 DigIn 4 Stp Reset	
Default:	Reset
Selection:	Off, Ext trip, Stop, Enable, RunR, RunL, Run, Reset, AnIn Select, Pres Ref1, Pres Ref2, Pres Ref4, MotPot Up, MotPot Down, Deact MotPot, Jog, Drive1 feedb, Drive2 feedb, Mains Off

NOTE! If the function Select set no [234] (§ 5.3.22, pagina 33) is set to DigIn 3 or DigIn 3+4 the digital input cannot be programmed. The message "PS Selected" is displayed.

5.5.15 DigIn 5 [425]

Same function as DigIn 1 [421]. See § 5.5.13, pagina 50.

425 DigIn 5 Stp Off	
Default:	Off
Selection:	Off, Ext trip, Stop, Enable, RunR, RunL, Run, Reset, AnIn Select, Pres Ref1, Pres Ref2, Pres Ref4, MotPot Up, MotPot Down, Deact MotPot, Jog, Drive1 feedb, Drive2 feedb, Mains Off

5.5.16 DigIn 6 [426]

Same function as DigIn 1 [421]. See § 5.5.13, pagina 50.

426 DigIn 6 Stp Off	
Default:	Off

Selection:	Off, Ext trip, Stop, Enable, RunR, RunL, Run, Reset, AnIn Select, Pres Ref1, Pres Ref2, Pres Ref4, MotPot Up, MotPot Down, Deact MotPot, Jog, Drive1 feedb, Drive2 feedb, Mains Off
------------	---

5.5.17 DigIn 7 [427]

Same function as DigIn 1 [421]. See § 5.5.13, pagina 50.

427 DigIn 7 Stp Off	
Default:	Off
Selection:	Off, Ext trip, Stop, Enable, RunR, RunL, Run, Reset, AnIn Select, Pres Ref1, Pres Ref2, Pres Ref4, MotPot Up, MotPot Down, Deact MotPot, Jog, Drive1 feedb, Drive2 feedb, Mains Off

5.5.18 DigIn 8 [428]

Same function as DigIn 1 [421]. See § 5.5.11, pagina 49.

428 DigIn 8 Stp Off	
Default:	Off
Selection:	Off, Ext trip, Stop, Enable, RunR, RunL, Run, Reset, AnIn Select, Pres Ref1, Pres Ref2, Pres Ref4, MotPot Up, MotPot Down, Deact MotPot, Jog, Drive1 feedb, Drive2 feedb, Mains Off

5.5.19 Analogue Outputs [430]

Submenu with all settings regarding the analogue outputs.

5.5.20 AnOut 1 function [431]

Sets the function for the optional Analogue Output 1. The output is unipolar.

431 AnOut1 Funct Stp Frequency *	
Default:	Frequency
Selection:	Frequency, Load, EI power, Current, Outp Voltage, Fmin-Fmax
Frequency	0 to 200% of f_{MOT}
Load	0 to 200% of nominal inverter load
EI power	0 to 200% of P_{NOM}
Current	0 to 200% of I_{NOM}
Outp Voltage	0 - 100% of Max. Output Voltage (= Mains)

Fmin-Fmax	The scale is automatically set between the minimum and the maximum frequency.
------------------	---

5.5.21 AnOut 1 Setup [432]

Preset scaling and offset of the output configuration.

432 AnOut1 Setup Stp 0-10V/0-20mA *	
Default:	0-10V/0-20mA
Selection:	0-10V/0-20mA, 2-10V/4-20mA, user defined
0-10V/0-20mA	Normal full scale configuration of the output
2-10V/4-20mA	The output has a fixed 20% offset (Live Zero configuration) and 0.8x gain. See Fig. 61 and Fig. 62.
User defined	The output can be set to a user defined offset and scaling. Now the functions AnOut1 Offset [423] and AnOut1 Gain [424] will appear to set the user defined configuration of the output. (Windows [428] and [429] for AnOut2)

The gain on an Analogue output works inverted compared to the input. See Fig. 61, Fig. 62 and Fig. 58.

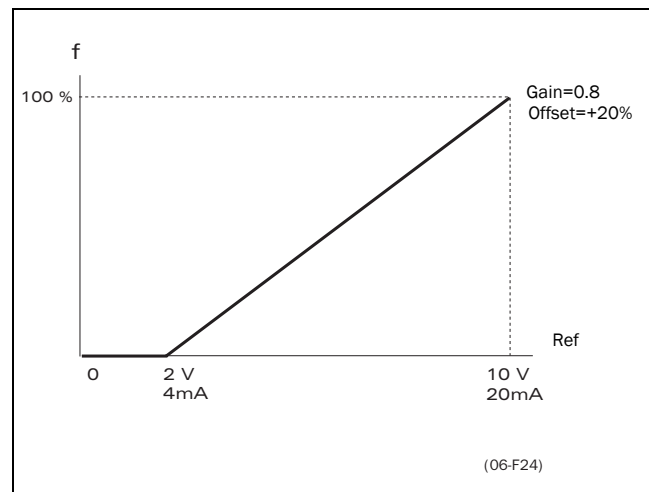


Fig. 61 AnOut 4-20mA.

5.5.22 AnOut 1 Offset [433]

Adds or subtracts an offset to the value of AnOut 1.

433 AnOut1 Offst Stp 0% *	
Default:	0%
Range:	-100% to +100%

NOTE! This window is only visible if the function AnOut1 Setup = User Defined [432] see § 5.5.21, pagina 51.

5.5.23 AnOut 1 Gain [434]

Multiplies a gain level to the value of AnOut 1. The gain on an Analogue output works inverted compared with the input. See Fig. 61, Fig. 62 and Fig. 58.

434 AnOut1 Gain Stp 1.00 *	
Default:	1.00
Range:	-8.00 to +8.00

NOTE! This window is only visible if the function AnOut1 Setup = User Defined [432]. See § 5.5.21, pagina 51.

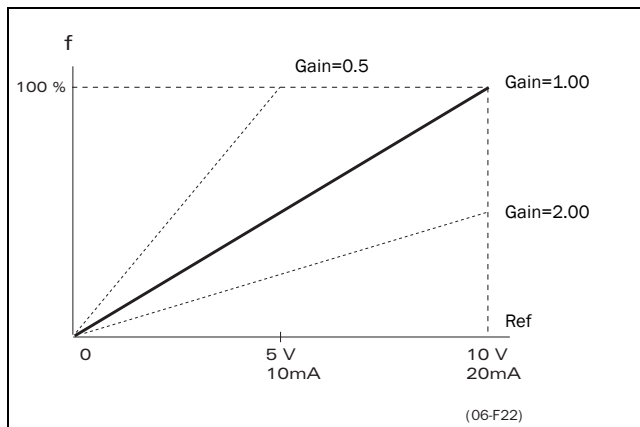


Fig. 62 AnOut Gain setting.

5.5.24 AnOut 2 function [435]

Sets the function for the Analogue Output 2.

435 AnOut2 Funct Stp Current *	
Default:	Current
Selection:	Frequency, Load, EI power, Current, Outp Voltage
Frequency	0 to 200% of f_{MOT}
Load	0 to 200% of nominal inverter load
EI power	0 to 200% of P_{NOM}
Current	0 to 200% of I_{NOM}
Outp Voltage	0 - 100% of Max. Output Voltage (= Mains)
Fmin-Fmax	The scale is automatically set between the minimum and the maximum frequency.

5.5.25 AnOut 2 Set-up [436]

Same function as AnOut1 Setup [432]. See § 5.5.21, pagina 51.

5.5.26 AnOut 2 Offset [437]

Same function as AnOut1 Offset [433]. See § 5.5.22, pagina 51.

5.5.27 AnOut 2 Gain [438]

Same function as AnOut1 Gain [434]. See § 5.5.23, pagina 52.

5.5.28 Digital Outputs [440]

Submenu with all the settings regarding the digital outputs.

5.5.29 DigOut 1 Function [441]

Sets the function of the digital output 1.

NOTE! The definitions as described here are valid for the active output condition.

441 DigOut 1 Stp Run *	
Default:	Run
Selection:	Run, Stop, 0Hz, Acc/Dec, At Freq, At Max Freq, No Trip, Trip, Autorst Trip, Limit, Warning, Ready, T=T Lim, $I > I_{nom}$, Sgnl<Offset, Alarm, Pre-alarm, Max Alarm, Max Pre-alarm, Min Alarm, Min Pre-alarm, LY, !LY, LZ, !LZ, CA1, !A1, CA2, !A2, CD1, !D1, CD2, !D2, Operation
Run	The inverter output is active.
Stop	The inverter output is not active.
0Hz	The output frequency=0+0.1Hz when in Run condition.
Acc/Dec	The freq is increasing or decreasing.
At Freq	The Output Freq = Reference Frequency.
At Max Freq	The frequency is limited by the Maximum Freq, see § 5.4.15, pagina 40
No Trip	No Trip condition active, see chapter 6. page 66.
Trip	A Trip condition is active, see chapter 6. page 66.
Autorst Trip	Autoreset trip condition active, see § 6.2.4, pagina 67.
Limit	A Limit condition is active, see chapter 6. page 66.
Warning	A warning condition is active, see chapter 6. page 66.
Ready	The inverter is ready for operation. This means that the inverter is powered up and healthy.
T= T_{lim}	The Torque is limited by the Torque Limit function. See Torque Limit [331] § 5.4.27, pagina 43.
I > I_{nom}	The Output current is higher than the rated inverter current.
Sgnl< Offset	One of the AnIn input signals is lower than 75% of the offset level.

Alarm	The Max or Min Alarm Level has been reached. See § 5.9, pagina 58.
Pre-Alarm	The Max or Min Pre-alarm Level has been reached. See § 5.9, pagina 58.
Max Alarm	The Max Alarm level has been reached. See § 5.9, pagina 58.
Max Pre-Alarm	The Max Pre-alarm level has been reached. See § 5.9, pagina 58.
Min Alarm	The Min Alarm Level has been reached. See § 5.9, pagina 58.
Min Pre-Alarm	The Min Pre-alarm Level has been reached. See § 5.9, pagina 58.
LY	Logic output Y. See § 5.9.19, pagina 63
ILY	Logic output Y inverted. See § 5.9.19, pagina 63
LZ	Logic output Z. See § 5.9.19, pagina 63
ILZ	Logic output Z inverted. See § 5.9.19, pagina 63
CA 1	Analogue comparator 1 output, see § 5.9.12, pagina 62
IA1	Analogue comp 1 inverted output, see § 5.9.12, pagina 62
CA 2	Analogue comparator 2 output, see § 5.9.12, pagina 62
IA2	Analogue comp 2 inverted output, see § 5.9.12, pagina 62
CD 1	Digital comparator 1 output, see § 5.9.12, pagina 62
ID1	Digital comp 1 inverted output, see § 5.9.12, pagina 62
CD 2	Digital comparator 2 output, see § 5.9.12, pagina 62
ID2	Digital comp 2 inverted output, see § 5.9.12, pagina 62
Operation	Inverter in operation with motor

5.5.30 DigOut 2 Function [442]

NOTE! The definitions as described here are valid for the active output condition.

Sets the function of the digital output 2. Same function as DigOut 1 [441] (§ 5.5.29, pagina 52).

442 DigOut 2	
Stp No Trip *	
Default:	No trip
Selection:	Run, Stop, OHZ, Acc/Dec, At Freq, At Max Freq, No Trip, Trip, Autorst Trip, Limit, Warning, Ready, T=T Lim, I>I _{NOM} , Sgnl<Offset, Alarm, Pre-alarm, Max Alarm, Max Pre-alarm, Min Alarm, Min Pre-alarm, LY, !LY, LZ, !LZ, CA1, !A1, CA2, !A2, CD1, !D1, CD2, !D2, Operation

5.5.31 Relays [450]

Submenu with all the settings for the relay outputs.

5.5.32 Relay 1 Function [451]

Sets the function of the relay output 1. Same function as DigOut 1 [441] § 5.5.29, pagina 52.

451 Relay 1 Func	
Stp Trip *	
Default:	Trip
Selection:	Run, Stop, OHZ, Acc/Dec, At Freq, At Max Freq, No Trip, Trip, Autorst Trip, Limit, Warning, Ready, T=T Lim, I>I _{NOM} , Sgnl<Offset, Alarm, Pre-alarm, Max Alarm, Max Pre-alarm, Min Alarm, Min Pre-alarm, LY, !LY, LZ, !LZ, CA1, !A1, CA2, !A2, CD1, !D1, CD2, !D2, Operation

5.5.33 Relay 2 Function [452]

NOTE! The definitions as described here are valid for the active output condition.

Sets the function of the relay output 2. Same function as DigOut 1 [441] § 5.5.29, pagina 52.

452 Relay 2 Func	
Stp Ready *	
Default:	Ready
Selection:	Run, Stop, OHZ, Acc/Dec, At Freq, At Max Freq, No Trip, Trip, Autorst Trip, Limit, Warning, Ready, T=T Lim, I>I _{nom} , Sgnl<Offset, Alarm, Pre-alarm, Max Alarm, Max Pre-alarm, Min Alarm, Min Pre-alarm, LY, !LY, LZ, !LZ, CA1, !A1, CA2, !A2, CD1, !D1, CD2, !D2, Operation

5.6 Set/View reference value [500]

Main menu to view or set the reference value. The read-out depends on the selected controller mode:

Tabel 23 Set/view reference value

Mode	Read-out:	Resolution (see § 5.1, pagina 28):
Frequency Mode	Hz	3 digit
PID Controller	%	3 digit

View reference value

As default the window 500 is in view operation. The value of the active frequency reference signal is displayed.

Set reference value

If the function Reference Control [212] (§ 5.3.3, pagina 29) is programmed: Ref Control = Keyboard, then the reference value must be set in window 500 with the + and - keys on the control panel. Window 500 displays on-line the actual reference value according to the Mode Settings in Tabel 23.

5.7 View operation [600]

Main menu for viewing all actual operational data, like speed, torque, power, etc.

5.7.1 Speed [610]

Displays the actual Output Frequency.

610 Frequency Stp Hz	
Unit:	Hz
Resolution:	0.1 Hz

5.7.2 Load [620]

Displays the actual Torque.

620 Load Stp %	
Unit:	%
Resolution:	1%

5.7.3 Electrical power [630]

Displays the actual Electrical Output Power.

630 El Power Stp kW	
Unit:	kW
Resolution:	1W

5.7.4 Current [640]

Displays the actual Output Current.

640 Current Stp A	
Unit:	A
Resolution:	0.1 A

5.7.5 Output Voltage [650]

Displays the actual Output Voltage.

650 Outp. Voltage Stp V	
Unit:	V
Resolution:	1V

5.7.6 DC-Link voltage [660]

Displays the actual DC-link Voltage.

660 DC Voltage Stp V	
Unit:	V
Resolution:	1V

5.7.7 Heat sink temperature [670]

Displays the actual Heat Sink Temperature.

670 Temperature Stp °C	
Unit:	°C
Resolution:	0.1 °C

5.7.8 FI status [680]

Indicates the overall status of the frequency inverter. See Fig. 63.

```
680 FI Status
Stp 1/222/333/44
```

Fig. 63 Drive status.

Tabel 24 FI status

Display position	status	value
1	Parameter Set	A,B,C,D
222	Source of reference value	-Key (keyboard) -Rem (remote) -Com (Serial comm.) -Opt (option)
333	Source of Run/Stop/Reset command	-Key (keyboard) -Rem (remote) -Com (Serial comm.) -Opt (option)
44	Limit functions	-TL (Torque Limit) -FL (Frequency Limit) -CL (Current Limit) -VL (Voltage Limit) - - - -No limit active

Example: "A/Key/Rem/TL"

This means:

- A: Parameter Set A is active.
- Key: Reference value comes from the keyboard (CP)
- Rem: Run/Stop commands come from terminal terminal 1-22
- TL: Torque Limit active.

5.7.9 Digital input status [690]

Indicates the status of the Digital inputs. See Fig. 64.

The first row indicates the digital inputs.

- 1 DigIn 1
- 2 DigIn 2
- 3 DigIn 3
- 4 DigIn 4
- 5 DigIn 5
- 6 DigIn 6
- 7 DigIn 7
- 8 DigIn 8

Reading downwards from the first row to the second row the status of the associated input is shown:

- H High
- L Low

So the example in Fig. 64 indicates that DigIn 1, DigIn 3 and DigIn 6 are active at this moment.

```
690 DI: 1234 5678
Run HLHL LHLL
```

Fig. 64 Digital input status example.

5.7.10 Analogue input status [6A0]

Indicates the status of the Analogue inputs. Fig. 65.

```
6A0 AI: 1 2
Stp 100% 65%
```

Fig. 65 Analogue input status

The first row indicates the Analogue inputs.

- 1: AnIn 1
- 2: AnIn 2

Reading downwards from the first row to the second row the status of the belonging input is shown in %:

- 100% AnIn1 has a 100% input value
- 65% AnIn2 has a 65% input value

So the example in Fig. 65 indicates that both the Analogue inputs are active.

5.7.11 Run time [6B0]

Displays the total time that the inverter has been in the Run Mode.

6B0 Run Time	
Stp h: m	
Unit:	h: m (hours: minutes)
Range:	0h: 0m - 65535h: 59m

5.7.12 Reset Run time [6B1]

To reset the Run Time counter, see function Run [6D0] § 5.7.11, pagina 55.

6B1 Reset Run Tm Stp No *	
Default:	No
Selection:	No, Yes

NOTE! After the reset the setting automatically reverts to "No".

5.7.13 Mains time [6C0]

Displays the total time that the inverter has been connected to the mains supply. This timer cannot be reset.

6C0 Mains Time Stp h: m	
Unit:	h: m (hours: minutes)
Range:	0h: 0m - 65535h: 59m

NOTE! At 65535 h: 59 m the counter stops. It will not revert to 0h: 0m.

5.7.14 Energy [6D0]

Displays the total energy consumption since the last Reset Energy [6F1] has taken place (see § 5.7.15, pagina 56).

6D0 Energy Stp kWh	
Unit:	kWh
Range:	0.0 - 999999.9kWh

5.7.15 Reset Energy [6D1]

To reset the kWh counter see § 5.7.14, pagina 56.

6D1 Reset Energy Stp No *	
Default:	No
Selection:	No, Yes

NOTE! After reset the setting automatically goes back to "No".

5.7.16 Process Speed [6E0]

The Process Speed is a display function which can be programmed according to several quantities and units with regard to the frequency, which is programmed with the functions Set Process Unit [6E1] and Set Process Scale [6E2] in this menu.

6E0 Process Spd Stp	
-------------------------------	--

5.7.17 Set Process Unit [6E1]

Selection of the process unit with regard to the speed.

6E1 Set Prc Unit Stp OFF *	
Default:	OFF
Selection:	Off, %, °C, °F, bar, Pa, kPa, psi, Nm, Hz, /s, cyc/s, U/s, m/s, ft/s, m ³ /s, gal/s, ft ³ /s, kg/s, lbs/s, rpm, /min, cyc/m, U/m, m/min, ft/m, L/m, m ³ /m, gal/m, ft ³ /m, kg/m, lbs/m, /h, cyc/h, U/h, m/h, ft/h, L/h, m ³ /h, gal/h, ft ³ /h, kg/h, lbs/h, tons/h
Off	No unit selection
%	Percentage of Maximum Frequency
°C	Degree Centigrade
°F	Degree Fahrenheit
bar	bar
Pa	Pascal
kPa	Kilopascal
psi	Pounds per square inch
Nm	Torque
Hz	Frequency
/s	Per second
cyc/s	Cycles per second
U/s	Units per second
m/s	Metres per second
ft/s	Feet per second
L/s	Litres per second
m ³ /s	Cubic meters per second
gal/s	Gallons per second
ft ³ /s	Cubic feet per second
kg/s	Kilograms per second
lbs/s	Pounds per second
rpm	Revolutions per minute
/min	Per minute
cyc/min	Cycles per minute

U/min	Units per minute
m/min	Metres per minute
ft/min	Feet per minute
L/min	Litres per minute
m3/min	Cubic metres per minute
gal/min	Gallons per minute
ft3/min	Cubic feet per minute
kg/min	Kilograms per minute
lbs/min	Pounds per minute
/h	per hour
cyc/h	Cycles per hour
U/h	Units per hour
m/h	Metres per hour
ft/h	Feet per hour
L/h	Litres per min
m3/h	Cubic meters per hour
gal/h	Gallons per hour
ft3/h	Cubic feet per hour
kg/h	Kilograms per hour
lbs/h	Pounds per hour
tons/h	Tons per hour

5.7.18 Set Process Scale [6E2]

Scales the process value with reference to the Motor Shaft Speed.

Example:

A pump has at 40Hz a flow of 3.6 litres per second. Set the Process Unit = L/s. The process scale is $3.6:40=0.09$. So if the Process Scale = 0.09, then the read-out at 40Hz will be 3.6L/s.

	6E2 Set Prc Scal Stp 1.000 *
Default:	1.000
Range:	0.000 - 10.000
Resolution	4 significant digits (§ 5.1, pagina 28)

5.7.19 Warning [6F0]

Display the actual or last warning condition. A warning occurs if the inverter is close to a trip condition, but still in operation. During a warning condition the red trip LED will start to blink as long as the warning is active (see § 4.1.2, pagina 21).

6F0 Stp	Warnings warn.msg
-------------------	-----------------------------

The active warning message is displayed here. See § 6.1, pagina 66.

If no warning is active the message “No Warning” is displayed.

The following warnings are possible;

- Overtemp
- Overvolt G
- Overcurrent (I^2t)
- Low voltage
- Min Pre-Alarm
- Max Pre-Alarm
- Comm Error

See also chapter 6. page 66.

5.8 View trip log [700]

Main menu for viewing all the logged trip data. In total the inverter saves the last 10 trips in the trip memory. The trip memory refreshes on the FIFO principle (First In, First Out). Every trip in the memory is logged on the time of the Run Time [6B0] counter.

5.8.1 Trip 1 [710] to trip 10 [7A0]

The trip message can be any message as described in § 6.2, pagina 67.

7x0 Trip message	
Stp h:m	
Unit:	h: m (hours: minutes)
Range:	0h: 0m - 65355h: 59m

730 OVERCURRENT
Stp 1396h: 13m

Fig. 66 Trip 3

Example:

Fig. 66 shows the third trip memory window 730: Overcurrent trip occurred after 1396 hours and 13 minutes in Run time.

5.8.2 Reset trip log [7B0]

To reset the content of the 10 trip memories. See § 5.8.1, pagina 58.

7B0 Reset Trip	
Stp No *	
Default:	No
Selection:	No, Yes

NOTE! After the reset the setting goes automatically back to "NO". The message "OK" is displayed for 2 sec.

5.9 Monitor [800]

Main menu for setting the Monitor functions.

5.9.1 Alarm functions [810]

The monitor functions enable the inverter to be used as a Load monitor. Load monitors are used to protect machines against mechanical overload. E.g. jamming of a conveyer belt, screw conveyer, belt failure on a fan, dry running on a pump. The load is measured in the inverter by the calculated motor torque. There is an Overload alarm (Max Alarm and Max Pre-Alarm) and an Underload (Min Alarm and Min Pre-Alarm).

The Max- and Min-alarm can be set for a trip condition. The pre-alarms act as a warning condition. All the alarms can be monitored on the Digital or Relay outputs. See also:

- § 5.5.28, pagina 52,
- § 6.1, pagina 66,
- § 5.7.19, pagina 57,
- Tabel 27, pagina 68.

The Autoset function determines automatically during running the 4 alarm levels: Maximum alarm, Max. Pre-Alarm, Minimum Alarm and Min. Pre-alarm.

Fig. 67, pagina 61 gives an example of the monitor functions.

5.9.2 Alarm Select[811]

Selects the types of alarms that are active.

811 Alarm Select	
Stp Off *	
Default:	Off
Selection:	Off, Max, Min, Max+Min
Off	No alarm functions active. NOTE! The windows [813-815] are not visible.
Max	Max Alarm active. The alarm output functions as an Overload alarm. NOTE! The windows [819-81A] are not visible.
Min	Min Alarm active. The alarm output functions as an Underload alarm. NOTE! The windows [817-818] are not visible.
Max+Min	Both Max and MIN alarm are active. The alarm outputs function as overload and underload alarms.

5.9.3 Alarm Trip [812]

Selects which alarm must cause a Trip to the inverter.

812 Alarm trip Stp Off *	
Default:	Off
Selection:	Off, Min, Max, Max+Min
Off	No trip if an alarm is active. The Alarms can be monitored on the Digital or Relay outputs. See § 5.5.28, pagina 52.
Max	The Max alarm will trip the inverter. See also Hoofdstuk 6. pagina 66.
Min	The Min Alarm will Trip the inverter. See also Hoofdstuk 6. pagina 66.
Max+Min	Both a Min or Max Alarm will trip the inverter. See Hoofdstuk 6. pagina 66.

5.9.4 Ramp Alarm [813]

Selects that the (pre)alarm signals are inhibited during acceleration/deceleration of the motor to avoid false alarms.

813 Ramp Alarm Stp Off *	
Default:	Off
Selection:	Off, On
On	(Pre-) alarms active during acceleration/deceleration.
Off	(Pre-) alarms are inhibited during acceleration/deceleration.

5.9.5 Alarm start delay [814]

Sets the delay time after a Run command, after which the alarm may be given.

-If Ramp Enable=On (see § 5.9.4, pagina 59). The start delay begins after a RUN command.

-If Ramp Enable=Off. The start delay begins after the acceleration ramp.

814 Start Delay Stp 2s *	
Default:	0
Range:	0-3600s

5.9.6 Alarm response delay [815]

Sets the delay time between the first occurrence of an alarm condition and after which the alarm is given.

815 Response Dly Stp 0.1s *	
Default:	0.1s
Range:	0-90s

5.9.7 Auto set function[816]

Sets the actual load level at 100% and automatically the accompanying alarm levels.

816 Auto Set Stp No *	
Default:	No
Selection:	No, Yes

The set levels for the (pre)alarms are:

Overload	Max Alarm	1.15xActual Load
	Max pre-alarm	1.10xActual Load
Underload	Min pre-alarm	0.90xActual Load
	Min alarm	0.85xActual Load

After execution the message "Autoset OK!" is displayed for 1s and the selection reverts to "No".

5.9.8 Max Alarm level (Overload) [817]

Sets the Max Alarm level (Overload).

817 Max Alarm Stp 120% *	
Default:	120%
Range:	0-200%

The alarm level is given in % of the nominal load. Normal setting: 150%. The Alarm is activated if the set value has been reached.

5.9.9 Max Pre-alarm level (Overload) [818]

Sets the Max Pre-alarm level (Overload).

818 Max Pre-Alarm Stp 110% *	
Default:	110%
Range:	0-200%

The Pre-alarm level is given in % of the nominal torque T_{NOM} . Normal setting: 110%. The Pre-Alarm is activated if the set value has been reached.

5.9.10 Min Alarm level (Underload) [819]

Sets the Max Alarm level (Underload).

819 Min Alarm Stp 0% *	
Default:	0%
Range:	0-200%


The alarm level is given in % of the nominal load. Normal setting: 0%. The Alarm is activated if the set value has been reached.

5.9.11 Min Pre-alarm level (Underload) [81A]

Sets the Min Pre-alarm level (Underload).

81A Min Pre-Alarm Stp 90% *	
Default:	90%
Range:	0-200%

The alarm level is given in % of the nominal load. Normal setting: 90%. The Pre-alarm is activated if the set value has been reached.

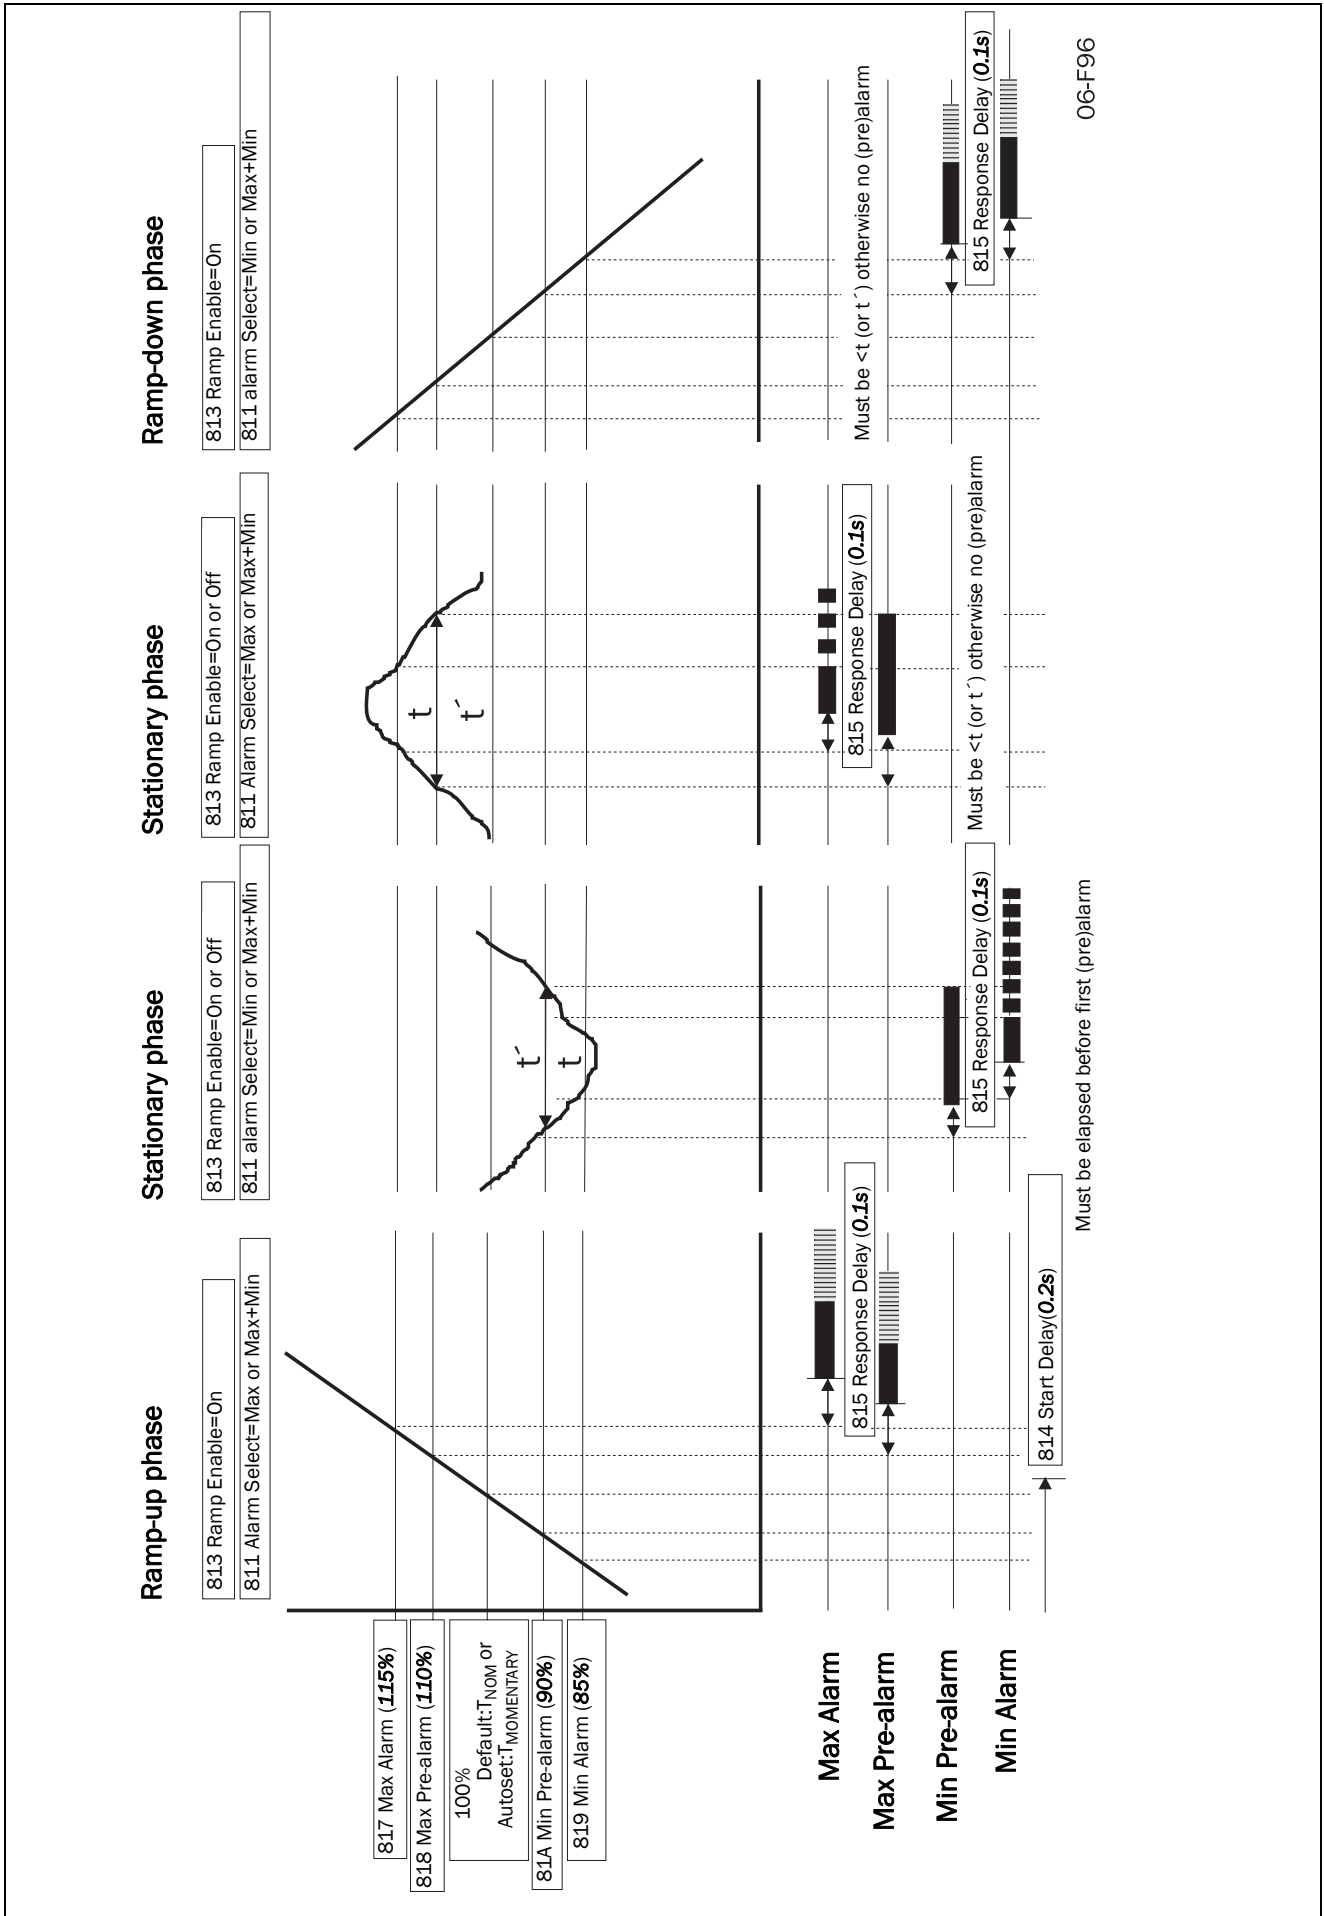

06-F96

Fig. 67 Alarm functions

5.9.12 Comparators [820]

There are 2 analogue comparators that compare any available analogue value (including the analogue reference inputs) with an adjustable constant.

There are 2 digital comparators that compare any available digital signal.

The output signals of these comparators can be logically tied together to yield a logical output signal.

All the output signals can be programmed to the digital or relay outputs. See par 5.5.28 page 52.

5.9.13 Analogue Comparator 1 value [821]

Selection of the analogue value for Analogue Comparator 1 (CA1).

Analogue comparator 1 compares the in window [821] selectable analogue value with the in window [822] adjustable constant. When the value exceeds the constant, the output signal CA1 becomes High and !A1 Low, see Fig. 68.

The output signal can be programmed to the digital or relay outputs. See par 5.5.28 page 52.

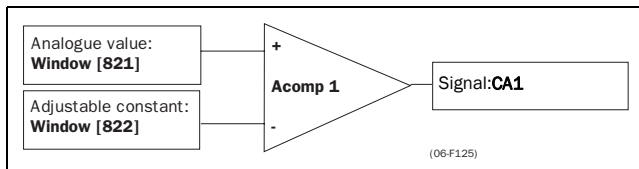


Fig. 68 Analogue Comparator

821 CA1 Value Stp Frequency *	
Default:	Frequency
Selection:	Frequency, Load, EI Power, Current, Outp. Voltage, DC Voltage, Temperature, Energy, Run Time, Mains Time, AnIn 1, AnIn 2, Process speed
Frequency	Hz
Load	%
EI Power	kW
Current	A
Voltage	V
DC Voltage	VDC
Temperature	°C
Energy	kWh
Run Time	h
Mains Time	h
AnIn1	%
AnIn2	%
Process speed	-

5.9.14 Analogue Comparator 1 constant [822]

Selects the analogue comparator constant level according to the selected value in window [821].

The default value is always 0.

822 CA1 Constant Stp 0Hz *	
Default:	0Hz
Selection:	Selection is made automatically according to window [821].
Frequency	0 - 400Hz
Load %	0-200%
EI Power	0-200%, P _{NOM} in kW
Current	0-200%, I _{NOM} in A
Voltage	0-Mains in V
DC Voltage	0-Mains. $\sqrt{2}$ in VDC DC Voltage
Temperature	0-100 °C
Energy	0-1,000,000kWh
Run Time	0-65500hr
Mains Time	0-65500hr
AnIn1	0-100%
AnIn2	0-100%
Process speed	0.01 - 10.0

5.9.15 Analogue Comparator 2 value [823]

Function is identical to Analogue Comparator 1 Value, see § 5.9.13, pagina 62.

823 CA2 Value Stp AnIn 1 *	
Default:	AnIn 1
Selection:	Frequency, Load, EI Power, Current, Outp. Voltage, DC Voltage, Temperature, Energy, Run Time, Mains Time, AnIn 1, AnIn 2

5.9.16 Analogue Comparator 2 constant [824]

Function is identical to Analogue Comparator 1 level see § 5.9.14, pagina 62.

824 CA2 Constant Stp 0% *	
Default:	0%
Selection:	Selection is made automatically according to window [823].

5.9.17 Digital Comparator 1 [825]

Selection of the input signal for Digital Comparator 1 (CD1).

This output signal CD1 becomes High if the selected input signal is active. See Fig. 69.

The output signal can be programmed to the digital or relay outputs. See par 5.5.28 page 52.

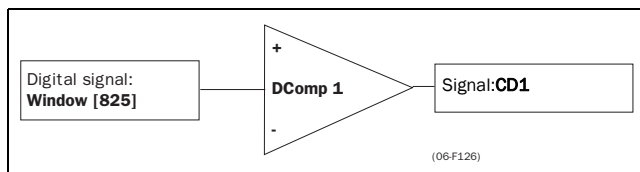


Fig. 69 Digital comparator

825 CD1 Stp Run *	
Default:	Run
Selection:	DigIn 1, DigIn 2, DigIn 3, DigIn 4, DigIn 5, DigIn 6, DigIn 7, DigIn 8, Acc, Dec, I2t, Run, Stop, Trip, Max Alarm, Min Alarm, V-Limit, F-Limit, C-Limit, T-Limit, Overtemp, Overvolt G, Overvolt D, Overcurrent, Low Voltage, Max Pre-Alarm, Min Pre-Alarm
DigIn 1	Digital input 1
DigIn 2	Digital input 2
DigIn 3	Digital input 3
DigIn 4	Digital input 4
DigIn 5	Digital input 5
DigIn 6	Digital input 6
DigIn 7	Digital input 7
DigIn 8	Digital input 8
Acc	Acceleration status
Dec	Deceleration status
I²t	I ² t overload status
Run	Run status

Stop	Stop status
Trip	Trip status
Max Alarm	Max Alarm status
Min Alarm	Min Alarm status
V-Limit	Voltage Limit
F-Limit	Frequency limit
C-Limit	Current limit
T-Limit	Torque limit
Overtemp	Over temperature warning
Overvolt G	Over voltage Generating warning
Overvolt D	Over voltage Decelerating warning
Overcurrent	Over current warning
Low Voltage	Low Voltage warning
Max Pre-Alarm	Max Pre-Alarm warning
Min Pre-Alarm	Min Pre-Alarm warning

5.9.18 Digital Comparator 2 [826]

Function is identical to Digital Comparator 1 see § 5.9.17, pagina 63. Selection of the input signal for Digital Comparator 2 (CD2).

826 CD 2 Stp DigIn 1 *	
Default:	DigIn 1
Selection:	DigIn 1, DigIn 2, DigIn 3, DigIn 4, DigIn 5, DigIn 6, DigIn 7, DigIn 8, Acc, Dec, I2t, Run, Stop, Trip, Max Alarm, Min Alarm, V-Limit, F-Limit, C-Limit, T-Limit, Overtemp, Overvolt G, Overvolt D, Overcurrent, Low Voltage, Max Pre-Alarm, Min Pre-Alarm

5.9.19 Logic Output Y [830]

By means of an expression editor, the comparator signals can be logically combined into the Logic Y function.

The expression editor has the following features:

- Up to 3 comparator outputs can be used: CA1, CA2, CD1, CD2 or LZ. (or LY)
- The comparator outputs can be inverted: !A1, !A2, !D1, !D2, or !LZ. (or !LY)
- The following logical operators are available:
 - "+" : OR operator
 - "&" : AND operator
 - "^" : EXOR operator

Expressions according to the following truth table can be made:

Table 25 Truth table for the logical operators

A	B	& (AND)	+ (OR)	^(EXOR)
0	0	0	0	0
0	1	0	1	1
1	0	0	1	1
1	1	1	1	0

- The output signal can be programmed to the digital or relay outputs. See § 5.5.28, pagina 52.

830 LOGIC Y
Stp CA1&!A2&CD1

The expression must be programmed by means of the menu's 831 to 835.

Example: Broken belt detection for Logic Y:

This example describes the Programming for a so called "broken belt detection" for fan applications.

The comparator CA1 is set for:

- Frequency > 10Hz

The comparator !A2 is set for:

- load < 20%

The comparator CD1 is set for:

- Run active

The 3 comparator are all AND-ed, given the "broken belt detection".

In window 830, the in windows 831-835 entered expression for Logic Y is visible.

Set window 831 to **CA1**

Set window 832 to **&**

Set window 833 to **!A2**

Set window 834 to **&**

Set window 835 to **CD1**

Window 830 now holds the expression for Logic Y:

CA1&!A2&CD1

which is to be read as:

(CA1&!A2)&CD1

NOTE! Set window 834 to "" to finish the expression when only two comparators are required for Logic Y.

5.9.20 Y Comp 1 [831]

Selects the first comparator for the Logic Y function.

831 Y Comp 1 Stp CA1 *	
Default:	CA1
Selection:	CA1, !A1, CA2, !A2, CD1, !D1, CD2, !D2, LZ, !LZ

5.9.21 Y Operator 1 [832]

Select the first operator for the Logic Y function.

832 Y Operator 1 Stp & *	
Default:	&
Selection:	&, +, ^ &=AND, +=OR, ^=EXOR

5.9.22 Y Comp 2 [833]

Selects the second comparator for the Logic Y function.

833 Y Comp 2 Stp !A1 *	
Default:	!A1
Selection:	CA1, !A1, CA2, !A2, CD1, !D1, CD2, !D2, LZ, !LZ

5.9.23 Y Operator 2 [834]

Select the second operator for the Logic Y function.

834 Y Operator 2 Stp & *	
Default:	&
Selection:	&, +, ^, · &=AND, +=OR, ^=EXOR When · (dot) is selected, the Logic Y expression is finished (in case only two comparators are tied together).

5.9.24 Y Comp 3 [835]

Selects the third comparator for the Logic Y function.

835 Y Comp 3 Stp CD1 *	
Default:	CD1
Selection:	CA1, !A1, CA2, !A2, CD1, !D1, CD2, !D2, LZ, !LZ

5.9.25 Logic function Z [840]

840 LOGIC Z
Stp CA1&!A2&CD1

The expression must be programmed by means of the menu's 841 to 845.

5.9.26 Z Comp 1 [841]

Selects the first comparator for the Logic Z function.

841 Z Comp 1 Stp CA1 *	
Default:	CA1
Selection:	CA1, !A1, CA2, !A2, CD1, !D1, CD2, !D2, LY, !LY

5.9.27 Z Operator 1 [842]

Select the first operator for the Logic Z function.

842 Z Operator 1 Stp & *	
Default:	&
Selection:	&, +, ^ &=AND, +=OR, ^=EXOR

5.9.28 Z Comp 2 [843]

Selects the second comparator for the Logic Z function.

843 Z Comp 2 Stp !A1 *	
Default:	!A1
Selection:	CA1, !A1, CA2, !A2, CD1, !D1, CD2, !D2, LY, !LY

5.9.29 Z Operator 2 [844]

Select the second operator for the Logic Z function.

844 Z Operator 2 Stp & *	
Default:	&
Selection:	&, +, ^, · &=AND, +=OR, ^=EXOR When · (dot) is selected, the Logic Z expression is finished (in case only two comparators are tied together).

5.9.30 Z Comp 3 [845]

Selects the third comparator for the Logic Z function.

845 Z Comp 3 Stp CD1 *	
Default:	CD1
Selection:	CA1, !A1, CA2, !A2, CD1, !D1, CD2, !D2, LY, !LY

5.10 View system data [900]

Main menu for viewing all the inverter system data.

5.10.1 Type [910]

Shows the inverter type according to the type number. See § 1.5, pagina 10.

The other options are indicated on the type plate of the inverter. See Fig. 70.

910 FI Type Stp CDU40-046	
-------------------------------------	--

Fig. 70 Example Type

Examples:

-CDU40-046 CDU 400 volt, 22 kW, 46A

5.10.2 Software [920]

Shows the software version number of the inverter. Fig. 71 gives an example of the version number.

920 Software Stp V 1.23	
-----------------------------------	--

Fig. 71 Example software version

V 1.23 = Version of the Software

NOTE! It is important that the software version displayed in window [920] is the same software version number as the software version number written on the title page of this instruction manual. If not, the functionality as described in this manual may differ from the functionality of the inverter.

6. FAULT INDICATION, DIAGNOSES AND MAINTENANCE

6.1 Trips, warnings and limits

In order to protect the inverter the principal operating variables are continuously monitored by the DSPs. If one of these variables exceeds the safety limit an error message is displayed. In order to avoid any possible dangerous situations, the inverter sets itself into a stop Mode called Trip and the cause of the trip is shown in the display.

Trips will always stop the inverter.

“Trip”

- the inverter stops immediately, the motor coasts naturally to standstill.
- the trip relay or output (if selected)
- the trip LED is on
- the accompanying trip message is displayed in the LCD display
- the “TRP” status indication in the LCD-display is on (area C of the LCD display, § 4.1.1, pagina 20)

Apart from the TRIP indicators there are 2 more indicators to show that the inverter is in an “abnormal” situation. These indicators can be programmed to operate a relay or digital output (see § 5.5.32, pagina 53).

“Limits”

- the inverter is limiting torque and/or frequency to avoid a trip.
- the Limit relay or output (if selected) is active
- the trip LED is blinking
- one of the Limit status indication in the LCD display is on (area C of the LCD display, see § 4.1.1, pagina 20)

“Warning”

- the inverter is close to a trip limit.
- the Warning relay or output (if selected) is active
- the trip LED is blinking
- the warning message is displayed in window[6F0] and the lower left corner of the display.

Tabel 26 Trips, warnings and limits.

Trip	Selection	Trip (Instant)	Limit	Warning
Rotor locked	Off	-	-	-
	On	X	X	X
Motor lost	Resume	-	X	X
	Trip	X	-	-
Motor I ² t	Off	-	-	-
	Trip	X	-	X
	Limit	-	X	X
Comm Error (Interrupt [253])	Off	-	-	-
	Trip	X	-	X
	Warning	-	-	X
Low volt override	Off	-	-	-
	On	-	X	X
Low voltage	-	X	-	X
Overvoltage Line	-	X	-	X
Overvoltage Gen/Dec	-	X	-	-
Overcurrent	-	X	-	-
Overtemperature	-	X	-	X
Power Fault	-	X	-	-
External trip	-	X	-	-
Motor temperature (PTC)	Off	-	-	-
	Trip	X	-	X
Alarm Max/Alarm Min		- X	- -	- -
Pre-Alarm Max/Pre-Alarm Min		-	-	X

NOTE! The trip events Rotor locked, Motor I²t, Low voltage override and Comm Error can be set individually please see § 5.4.36, pagina 44.

6.2 Trip conditions, causes and remedy

The table in this paragraph must be considered as a basic help to find the cause of a failure in the system and to find a way to solve a problem. A frequency inverter is mostly just a small part of a complete drive system. Sometimes it is difficult to determine the cause of the failure, although the frequency inverter gives a certain trip message it is not always easy to find the right cause of the failure. Good knowledge of the complete drive system is therefore necessary. Contact your supplier if there are any questions.

The inverter is designed in such a way that it tries to avoid trips by limiting torque, overvoltage etc.

Failures occurring while commissioning, or shortly after commissioning are most likely to be caused by incorrect settings or even bad connections.

Failures or problems occurring after a reasonable period of failure-free operation can be caused by changes in the system or in the environment of the system (e.g. wear).

Failures that occur regularly for no obvious reasons, can be caused in general by Electro Magnetic Interference. Be sure that the installation fulfils the demands for installation according to the EMC directives. See chapter 3, page 16.

Sometimes the so-called "Trial and error" method is a quicker way to determine the cause of the failure. This method can be done at any level, from changing settings and functions to disconnecting single control cables or exchanging the complete inverters.

The Trip Log (see § 5.8, pagina 58) can be useful to determine whether certain trips occur at certain moments. The Trip Log also records the time of the trip related to the run time counter.



DANGER! If it is necessary to open the inverter or any part of the system (motor cable housing, conduits, electrical panels, cabinets, etc.) to inspect or take measurements as suggested in this instruction manual, it is absolutely necessary to read and follow the following safety instructions as well as the safety instructions on pagina 2.

6.2.1 Technically qualified personnel

Installation, commissioning, demounting, making measurements, etc., of or at the frequency inverter may only be carried out by personnel technically qualified for the task.

6.2.2 Opening the frequency inverter



DANGER! Always switch the mains voltage off if it is necessary to open the inverter and wait at least 5 minutes to allow the buffer capacitors to discharge.

If the frequency inverter must be opened, for example to make connections or change the positions of the jumpers, always switch off the mains voltage and wait at least 5 minutes to allow the buffer capacitors to discharge. The connections for the control signals and the jumpers are isolated from the mains voltage. Always take adequate precautions before opening the frequency inverter.

6.2.3 Precautions to be taken with a connected motor

If work must be carried out on a connected motor or on the driven machine, the mains voltage must always first be disconnected from the frequency inverter. Wait at least 5 minutes before continuing.

6.2.4 Autoreset Trip

If the maximum number of Trips during Autoreset has been reached, the trip message hour counter is marked with a "A". (See § 5.8.1, pagina 58 and § 5.3.28, pagina 34).

730 OVERVOLT G
Trp A 345h: 45m

Fig. 72 Autoreset trip

Fig. 72 shows the 3rd trip memory window 730: Overvoltage G trip after the maximum Autoreset attempts taken place after 345 hours and 45 minutes of run time.

Tabel 27 Trip condition

Trip Condition	Possible Cause	Remedy
Low voltage “LV”	Too low DC-Link voltage: <ul style="list-style-type: none"> - Too low or no supply voltage - Mains voltage dip due to starting other major power consuming machines on the same line. 	<ul style="list-style-type: none"> - Make sure all three phases are properly connected and that the terminal screws are tightened. - Check that the mains supply voltage is within the limits of the inverter. - Try to use other mains supply lines if dip is caused by other machinery - Use the function low voltage override [352] see § 5.4.38, pagina 45
Overvoltage L(ine) “OVL”	Too high DC Link voltage; due to too high mains voltage	<ul style="list-style-type: none"> - Check the main supply voltage - Try to take away the interference cause or use other main supply lines.
Overvoltage G(enerator) “OVG” Overvoltage D(eceleration) “OVD”	Too high DC Link voltage: <ul style="list-style-type: none"> - Too short deceleration time with respect to motor/machine inertia. - Too small brake resistor malfunctioning Brake chopper 	<ul style="list-style-type: none"> - Check the deceleration time settings and make them longer if necessary. - Check the dimensions of the brake resistor and the functionality of the Brake chopper (if used)
DCLink Error	<ul style="list-style-type: none"> - Missing mains supply phase on terminals - To big unbalance between connected different mains supply phases 	<ul style="list-style-type: none"> - Check that all three phases of the mains supply voltage are within the limits of the inverter. - Make sure that all three mains supply phases are properly connected. - Check for defect mains contactor, mains fuses and loose or poor mains cable connections. - If all mains supply phases, and all connections are OK, contact your supplier.
Power fault	Motor current exceeds the Peak motor current (I_{TRIP}): <ul style="list-style-type: none"> - Too short acceleration time - Too high motor load - Excessive load change - Soft short-circuit between phases or phase to earth - Poor or loose motor cable connections - Too high IxR Compensation level 	<ul style="list-style-type: none"> - Check the acceleration time settings and make them longer if necessary. - Check the motor load. - Check on bad motor cable connections - Check on bad earth cable connection - Check on water or moisture in the motor housing and cables connections - Lower the level of IxR Compensation [216], See § 5.3.7, pagina 31.
	Overload condition in the DC-link: <ul style="list-style-type: none"> - Hard short-circuit between phases or phase to earth - Saturation of current measurement circuiting - Earth fault - Desaturation of IGBT's - Peak voltage on DC-link 	<ul style="list-style-type: none"> - Check on bad motor cable connections - Check on bad earth cable connection - Check on water or moisture in the motor housing and cables connections - Check that rating plate data of the motor is correctly entered - See Overvoltage trips
Overcurrent “I²t”	I^2t value is exceeded. <ul style="list-style-type: none"> - Overload on the motor according to the programmed I^2t settings. See § 5.4.41, pagina 46. 	<ul style="list-style-type: none"> - Check on mechanical overload on the motor or the machinery (bearings, gearboxes, chains, belts, etc.) - Change the Motor I^2t Current setting see § 5.4.41, pagina 46

Tabel 27 Trip condition

Trip Condition	Possible Cause	Remedy
Overtemperature "OT"	Heat sink temperature exceeds 80°C (warning at 75°C): <ul style="list-style-type: none"> - Too high ambient temperature of the inverter - Insufficient cooling - Too high current - Blocked or stuffed fans 	<ul style="list-style-type: none"> - Check the cooling of the inverter cabinet. See also § 8.3, pagina 72. - Check the functionality of the built-in fans. The fans must switch on automatically if the heat sink temperature exceeds 60°C. At power up the fans are briefly switched on. - Check inverter and motor rating - Clean fans
Motor lost	Phase loss or too great an imbalance on the motor phases	<ul style="list-style-type: none"> - Check the motor voltage on all phases. - Check for loose or poor motor cable connections - If all connections are OK, contact your supplier - Set motor lost alarm to OFF. See § 5.4.39, pagina 45
External Error	External input (DigIn 1-8) active: <ul style="list-style-type: none"> - active low function on the input. 	<ul style="list-style-type: none"> - Check the equipment that initiates the external input - Check the programming of the digital inputs DigIn 1-8 (see § 5.5.11, pagina 49)
Internal trip	Error in the microprocessor system	<ul style="list-style-type: none"> - If trip remains, contact your supplier.
Rotor locked	Torque limit at motor standstill: <ul style="list-style-type: none"> - Mechanical blocking of the rotor. 	<ul style="list-style-type: none"> - Check for mechanical problems at the motor or the machinery connected to the motor - Set locked rotor alarm to OFF. See § 5.4.38, pagina 45.
Motor temperature	Motor thermistor exceeds maximum level	<ul style="list-style-type: none"> - Check on mechanical overload on the motor or the machinery (bearings, gearboxes, chains, belts, etc.) - Check the motor cooling system. - Self-cooled motor at low speed, too high load.
Comm Error (Interrupt [253])	Error on serial communication (option)	<ul style="list-style-type: none"> - Check cables and connection of the serial communication. - Check all settings with regard to the serial communication - Restart the equipment including the inverter
Max Alarm	Max alarm level (overload) has been reached. See § 5.9, pagina 58.	<ul style="list-style-type: none"> - Check the load condition of the machine - Check the monitor setting in § 5.9, pagina 58.
Min Alarm	Min alarm level (underload) has been reached. See § 5.9, pagina 58.	<ul style="list-style-type: none"> - Check the load condition of the machine - Check the monitor setting in § 5.9, pagina 58.

6.3 Maintenance

The frequency inverter is designed to require no servicing or maintenance. There are however some points which must be checked regularly.

All inverters have built in fans which are automatically switched on if the heat sink temperature reaches 60°C. This means that the fans are only running if the inverter is running and loaded. The design of the heat sinks is such that the fan is not blowing the cooling air through the interior of the inverter, but only across the

outer surface of the heat sink. However, running fans will always attract dust. Depending on the environment the fan and the heat sink will collect dust. Check this and clean the heat sink and the fans when necessary.

If inverters are built into cabinets, also check and clean the dust filters of the cabinet regularly.

Check external wiring, connections and control signals. Tighten terminal screws if necessary.

7. OPTIONS

7.1 Handheld Control Panel (HCP)

The Handheld Control Panel can be used as an external handheld remote control. The inverter must be ordered without the built-in Control Panel but Blank Control Panel instead. The Handheld Control Panel can also be used to read data from one inverter and copy it to another inverter. See § 5.3.18, pagina 32.

The option comes complete with the required connection material and installation instructions.

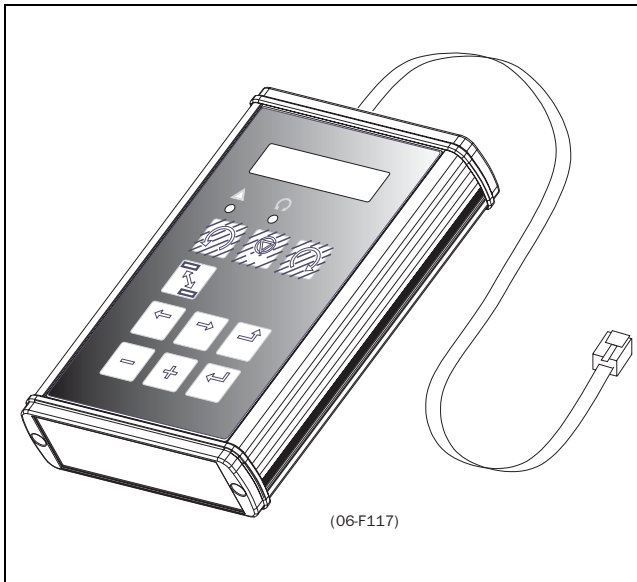


Fig. 73 HCP

7.2 I/O Board

Extension card with 7 extra relay outputs. The I/O Board works in combination with the Pump/Fan Control, but can also be used as a separate option.

7.3 Serial communication, fieldbus

There are several option cards for serial communication depending on the bus system. See Fig. 74 for the connection of the serial link.

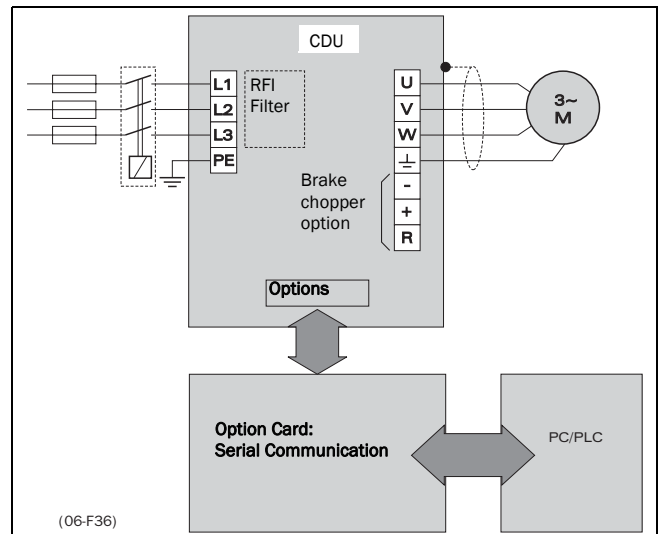


Fig. 74 Connection of a serial link.

Option cards for several bus systems are available: RS485, Profibus etc. See § 5.3.31, pagina 35.

8. TECHNICAL DATA

8.1 General electrical specifications

Tabel 28 General electrical specifications

General

Mains voltage:	380-415 V +10%/-15%
Mains frequency:	50/60Hz
Input power factor:	0.95
Output voltage:	0- Mains supply voltage:
Output frequency:	0-100Hz
Output switching frequency:	6 kHz
Efficiency at nominal load:	97%

Control signal inputs:

Analogue (differential)

Analogue Voltage/current:	0-10 V/0-20 mA via jumper
Max. input voltage:	+30 V
Input impedance:	20 k Ω (voltage) 250 Ω (current)
Resolution:	10 bits
Hardware accuracy:	0.5% typ + 1 ½ LSB fsd
Non-linearity	1½LSB

Digital:

Input voltage:	High>7 VDC Low<4 VDC
Max. input voltage:	+30 VDC
Input impedance:	<12.8 VDC: 5 k Ω \geq 12.8 VDC: 3 k Ω
Signal delay:	\leq 8 ms

Control signal outputs

Analogue

Output voltage/current:	0-10 V/0-20 mA via jumper
Max. output voltage:	+15 V @5 mA cont.
Short-circuit current (∞):	+15 mA (voltage) +140 mA (current)
Output impedance:	10 Ω (voltage)
Resolution:	10 bit
Hardware accuracy:	1.9% typ fsd (voltage), 2.4%typ fsd (current)
Offset:	3LSB
Non-linearity:	2LSB

Digital

Output voltage:	High>20 VDC @50 mA, >23 VDC open Low<1 VDC @50 mA
Shortcircuit current(∞):	100 mA max (together with +24 VDC)

Relays

Contacts	2A/250 V~/AC1
----------	---------------

References

+10 VDC -10 VDC +24 VDC	+10 VDC @10 mA Shortcircuit current +30 mA max -10 VDC @10 mA +24 VDC Short-circuit current +100 mA max (together with Digital Outputs)
-------------------------------	---

8.2 Electrical specifications related to type

Tabel 29 Electrical specifications related to type 400V

Type	Nominal power (400V) P_{NOM} [kW]	Nominal output current I_{NOM} [A,RMS]	Current limit I_{CL} during 60s I_{CL} [A,RMS]	Nominal input current I_{IN} [A,RMS]
CDU40-013	5.5	13	15.6	12
CDU40-018	7.5	18	22	16
CDU40.026	11	26	31	23
CDU40-031	15	31	37	28
CDU40-037	18.5	37	44	35
CDU40-046	22	46	55	42

8.3 Environmental conditions

Tabel 30 Environmental conditions

Normal operation	
Temperature:	-20°C (without condensation) to 40°C
Atmospheric pressure:	86 - 106 kPa
Relative humidity, non condensing:	0 - 90%
Storage	
Temperature:	-20 - +60 °C
Atmospheric pressure:	86 - 106 kPa
Relative humidity, non condensing:	0 - 90%

8.4 Fuses, cable cross-sections and glands

Use mains fuses of the type gL/gG conforming to IEC269 or installation cut-outs with similar characteristics.

NOTE! Cable cross-section is dependent on the application and must be determined in accordance with local regulations.

9. SETUP MENU LIST

- Functions with * can be changed during RUN
- Default setting with thick outline are depending on Power Board ID and/or Motor Data settings
- If no value as default is filled in, this means it is a View function and can be filled in later for diagnoses purposes.

		DEFAULT	CUSTOM
100	Start window		
110	*1st Line	Frequency	
120	*2nd Line	Current	
200	Main set-up		
210	Operation		
211	*V/Hz Curve	Linear	
212	Reference Control	Remote	
213	Run/Stop Control	Remote	
214	Rotation	R+L	
215	Level/Edge	Level	
216	* IxR Comp	0%	
217	Mains	400V	
220	Motor Data		
221	Motor power	$(P_{NOM})kW$	
222	Motor voltage	$U_{nom}VAC$	
223	Motor Frequency	50Hz	
224	Motor Current	$(I_{NOM})A$	
225	Motor Speed	$(n_{MOT}) rpm$	
226	Motor Cosphi	Depends on P_{non}	
229	Poles	-	
22A	Lim max freq.	50 Hz	
230	Utility		
231	Language	English	
232	*Lock Code?	0	
233	Copy set	A>B	
234	*Select Set No.	A	
235	Load Default	A	
236	*Copy all settings to CP	CP MEM1	
237	Load all parameter sets from CP	CP MEM1	
238	Load active parameter set from CP	CP MEM1	
239	Load all settings from CP	CP MEM1	
240	Autoreset		
241	Numbers of Trips	0	
242	Overtemp	Off	
243	Overcurrent	Off	
244	Overvolt D	Off	
245	Overvolt G	Off	
246	Overvolt L	Off	
247	Motor Temp	Off	
248	Ext. Trip	Off	
249	Motor Lost	Off	
24A	Alarm	Off	
24B	Locked Rotor	Off	
24C	Power Fault	Off	

		DEFAULT	CUSTOM
24D	Undervoltage	Off	
24E	Comm Error	Off	
250	Option: Serial Comm.		
251	Baudrate	9600	
252	Address	1	
253	Interrupt	Trip	
260	PTC		
261	*PTC Function	On	
270	Macros		
271	*Select macro	Loc/Rem Ana	
280	Pump/Fan Control		
300	Parameter Sets		
310	Run/Stop		
311	*Acc. time	2.00s	
312	*Acc. MotPot	16.00s	
313	*Acc>Min Freq	2.00s	
314	*Acc. ramp type	Linear	
315	*Dec time	2.00s	
316	*Dec MotPot	16.00s	
317	*Dec<Min Freq	2.00s	
318	*Dec Ramp Type	Linear	
319	*Start Mode	Fast	
31A	*Stop Mode	Decel	
31B	*Spinstart	Off	
320	Frequencies		
321	*Min Frequency	0Hz	
322	*Max Frequency	$f_{MOT}Hz$	
323	*Min Freq Mode	Scale	
324	Frequency Direct	R	
325	*Motor Pot.	Non vola	
326	*Preset Freq 1	10Hz	
327	*Preset Freq 2	20Hz	
328	*Preset Freq 3	30Hz	
329	*Preset Freq 4	35Hz	
32A	*Preset Freq 5	40Hz	
32B	*Preset Freq 6	45Hz	
32C	*Preset Freq 7	50Hz	
32D	*Skip Freq 1 Low	0Hz	
32E	*Skip Freq 1 High	0Hz	
32F	*Skip Freq 2 Low	0Hz	
32G	*Skip Freq 2 High	0Hz	
32H	*Jog Frequency	2Hz	
330	Torques		
331	*Torque limit	Off	
332	*Maximum Torque	120%	
340	Controllers		
341	*Flux Optimization	Off	
342	*Sound Char	F	
343	*PID Control	Off	
344	*PID P Gain	1.0	
345	*PID i Time	1.00s	
346	*PID D Time	0.00s	

		DEFAULT	CUSTOM	
350	Limits/Protections			
	351	*Low Volt Override	Off	
	352	*Rotor locked	Off	
	353	*Motor lost	Off	
	354	*Motor I ² t Type	Trip	
	355	*Motor I ² t l	I _{MOT} (A)	
400	I/O			
	410	Analogue Inputs		
		411	AnIn1 Function Frequency	
			412	AnIn1 Setup 0-10V/ 0-20mA
			413	*AnIn1 Offset 0%
			414	*AnIn1 Gain 1.00
			415	AnIn2 Function Off
			416	AnIn2 Setup 0-10V/ 0-20mA
			417	*AnIn2 Offset 0%
			418	*AnIn2 Gain 1.00
	420	Digital Inputs		
		421	Digital Input 1 Run	
		422	Digital input 2 Off	
		423	Digital input 3 Off	
		424	Digital input 4 Reset	
		425	Digital Input 5 Off	
		426	Digital Input 6 Off	
		427	Digital Input 7 Off	
		428	Digital Input 8 Off	
	430	Analogue Outputs		
		431	*AnOut1 Function Frequency	
		432	*AnOut1 Setup 0-10V/0-20mA	
		433	*AnOut1 Offset 0%	
		434	*AnOut1 Gain 1.00	
		435	*AnOut2 Function Current	
		436	*AnOut2 Set-up 0-10V/0-20mA	
		437	*AnOut2 Offset 0%	
		438	*AnOut2 Gain 1.00	
	440	Digital Outputs		
		441	*DigOut1 Funct Run	
		442	*DigOut2 Funct No Trip	
	450	Relays		
		451	*Relay 1 Function Trip	
		452	*Relay 2 Function Ready	
500	Set/View reference value			
600	View operation			
	610	FrequencyHz	
	620	Load%Nm	
	630	Electrical powerkW	
	640	CurrentARMS	
	650	VoltageVAC	
	660	DC-VoltageV	
	670	Temperature°C	
	680	FI-Status	
	690	Digital Input status	
	6A0	Analogue Input status	1:.....2:.....	
	6B0	Run Time	h:.....m:.....	
		6B1	*Reset Run Time No	
	6C0	Mains Time	

		DEFAULT	CUSTOM
6D0	Energy	kWh
	6D1	*Reset Energy	No
6E0	Process Frequency		h:.....m:.....
	6E1	*Set Prc Unit	Off
	6E2	*Set Prc Scale	1.000
6F0	Warning		
700	View Trip Log		
	710	Trip 1	h:.....m:.....
	720	Trip 2	h:.....m:.....
	730	Trip 3	h:.....m:.....
	740	Trip 4	h:.....m:.....
	750	Trip 5	h:.....m:.....
	760	Trip 6	h:.....m:.....
	770	Trip 7	h:.....m:.....
	780	Trip 8	h:.....m:.....
	790	Trip 9	h:.....m:.....
	7A0	Trip 10	h:.....m:.....
	7B0	*Reset Trip	No
800	Monitor		
	810	Alarm Function	
		811	*Alarm Select Off
		812	*Alarm Trip Off
		813	*Ramp Alarm Off
		814	*Start Delay 2s
		815	*Response Delay 0.1s
		816	*Auto Set No
		817	*Max Alarm 120%
		818	*Max Pre-Alarm 110%
		819	*Min Alarm 0%
		81A	*Min Pre-Alarm 90%
	820	Comparators	
		821	*CA 1 Value Frequency
		822	*CA 1 Constant 10Hz
		823	*CA 2 Value Load
		824	*CA 2 Constant 20%
		825	*CD 1 Run
		826	*CD 2 DigIn 1
	830	Logic Y	
		831	*Y Comp 1 CA1
		832	*Y Operator 1 &
		833	*Y Comp 2 IA2
		834	*Y Operator 2 &
		835	*Y Comp 3 CD1
	840	Logic Z	
		841	*Z Comp 1 CA1
		842	*Z Operator 1 &
		843	*Z Comp 2 IA2
		844	*Z Operator 2 &
		845	*Z Comp 3 CD1
900	View system data		
	910	FI Type
	920	Software

10. PARAMETER SET LIST

Table 31 Parameter Set List

		Default	A	B	C	D
300	Parameter Sets					
	310	Run/Stop				
	311	*Acc. time	2.00s			
	312	*Acc. MotPot	16.00s			
	313	*Acc>Min Freq	2.00s			
	314	*Acc. ramp type	Linear			
	315	*Dec time	2.00s			
	316	*Dec MotPot	16.00s			
	317	*Dec<Min Freq	2.00s			
	318	*Dec Ramp Type	Linear			
	319	*Start Mode	Fast			
	31A	*Stop Mode	Decel			
	31B	*Spinstart	Off			
	320	Frequency				
	321	*Min Frequency	0Hz			
	322	*Max Frequency	$f_{MOT}Hz$			
	323	*Min Freq Mode	Scale			
	324	Frequency Direct	R			
	325	*Motor Pot.	Non vola			
	326	*Preset Freq 1	10Hz			
	327	*Preset Freq 2	20Hz			
	328	*Preset Freq 3	30Hz			
	329	*Preset Freq 4	35Hz			
	32A	*Preset Freq 5	40Hz			
	32B	*Preset Freq 6	45Hz			
	32C	*Preset Freq 7	50Hz			
	32D	*Skip Freq 1 Low	0Hz			
	32E	*Skip Freq 1 High	0Hz			
	32F	*Skip Freq 2 Low	0Hz			
	32G	*Skip Freq 2 High	0Hz			
	32H	*Jog Frequency	2Hz			
	330	Torques				
	331	*Torque Limit	Off			
	332	*Maximum Torque	120%			
	340	Controllers				
	341	*Flux Optimization	Off			
	342	*Sound Char	F			
	343	*PID Control	Off			
	344	*PID P Gain	1.0			
	345	*PID I Time	1.00s			
	346	*PID i Time	1.00s			
	347	*PID D Time	0.00s			
	348	*Flux Optimization	Off			
	350	Limits/Protections				
	351	*Low Volt Override	Off			
	352	*Rotor locked	Off			
	353	*Motor lost	Off			
	354	*Motor I^2t Type	Trip			
	355	*Motor I^2t I	$I_{MOT}(A)$			

11. INDEX

Symbols

★	22, 28
+10VDC Supply voltage	16
+24VDC supply voltage	16

Numerics

0-10V	18
0-20mA	18
-10VDC supply voltage	16
4-20mA	47

A

Acceleration	38
Acceleration ramp	38
Acceleration time	38
Ramp type	38
Address	35
Alarm functions	58, 61
Monitor function	58
Alarm trip	59
Analogue	55
Analogue comparators	62
Analogue input	47
Analogue input status	55
AnIn1	47
AnIn2	48
Gain	47
Input configuration	47
Offset	47
Analogue Output	16, 18, 51, 52
AnOut 1	51
AnOut 2	52
Gain	52
Offset	51
Output configuration	51
AND operator	63
AnIn	48
AnIn1	47
Autoreset	3, 25, 34, 67

B

Baudrate	35
Brake functions	
Frequency	47

C

cable cross-section	72
CE-marking	11
Clockwise	31
Clockwise rotary field	49
Comparators	62
Connections	
Control signal connections	16, 17
Installation and Connection	16
connections	16
Control Panel	20
Input configuration	47
Control Panel memory	27

Copy all settings to Control Panel	33
Frequency	47
Load all settings from Control Panel	34
Control signal connections	16
Control signals	16, 17
Edge-controlled	25, 31
Level-controlled	24, 31
Counter-clockwise	31
Counter-clockwise rotary field	49
Current	22
Current control (0-20mA)	17

D

Deceleration	39
Deceleration time	39
Ramp type	39
Declaration of Conformity	11
Default	33
Definitions	19
DIAGNOSES	66
Digital comparators	62
Digital inputs	
DigIn 1	49
DigIn 2	50
DigIn 3	50
DigIn 4	50
Dismantling and scrapping	11
Display	20
Double-ended connection	17
Drive mode	
Frequency	47

E

Edge control	25, 31
Electrical specification	71, 72
Electrical specifications related to type	72
EMC	

Current control (0-20mA)	17
Double-ended connection	17
EMC-directives	17
Single-ended connection	17
Twisted cables	18
Emergency stop	18
EN50178	11
EN60204-1	11
EN61800-3	11
Enable	21, 24, 49
Environmental conditions	72
EXOR operator	63
Expression	63
External trip	69

F

Factory settings	33
Fault Indication, Diagnoses and Maintenance	66

Fieldbus	70
Flux optimization	43
Frequencies	40
Frequency	47, 56
Frequency Direction	41
Frequency priority	43
Jog Frequency	42
Maximum Frequency	40
Min Freq	40
Minimum Frequency	40
Preset Frequency	41
Process Unit	57
Scale	57
Skip Frequency	42
Frequency Direction	41
Frequency priority	43
Fuses, cable cross-sections and glands	72

G

General electrical specifications	71
Glands	72

H

Handheld Control Panel	70
HCP	70

I

I/O Board	70
I2t protection	45
I2t trip	45
Motor I2t Current	46
Motor I2t Type	45
IEC269	72
Installation and Connection	16
Instant Trip	66
Internal trip	69
Interrupt	35
IT Mains supply	3
IxR Compensation	31

J

Jog Frequency	42
Jumpers	18

K

Keys	21
- Key	21
+ Key	21
Control keys	21
ENTER key	21
ESCAPE key	21
Function keys	11, 21
NEXT key	21
PREVIOUS key	21
RUN L	21
RUN R	21
STOP/RESET	21

Toggle Key	21	Overvoltage D(acceleration)	68	Setup Menu List	73
L		Overvoltage L(ine)	68	Submenu 1	22
LCD display	20	P		Submenu 2	22
LED	20	Parameter sets	26, 38	Signal ground	16
Level control	24, 31	Load default values	33	Single-ended connection	17
Limited max frequency	32	Load parameter sets from Control Panel	33	Software	65
Limits	66	Load the active PARAMETER SET from Control Panel	34	Sound characteristic	43
Linear V/Hz curve	31	Parameter Set Selection	26	Speed	56
Load default	33	Select a Parameter set	33	Spinstart	40
Load monitor	58	PID Controller	44	Square V/Hz curve	31
Lock Code	32	Closed loop PID control	44	Standards	11
Logic Output Y	63	Feedback signal	44	Start Window	20
Low voltage	68	PID D Time	44	Status indications	20
Low Voltage Directive	11	PID I Time	44	Stop categories	18
M		PID P Gain	44	Stop command	49
Machine Directive	11	POWER LED	21	Switching frequency	43
Main set-up	29	Power trip	68	T	
Maintenance	69	Pre-alarm	60	TECHNICAL DATA	71
Manufacturer's certificate	11	Priority	43	Torque	28, 43
Max Alarm	69	Process Unit	56	TRIP	12, 14, 21
Max Frequency	38, 40	Profibus	70	Trip causes and remedy	67
Memory	27	Programming	22	Trips, warnings and limits	66
Min Alarm	69	PTC input	35	Twisted cables	18
Min Frequency	40	Q		Type	65
Minimum Frequency	39, 40	Quick Setup Card	10	Type number	10
Monitor function	58	R		U	
Alarm Select	58	Reference		Underload	58
Auto set	59	Frequency	44	Underload alarm	58
Delay time	59	Motor potentiometer	49	Unlock Code	32
Max Alarm	58	Reference control	29	V	
Max Pre-alarm	60	Reference signal	54	V	29
Min Alarm	60	Set reference value	54	V/Hz curve	29, 31
Min Pre-alarm	60	Set/View reference value	54	View reference value	54
Overload	58	Torque	45	View system data	65
Ramp Enable	59	View reference value	54	W	
Response delay	59	Reference control	29	Warning	57, 66
Start delay	59	Reference signal	29	Window Index	
Underload	60	Relay output	53	(100)	28
Motor cos phi (power factor)	32	Relay 1	53	(110)	28
Motor frequency	32	Relay 2	53	(120)	28
Motor I2t Current	68	Reset command	49	(200)	29
Motor lost	69	Resolution	28	(210)	29
Motor Potentiometer	41, 49	Rotation	31	(211)	29
Motor potentiometer	49	Rotor locked	69	(212)	29
Motor temperature	69	RUN	12, 14, 21	(213)	30
Motors	9	Run command	21, 24, 49	(214)	31
MotPot	39	Run Left command	49	(215)	31
N		Run Right command	49	(217)	31
Nominal motor frequency	40	Running motor	40	(220)	32
O		S		(221)	32
Operation	29	Scale	56	(222)	32
Options		Select macro	35	(223)	32
Serial communication, fieldbus	70	Setup menu	22	(224)	32
OR operator	63	Main Menu	22	(225)	32
Overcurrent	68	Menu structure	22	(226)	32
Overload	58	T		(229)	32
Overload alarm	58	TECHNICAL DATA	71	(22A)	32
Overtemperature	69	Torque	28, 43	(230)	32
		TRIP	12, 14, 21		
		Trip causes and remedy	67		
		Trips, warnings and limits	66		
		Twisted cables	18		
		Type	65		
		Type number	10		
		U			
		Underload	58		
		Underload alarm	58		
		Unlock Code	32		
		V			
		V	29		
		V/Hz curve	29, 31		
		View reference value	54		
		View system data	65		
		W			
		Warning	57, 66		
		Window Index			
		(100)	28		
		(110)	28		
		(120)	28		
		(200)	29		
		(210)	29		
		(211)	29		
		(212)	29		
		(213)	30		
		(214)	31		
		(215)	31		
		(217)	31		
		(220)	32		
		(221)	32		
		(222)	32		
		(223)	32		
		(224)	32		
		(225)	32		
		(226)	32		
		(229)	32		
		(22A)	32		
		(230)	32		

(231)	32	(330)	43	(6C0)	56
(232)	32	(331)	43	(6D0)	56
(233)	33	(332)	43	(6D1)	56
(234)	33	(340)	43	(6E0)	56
(235)	33	(341)	43	(6E1)	56
(236)	33	(342)	43	(6E2)	57
(237)	33	(343)	44	(6FO)	57
(238)	34	(344)	44	(700)	58
(239)	34	(345)	44	(710)	58
(240)	34	(346)	44	(730)	58
(241)	34	(350)	44	(730-790)	58, 64
(242)	34	(351)	44	(7A0)	58
(243)	34	(352)	45	(7B0)	58
(244)	34	(353)	45	(800)	58
(245)	34	(354)	45	(810)	58
(246)	34	(355)	46	(811)	58
(247)	34	(400)	47	(812)	59
(248)	34	(410)	47	(813)	59
(249)	34	(411)	47	(814)	59
(24A)	34	(412)	47	(815)	59
(24B)	34	(413)	48	(816)	59
(24C)	34	(414)	48	(817)	59
(24D)	34	(415)	48	(818)	60
(24E)	34	(416)	48	(819)	60
(250)	35	(417)	49	(81A)	60
(251)	35	(420)	49	(820)	62
(252)	35	(421)	49	(821)	62
(253)	35	(422)	50	(822)	62
(260)	35	(423)	50	(823)	62
(261)	35	(424)	50	(824)	63
(270)	35	(425)	50	(825)	63
(271)	35	(426)	50	(826)	63
(300)	38	(427)	51	(827)	63
(310)	38	(428)	51	(830)	63
(311)	38	(430)	51	(831)	64
(312)	38	(431)	51	(832)	64
(313)	38	(432)	51	(833)	64
(314)	38	(433)	51	(834)	64
(315)	39	(434)	52	(835)	64
(316)	39	(435)	52	(840)	64
(317)	39	(436)	52	(841)	64
(318)	39	(437)	52	(842)	65
(319)	39	(438)	52	(843)	65
(31A)	39	(440)	52	(844)	65
(31B)	40	(441)	52	(900)	65
(320)	40	(442)	53	(910)	65
(321)	40	(450)	53	(920)	65
(322)	40	(451)	53		
(323)	40	(452)	53		
(324)	41	(500)	54		
(325)	41	(600)	54		
(326)	41	(610)	54		
(327)	41	(620)	54		
(328)	41	(630)	54		
(329)	41	(640)	54		
(32A)	41	(650)	54		
(32B)	41	(660)	54		
(32C)	41	(670)	54		
(32D)	42	(680)	55		
(32E)	42	(690)	55		
(32F)	42	(6A0)	55		
(32G)	42	(6B0)	55		
(32H)	42	(6B1)	56		



Emotron AB, Mörsaregatan 12, SE-250 24 Helsingborg, Sweden
Tel: +46 42 16 99 00, Fax: +46 42 16 99 49
E-mail: info@emotron.se
Internet: www.emotron.com